



mellerware®

P E R S O N A L
Fashion 1800 Hair Dryer



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
1800W

CE
2 YEAR
GUARANTEE


Model:
20100

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee





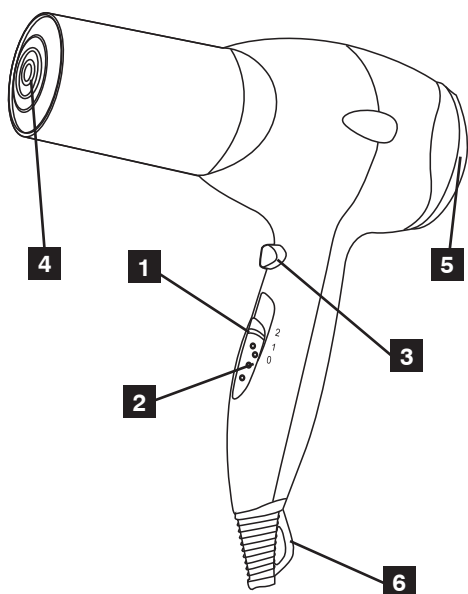

KEY AND CHARACTERISTICS

- 1 SWITCH (B)
- 2 SWITCH (A)
- 3 COOL SHOT
- 4 CONCENTRATOR
- 5 BACK COVER
- 6 HANGING LOOP

SWITCH (A) SWITCH (B)

0 1 --I

1 2 --II

2 3 --III

A0 =OFF

SWITCH (C) (COOL SHOT)

A1+B+C =GENTLE AIR

A2+B+C =STRONG AIR

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, the basic safety precautions should be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

1. Always unplug this appliance immediately after use.
2. Do not use while bathing.
3. Do not place or store this appliance where it can fall or be pulled into water.
4. Do not place or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

CLEANING YOUR HAIR DRYER

1. Always disconnect your hair dryer before cleaning.
2. Do not put the appliance into water.
3. Clean the dust and hair by using a brush.
4. Clean the appliance with a slightly damp cloth and dry it up with a dry cloth.

NOTICE:

1. Do not switch on before checking that voltage on the specifications plates is the same as the mains in your home.
2. Switch the hair dryer off when it is not in use.
3. If the supply cord or any other part is damaged, contact the supplier to direct you to the nearest authorized service center. Do not carry out repairs yourself, as this will void the guarantee covered by the supplier.
4. Never submerge or wet the dryer.

WARNING:

When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.

INSTRUCTIONS FOR USE

1. Make sure that your hands are completely dried before plugging in.
2. Plug in and set switch (A) to the required position 1 setting: gentle air flow, position 2 setting: strong air flow.
3. Once the curl is styled, switch to the cool phase for 15-20 seconds to give more body to your style and make it longer-lasting.

USING THE CONCENTRATOR

1. The adjustable air concentrator allows you to direct air flow onto a particular point.
2. These attachments are recommended for drying or styling local areas particularly when using a brush or rollers.

COOL PHASE

1. If you style your hair with a brush, start with hot air, rolling the lock and heating the curl.
2. For cool air, hold the cool shot button (C) down. Styling is more effective with the air concentrator.
3. The cool shot setting (C) reduces the temperature considerably and allows the hair to cool rapidly.

TECHNICAL DATA:

Type: 20100

Power: 230V, 50Hz

Capacity: 1800W



creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>