



mellerware®

P E R S O N A L
M a x i t r a v e l H a i r D r y e r



complies with
IEC60355

m
1200W


CE
2 YEAR
GUARANTEE

Model:
20150

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee



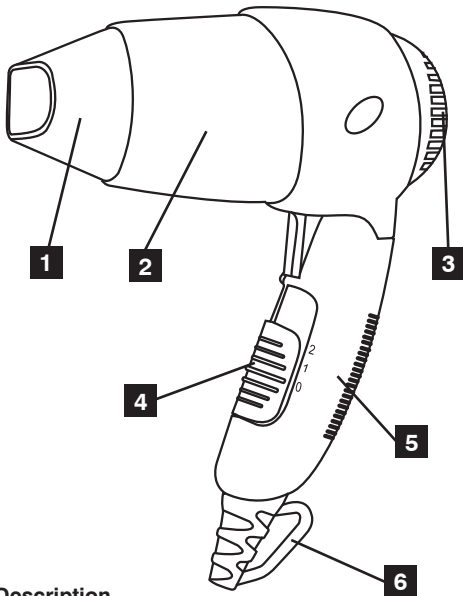

Description

1. Concentrator
2. Housing
3. Air inlet
4. Speed control switch
5. Foldable handle with rubber coating
6. Cord swivel protection & Hanging loop

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, the basic safety precautions should be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

1. Always unplug this appliance immediately after use.
2. Do not use while bathing.
3. Do not place or store this appliance where it can fall or be pulled into water.
4. Do not place or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING: To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children.
3. Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has damaged or dropped into water. Contact the supplier to return the appliance to an authorised service center nearest to you for repairing.
5. Keep the cord away from heating surfaces.
6. Never drop or insert any objects into any opening and hose.
7. Never block the air inlet of the appliance or place it on a soft surface, such as a bed or couch, where the air inlet may be blocked. Keep the air inlet free of lint, hair etc.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered
9. Do not direct hot air toward eyes or other heat sensitive areas.
10. Attachments may be hot during use, allowing them to cool before handling.

HOW TO USE YOUR HAIR DRYER

1. Always ensure the switch is set to the OFF position before plugging the unit into the power outlet.
2. Use the high setting for drying hair, and use low setting for styling.
3. Should the hair dryer stop working for any reason, turn it off at once and let it cool down.
4. Adjust the desired blowing strength:

Position 0: OFF

Position 1: Half power, medium temperature for gentle drying and styling

Position 2: Full power, high temperature for quick drying

CLEANING AND CARE

IMPORTANT:

1. Always ensure that hair dryer is disconnected from the mains supply before cleaning.
2. Use a damp cloth for cleaning and wipe dry. This will help preserve the original finish of your hair dryer.
3. Abrasive cleaners should not be used.

WARNING:

1. Never immerse the hair dryer into water and always ensure that plug is kept dry.
2. Frequently clean out any hair or fluff that becomes stuck in the inlet filter. To clean the filter, vacuum or use a dry brush, never immerse the filter into water.
3. Failure to keep filter clean may result in overheating.

TECHNICAL SPECIFICATION

120V/230V-50Hz 1200W



creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>