



mellerware®

TRENDS FOR LIFE

Marco Aldany

Attrazione Pro 2200 Ionic



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS



CE
2 YEAR
GUARANTEE

Model:
MA20135


PLEASE READ ALL INSTRUCTIONS BEFORE USE





Dear customer,

Many thanks for purchasing a MELLERWARE product. Thanks to its technology, design and operation and the fact that it goes through strict quality controls - we feel sure you will be entirely satisfied.

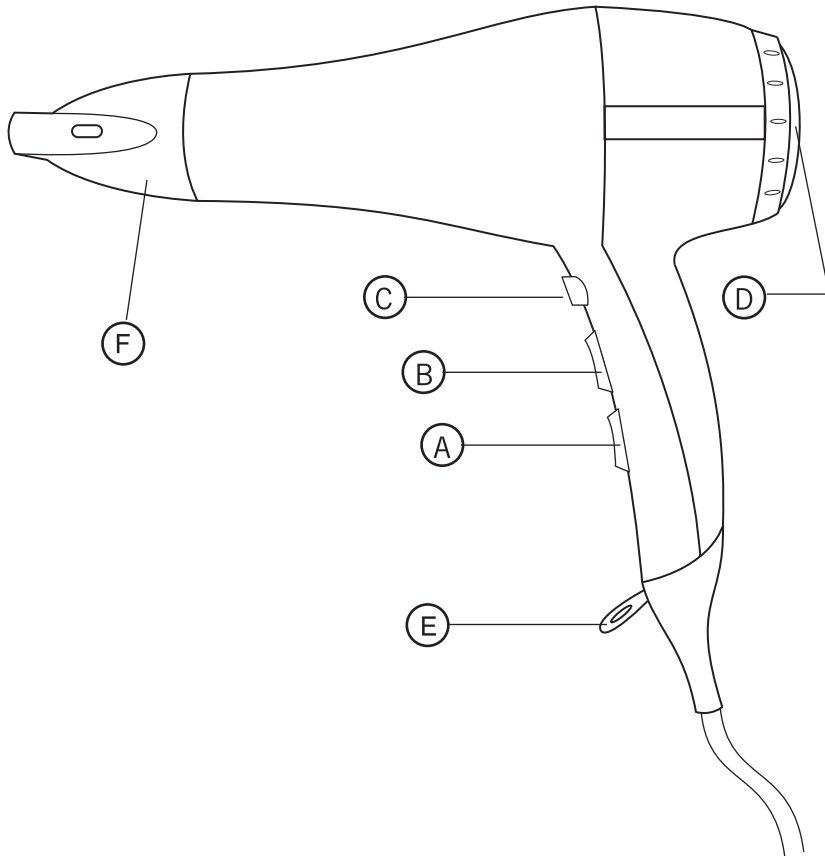

Description

- A Speed selector
- B Temperature selector
- C Cold shot button
- D Removable filter
- E Hanging ring
- F Air nozzle





Safety advice and cautions

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions may result in an accident.

Use or working environment:

-CAUTION: In order to prevent overheating, do not cover the appliance.

-Ensure that neither the air access nor exit become either totally or partially covered by drapery, clothing, etc., as this increases the risk of fire.

Electric safety:

-Do not use the appliance if the cable or plug is damaged.

-Ensure that the voltage indicated on the nameplate matches the mains voltage before plugging in the appliance.

-The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.

-If any of the appliance casings breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.

-Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.

-CAUTION: Do not use the appliance near water.

-Do not use the appliance near bathtubs, showers or swimming pools.

-Do not use the appliance with damp hands or feet, or when barefooted.

-Do not force the electrical wire. Never use the electrical wire to lift up, carry or unplug the appliance.

-Do not wrap the cable around the appliance.

-Do not allow the connection cable to come into contact with the appliance's hot surface.

-Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.

-Do not touch the plug with wet hands.

Personal safety:

-The temperature of the accessible surfaces may be high when the appliance is in use.

Use and care:

-Fully unroll the appliance's power cable before each use.

-Do not use the appliance if its accessories are not properly fitted.

-Do not use the appliance if the on/off switch does not work.

-If you use the appliance in a bathroom or similar

place, unplug the appliance from the mains when it is not in use, even if it is only for a short while, as proximity to water involves a risk, even if the appliance is disconnected.

-Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.

-The appliance is for household use only, not professional or industrial use.

-This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

-This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.

-This appliance should be stored out of reach of children and/or the disabled.

-Do not put the appliance away if it is still hot.

-Do not use the appliance with pets or animals.

-Make sure that dust, dirt or other foreign objects do not block the fan grill on the appliance.

-Do not use the appliance to dry textiles of any kind.

-Any misuse renders the guarantee and the manufacturer's liability null and void.

Instructions for use:

Use:

-Unroll the cable completely before plugging it in.

-Connect the appliance to the mains.

-Guide the diffuser of the appliance to direct the flow of air in the desired direction.

-Turn the appliance on, by using the speed selection buttons.

-Move the appliance in circles to blow hot air evenly over the hair.

-To obtain a good result when using the appliance, use a low power setting and low speed.

Cold shot button:

-This feature provides a flow of cool air to help shape the hair.

-Press the cool air blow button to use this function.

Ioniser:

When the hairdryer is turned on a constant flow of ions eliminates static energy and reduces the possibility of the hair going wiry.

Once you have finished using the appliance:

-Stop the appliance, selecting position 0 on the speed selector.

-Unplug the appliance from the mains.





Accessories:

Air concentrator accessory:

- This accessory is used to concentrate the air flow into one specific area.
- Attach the unit to the product by pressing until you hear a click.

Safety thermal protector:

- The appliance has a safety device, which protects the appliance from overheating.
- When the appliance switches itself on and off repeatedly, for reasons other than the thermostat control, check to ensure that there are no obstacles that impede correct air entry or expulsion.

Cleaning

- Disconnect the appliance from the mains and let it cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not submerge the appliance in water or any other liquid, or place it under a running tap.
- It's very important to always keep the removable filter (D) and the insider grille clean.
- Frequently remove any hair or fluff that gets stuck in them.
- To clean the inside grille, remove the removable filter (D) turning it softly in an anti-clockwise direction.
- Once clean, place the grille in its original position by fitting the three flaps to the four notches located on both sides of the interior grille and turning it softly in a clockwise direction.
- If the appliance is not in good condition of cleanliness, its surface may degrade and inexorably affect the duration of the appliance's useful life and could be become unsafe to use.

Anomalies and repair:

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.
- If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

Ecology and recyclability of the product:

- The materials of which the packaging of this appliance consists are included in a collection, clas-

sification and recycling system. Should you wish to dispose of them, use the appropriate public containers for each type of material.

-The product does not contain concentrations of substances that could be considered harmful to the environment.

-Should you wish to dispose of the product once its working life has ended, take it to an authorised waste agent for the selective collection of waste and electrical and electronic equipment (WEEE).

This appliance complies with Directive 2006/95/EC on Low Voltage and Directive 2004/108/EC on Electromagnetic Compatibility.







creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>