



mellerware®

Tweety

H A I R D R Y E R



complies with
**INTERNATIONAL
IEC60335**
SAFETY SPECIFICATIONS

m
2000W

CE
2 YEAR
GUARANTEE

Model:
WB20110


PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee



Dear customer,

Many thanks for purchasing a MELLERWARE product. Thanks to its technology, design and operation and the fact that it goes through strict quality controls - we feel sure you will be entirely satisfied.

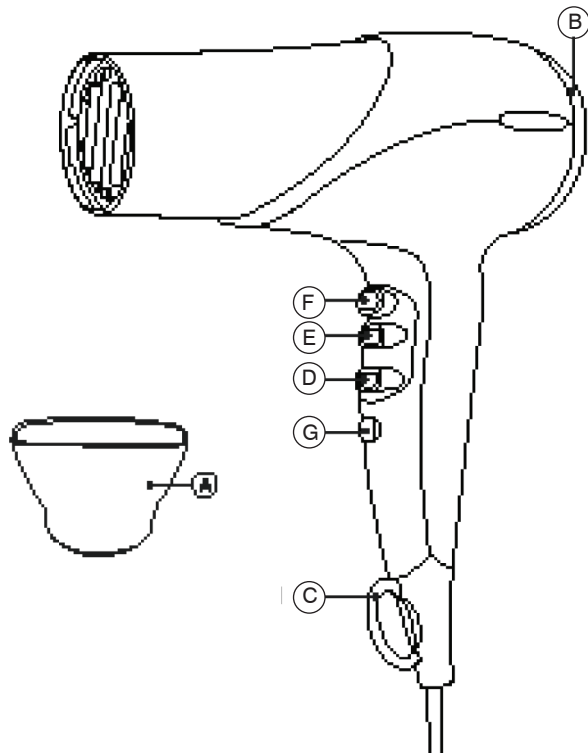

Description

- A Air concentrator
- B Filter
- C Hanging loop
- D Speed selector/ on-off switch
- E Temperature selector
- F Blast of cold air button
- G Turbo function



Safety advice and cautions

-- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.

- **CAUTION:** To prevent overheating do not cover the appliance.

- Ensure that neither the air access nor exit become either totally or partially covered by drapery, clothing, etc., as this increases the risk of fire.

Electrical safety:

- Do not use the appliance if the cable or plug is damaged.

- Ensure that the voltage indicated on the nameplate matches the mains voltage before plugging in the appliance.

- Connect the appliance to a socket that can supply a minimum of 10 amps.

- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.

- Do not use or store the appliance outdoors.

- Do not leave the appliance out in the rain or exposed to moisture. If water gets into the appliance, this will increase the risk of electric shock.

- If any of the appliance's casing breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.

- Do not use the appliance with damp hands or feet, or when barefooted.

- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.

- Do not use the appliance near bathtubs, showers or swimming pools.

- Do not force the electrical wire. Never use the electric wire to lift up, carry or unplug the appliance.

- Do not wrap the cable around the appliance.

- Do not touch the plug with wet hands.

- The temperature of the accessible surfaces may be high when the appliance is in use.

Personal safety:

- The temperature of the accessible surfaces may be high when the appliance is in use.

Use and care:

- Fully unroll the appliance's power cable before each use.

- Do not use the appliance if the parts or accessories are not properly fitted.

- Do not use the appliance if the on/off switch does not work.

- Do not force the appliance's work capacity.

- If you use the appliance in a bathroom or similar place, unplug the appliance from the mains when it is not in use, even if it is only for a short while, as proximity to water involves a risk, even if the appliance is disconnected.

- Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.

- Unplug the appliance from the mains before replacing any accessory.

- This appliance is not for professional or industrial use, it is intended for household use only.

- This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.

- This appliance should be stored out of reach of children and/or the disabled.

- Do not put the appliance away if it is still hot.

- Do not expose the appliance to extreme temperatures.

- Make sure that the fan grill on the appliance is not blocked by dust, dirt or other foreign objects.

- Do not use the appliance to dry pets or animals.

- Do not use the appliance to dry textiles of any kind.

- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Instructions for use

Before use:

- Make sure that all the product's packaging has been removed.

Use:

- Connect the appliance to the mains.

- Turn the speed selector and the temperature selector to the desired position, always ensuring that the appliance is switched off from the outlet.

- Slide the speed selector from the lower to upper position to increase the airflow from the hairdryer.

- Slide the temperature selector from the lower to the upper position to increase the temperature of the airflow.

• Air concentrator

- Add the concentrator to guide the flow of air to a determined part (ends, curls, etc.)

• Blast of cold air button

- Press the blast of cold air button to fix the hairstyle for longer lasting results.

• Turbo function

- Press the turbo function button to achieve in-



creased airflow and in this way obtain faster results.

Once you have finished using the appliance:

- Turn the appliance off using the on/off switch.
- Unplug the appliance from the mains.

Safety trip switch:

- The appliance has a safety trip switch that protects the appliance from overheating.
- When the appliance switches itself on and off repeatedly, for reasons other than the thermostat control, check to ensure that there are no obstacles that impede correct air entry or expulsion.
- If the appliance turns itself off and does not switch itself on again, disconnect it from the mains supply, and wait for approximately 5 minutes before reconnecting. If the machine does not start again seek authorised technical assistance.

Cleaning

- Unplug the appliance from the mains and let it cool before starting any cleaning.
- Clean the equipment with a damp cloth with a few drops of washingup liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.

Filter cleaning:

- To remove the filters:
- Open the lid containing the filter, press the lid and slide to the right.
- The filter motor can be found in the motor's turbine air entrance.
- Remove the filter from its anchoring
- To reassemble the filter, proceed with the above instructions, in reverse order.

Anomalies and repair

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.
- If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

Ecology and recyclability of the product

- The materials of which the packaging of this appliance consists are included in a collection, classification and recycling system. Should you wish to dispose of them, use the appropriate public containers for each type of material.

- The product does not contain concentrations of substances that could be considered harmful to the environment.

- Should you wish to dispose of the product once its working life has ended, take it to an authorised waste agent for the selective collection of waste from electric and electronic appliances.

This appliance complies with Directive 2006/95/EC on Low Voltage and Directive 2004/108/EC on Electromagnetic Compatibility.





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>