

mellerware®

makes life easier

MILAN  
stainless steel  
kettle



1.7 Litre capacity

Automatic switch  
off

360° Cordless  
base



complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

**m**  
1 8 5 0 -  
2 2 0 0 W

2 YEAR  
GUARANTEE

Model:  
22350A




Dear customer,

Many thanks for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

#### Description

1. Handle
2. Lid
3. On/Off Switch
4. Base
5. Power Indicator Light
6. Body
7. Spout

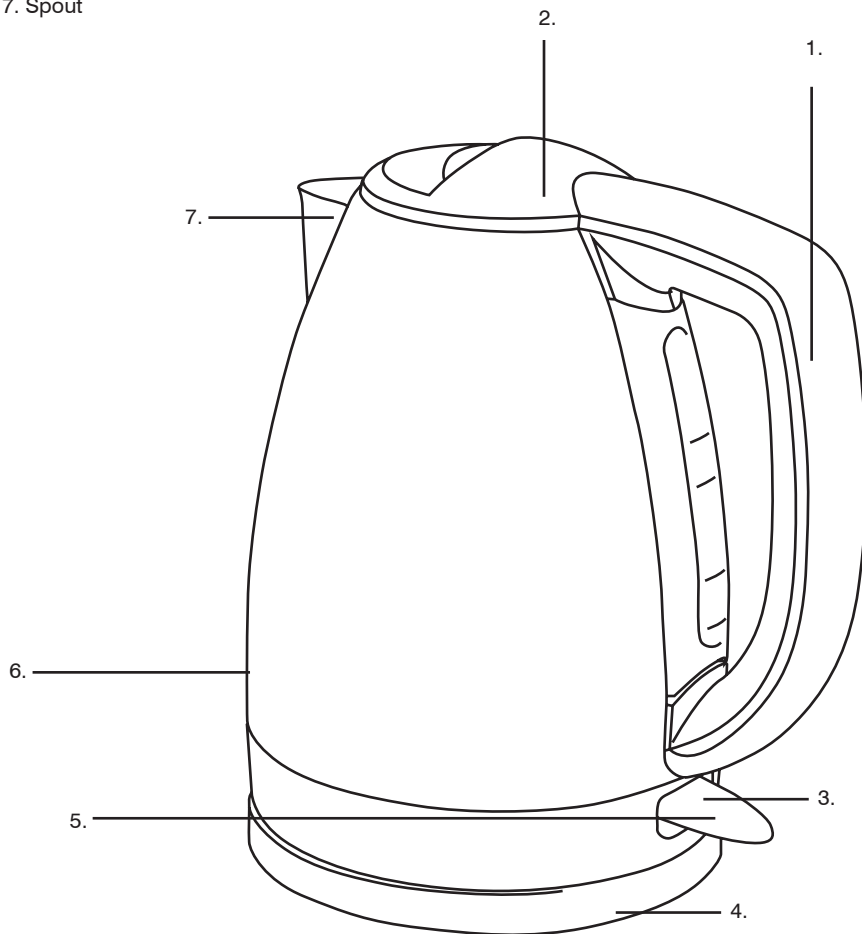



## IMPORTANT SAFETY INSTRUCTIONS:

Attention: Please read these instructions carefully before use in order to avoid damage due to incorrect use. Please pay particular attention to the safety guide. If you pass the device on to a third party, these operating instructions must also be handed over.

### SAFETY GUIDE:

- Incorrect operation and improper use can damage the appliance and cause injury.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Before plugging in the appliance, check that the voltage supply in your home matches the rating label on the appliance.
- Do not immerse the appliance or the plug in water or any other liquid. This could cause a fatal electric shock. If the appliance or plug should accidentally become wet, unplug the appliance immediately and have it checked by an electrician before using it again.
- Do not place any kind of object inside the kettle.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- Check the cable and the plug regularly for any possible damage. If the supply cord is damaged, it must be replaced by the an authorised service centre to avoid injury.
- Do not use the appliance if it is dropped or otherwise damaged or if the cable or plug are damaged. If the appliance is damaged, take it to your near authorised service centre.
- Never attempt to open the appliance or repair the appliance yourself. This could cause an electric shock.
- Do not allow the cable to hang over sharp edges and keep it away from hot objects and naked flames. Remove the plug from the wall socket by grasping the plug. Make sure that the cable does not hang so that it could inadvertently be pulled or cause someone to trip.
- If an extension cord is used it must be suited to the power consumption of the appliance, otherwise the

extension cord or plug may overheat.

- Stand the appliance on a firm, level and heatproof surface away from naked flames (e.g. gas oven) and out of the reach of children.
- This appliance is not suitable for commercial or outdoor use.
- Never leave the appliance unattended while it is in use.
- Children cannot recognise the dangers involved in the incorrect use of electrical appliances. Therefore never allow children to use household appliances without supervision.
- Always remove the plug from the wall socket when the appliance is not in use and each time before it is cleaned.
- As long as the appliance is connected to the wall socket, a small amount of current continues to flow to the appliance even when it's not in use.
- Never use the cable to carry the appliance.

### SPECIAL SAFETY INFORMATION:

Use the kettle only with the base supplied, and do not use the base for any other purposes.

- Do not overfill the kettle by filling past the "MAX" mark. If you do so, there is a danger that scalding water could boil over.
- Take care to close the lid properly before switching on, otherwise hot water may overflow.
- The kettle is for heating water only, and is not to be used for any other liquid.
- CAUTION! Danger of burns! The kettle becomes very hot during use. Hold it by the handle only.
- WARNING! Escaping steam! Do not remove the lid while the water is boiling.
- Allow the water to cool down in a safe place out of reach of children and disabled people.

### BEFORE FIRST USE

- Remove all packaging materials.
- Then boil clean cold water three times. (See OPERATION)
- Use fresh water each time.

### OPERATION

- Open the lid and fill the kettle with the required amount of water. Please observe the water level marks on the outside of the kettle. Do not fill below





the “MIN” mark and above “MAX” mark.

- Close the lid. Press the On/Off switch down so that the indicator light illuminates. (If the indicator light is on, that means the kettle is operating, don't press the switch again.)
- You can pour the water out without opening the lid. \*If you want to stop the water boiling or interrupt it briefly, remove the kettle from the base.
- Note: This appliance comes with a safety device, which automatically switches off the heating element if the appliance is inadvertently switched on with out water, or if it boils dry. If this happens let the appliance cool down completely before filling with water again.

## **CLEANING**

- Always observe safety instructions for cleaning.
- Always remove the plug from the wall socket before cleaning the base. Let the kettle cool down completely.
- Dry the kettle before plugging into the wall socket. Clean the outside of the kettle and the base with a soft damp cloth, do not use scouring materials.
- Descale the appliance regularly. Use a proprietary descaling agent, which can be obtained from specialist shops, and follow the instructions given.
- To store the kettle; wind the cord in the cord compartment on the underside of the base.

Product specifications:

Voltage: 220-240V

Wattage: 1850-2200W






## Trouble Shooting Guide

Problem	Reason	Action	Pre-caution
<b>Kettle is leaking water</b>	Could be condensation	This is normal if boiled a number of times in succession	This kettle is for household use only.
	Kettle is over filled	Pour out water to MAX level.	If overfilled water can eject from the kettle resulting in a hazard
	Switch is sticking	Ensure switch button is clean.	Keep appliance away from cooking splatter.
<b>Kettle does not work</b>	Household socket is off.	Switch on household socket	Ensure water covers the element before operating.
	Household socket is not working	Check the socket with another appliance	Appliance must be of similar wattage to prevent overloading.
	Kettle is not seated on base correctly.	Seat kettle on base correctly	The life of the kettle will be reduced if not seated on base correctly.
<b>Kettle trips mains power supply</b>	Overloaded circuit.	Unplug all appliances attached to the same circuit.	Note that there can be up to 5 household plug sockets on 1 circuit.
<b>Kettle takes too long to boil</b>	Element has lime scale deposits.	Descale element using a proprietary descaler or citric acid solution. If not successful then a new element may be required.	Kettles with scale will have a reduced lifespan. Clean the scale regularly.
<b>Kettle works intermittently</b>	Element has lime scale deposits.	Descale element using a proprietary descaler or citric acid solution. If not successful then a new element may be required.	Kettles with scale will have a reduced lifespan. Clean the scale regularly.
<b>Kettle is rusting on outside</b>	Steam deposit has oxidised and turned into an orange colour.	Wipe your kettle after each use to keep dry. Polish stainless steel occasionally.	Keeping an appliance clean at all times will extend the life of the product.
<b>Element is rusting. Rust spots on element.</b>	Water deposits on the element. Some areas have water that will result in orange or brown stains.	Some stains are stubborn and a descaler may not be effective. This should not affect function.	Use distilled water.
<b>Kettle does not switch off automatically</b>	Lid not positioned correctly or is off.	Place lid on the kettle securely.	Ejecting steam from the spout or lid can be a hazard




## creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>