

mellerware®

VISION GLASS KETTLE



complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

**m**  
1850-  
2200W

2 YEAR  
GUARANTEE


Model:  
22400

**PLEASE READ ALL INSTRUCTIONS BEFORE USE**

**2 year guarantee**



**Read this instruction manual thoroughly before use and store it for future reference.**

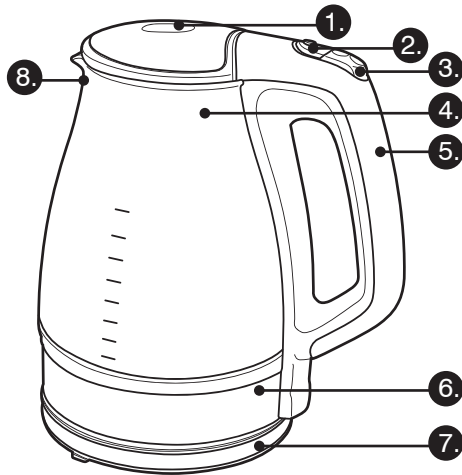

(Figure 1.)

#### **Description:**

1. Cover
2. Lid open switch
3. ON/OFF Switch
4. Body
5. Handle
6. Sub base
7. Cordless base
8. Filter

#### **Important safety instructions:**

1. This appliance is designed for domestic use and not for commercial applications. No responsibility is accepted for damage resulting from improper use or non-compliance with these instructions.
2. Please keep these instructions for future reference. If the appliance is

passed on to another person this instruction manual should accompany it.

3. Before inserting the plug into the wall socket, check that the mains supply voltage and current rating corresponds with the power supply details shown on the appliance's rating label which you will find under the base.
4. Never allow the heating base or the kettle to make contact with or be immersed in water. Should this happen, take the appliance to your nearest authorised service centre for repair.
5. Do not operate the appliance if:
  - The appliance or power cord shows any signs of damage,
  - The appliance has been dropped.
6. Always remove the plug from the wall socket:
  - After each use
  - In case of any malfunction
  - Before undertaking any cleaning task
7. When removing the plug from the wall socket, never pull on the power cord.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Do not attempt to remove any parts of the housing nor insert any metal objects into the interior of the appliance.
10. To prevent damage to the power cable, do not let it pass over sharp corners or edges.





11. Do not expose the appliance to rain or moisture and do not operate the appliance outdoors or with wet hands.
12. Use only clean cold water.
13. The appliance operates at very high temperatures and there is a danger of scalding from escaping water or steam. Do not touch any part of the kettle except the handle (when the appliance is in use) and ensure that the lid has been closed properly. This appliance is designed for heating up of water only. Never put any other liquid into the kettle.
14. The appliance must be positioned so that the plug is accessible.
15. If the kettle is overfilled, boiling water may be ejected.
16. **WARNING** – Do not open the lid while the water is boiling.
17. The kettle is only to be used with the base provided.
18. **CAUTION** – Ensure that the kettle is switched off before removing it from its base.
19. This appliance is intended to be used in households or other similar environments such as:
  - Staff kitchen areas in shops, offices and other working environments
  - By clients in hotels, motels and other residential type environments
  - Farm houses
  - Bed and breakfast type environments

#### Operating guidelines for first use:

1. Prior to initial use, clean the appliance by going through several boiling cycles, using clean water with each cycle and filling the kettle (4) to its upper marking. The water

will reach boiling point after approximately 5 minutes and will then switch off automatically.

#### Operation:

(Please refer to Figure 1)

1. Place the cordless base (7) on a firm and level surface.
2. Pour the desired amount of clean water into the kettle (4). Do not touch any part of the kettle except the handle while the appliance is in use. Ensure that the lid (1) is properly closed. The amount of water can be measured by the level mark on the outside of the kettle. Always pay attention to the minimum and maximum levels and ensure that the lid (1) is properly and firmly closed.
3. Position the kettle in such a way on the sub base (6) so that the underside of the kettle fits precisely into the contact on the base. Insert the plug into a wall socket.
4. Put the on/off switch (3) to the '1' position to start the boiling process. The indicator lamp will light up.
5. As soon as the water reaches boiling point, the on/off switch (3) will return automatically to the "0" position. The indicator lamp will go out. The kettle can also be switched off manually by putting the on/off switch to the "0" position.
6. The hot water may now be poured safely through the spout.
7. This kettle is equipped with a safety cut-out feature to protect the appliance from damage in case of inappropriate use. Should the appliance be accidentally switched on without water or if all the water has evaporated, the safety cut out will automati-





- ally switch off the heating element.
8. If point (7) occurs remove the plug from the wall socket immediately and refill the kettle after an adequate cooling down period, about 15 to 20 seconds.

#### **Warning:**

1. **DO NOT SUBMERSE IN WATER.**
2. Only use the base provided with this kettle.
3. If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- use a slightly damp, lint-free cloth.
4. It is advisable to remove lime deposits from the kettle at regular intervals.

#### **Specifications:**

Supply voltage: 220-240V~ 50Hz  
Power consumption: 1850-2200W  
Volume: 1.7L

#### **Descaling:**


1. Should the appliance switch off before reaching boiling point this is a sign that descaling is necessary.
2. A regular descaling agent may be used. Ensure that the instructions for use are adhered to. In order to avoid spillage do not fill the kettle up to the max mark as the descaling agent may cause the water to foam.
3. To clean the kettle thoroughly of any decalcification residues, boil the kettle several times using clean water with each cycle. Rinse the kettle with clean water afterwards.


#### **Cleaning and care:**



1. Before cleaning the appliance, ensure that it is disconnected from the power supply and has cooled down completely.
2. Do not use abrasives or harsh cleaning solutions.
3. Do not immerse the base or the kettle in any liquid. To clean the exterior




## creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117       +27 21 931 4058

Service Centre Helpline: 086 111 5006

 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>