

mellerware®

EXECUTIVE
GRAND CAYMAN 20L STAINLESS STEEL URN



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
1950W

Model:
22550


PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee



Dear customer,

Many thanks for choosing to purchase a MELLERWARE brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

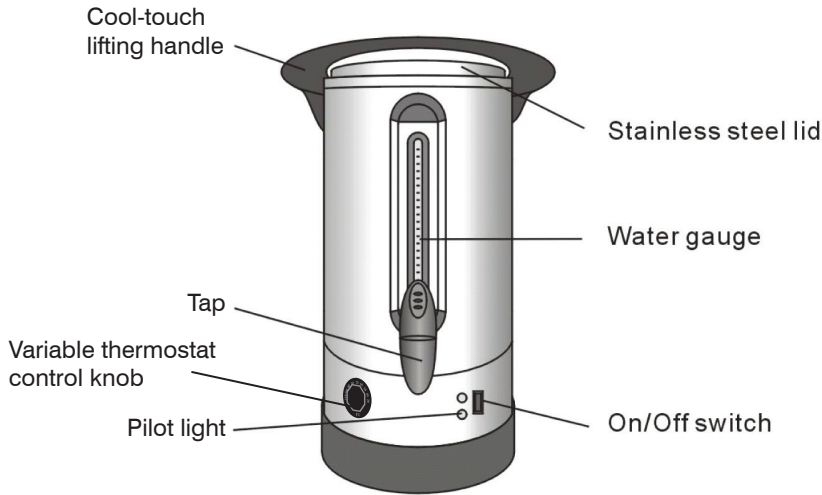

WATER BOILING TEMPERATURES AT ATMOSPHERIC CONDITIONS:

Atmospheric Pressure (kPa)	Boiling Temperature (water) (°C)
75	92
80	93
85	95
90	97
95	98
100	100
105	101
110	102

IMPORTANT SAFEGUARDS:

- It is essential that you read this instruction manual before use, in order to operate the appliance safely.
- Do not touch the stainless steel parts of this appliance as they become hot during use.
- Do not immerse the appliance, its power cord or plug, in water or any other liquid. Do not place the appliance under running water unless the appliance is being filled with water to be boiled.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent to avoid injury.
- Do not allow the plug or power cord to come into contact with sharp, rough or hot surfaces.
- Do not use the appliance outdoors.
- This appliance is for household use only. This appliance is not for industrial or professional use.
- Do not use this appliance for anything other than its intended use. Doing so will render the warranty and manufacturer's liability null and void.
- Switch off the appliance before removing the plug from the wall socket. Remove the plug from the wall socket when the appliance is not in use



and before cleaning.


- Allow the appliance to cool completely before undertaking any cleaning task.
- Do not open the lid while water is being boiled to avoid scalding by hot steam.
- If the appliance is filled beyond the "FULL" indication line, boiling water may be ejected out of the appliance.
- The appliance should be placed on a firm and flat surface and away from edges to avoid falling over or off the counter.
- Never attempt to move the appliance when it is full of hot (or cold) water. This appliance becomes heavy when filled with water.
- Do not boil or heat up any other liquid other than water in this appliance.
- Do not attempt to alter, repair or dismantle the appliance, it's power cord or plug. This is dangerous and could cause serious injury. If the appliance malfunctions, return the appliance to a technical service centre for repair.
- Do not use plug adaptors or extension cords with this appliance.
- Do not insert the appliance's plug into a socket with more than one outlet. This is a high power appliance and could cause the electricity supply to trip.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

INSTALLATION:

- Remove all the packaging materials and tape, as well as any protective plastic from the appliance, it's power cord and plug.
- Clean off any glue residue left over from the protective plastic or adhesive tape.
- Place the appliance on a flat level surface with the tap facing the user.
- Before connecting the appliance to the power supply, ensure that the "ON/OFF" switch is set to the "OFF" position.

HOW TO USE THE APPLIANCE:

- The appliance is constructed almost entirely of stainless steel and should give the user many years of trouble-free service as long as it is used in accordance with this instruction manual.
- Before using this appliance for the first time, rinse out the appliance with warm water.
- Ensure that the appliance is disconnected from the wall socket when filling and emptying the inner tank.
- Fill the inner tank with water, do not fill the tank above the "FULL" level indicator. Avoid under filling the appliance (less than 1L) as this will cause the "boil dry protection system" to operate and will reduce the life-span of the element. The "MIN" capacity is 1 litre.
- Ensure that the lid is on correctly and locked into place. To lock the lid, secure it to the top of the inner tank, then turn the lid clockwise, ensuring that the guides on the lid handle slot into the guides of the appliance handle. The lid will lock into place once it can no longer turn clockwise.

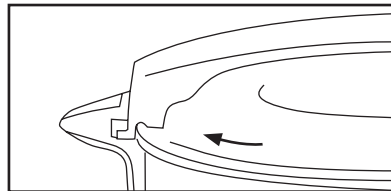

Slide lid into place.

- Connect the urn to the power supply by inserting the plug into the wall socket. Switch the appliance on and then turn the variable thermostat control knob to the desired temperature. The heating pilot light will illuminate and the unit will begin to boil the water to the selected temperature.
- Once the water has been heated to the selected temperature or has reached boiling point, the heating pilot light switches off and the keep warm pilot light illuminates. The urn will automatically switch over to the keep warm function.
- Ensure that the water level is checked regularly to prevent the appliance from "boiling dry".
- To turn the appliance off, turn the variable temperature control knob anti-clockwise, switch the ON/OFF switch to the "OFF" position and remove the plug from the wall socket.



BOIL DRY:

The appliance is fitted with a “boil dry protection system”, which will switch the appliance off if the water level is too low.

- When “boil dry” occurs, switch the appliance off and remove the plug from the wall socket and allow the appliance to cool down.
- Fill the urn with water to the desired level. (Minimum capacity is 1L).
- Do not fill the inner tank with water above the “FULL” level indicator.
- Insert the plug into the wall socket and switch the appliance on. The heating pilot light will illuminate and the water will begin to boil.


CLEANING AND MAINTENANCE:


Regular care and maintenance will ensure long and trouble free operation. In order to ensure proper cleaning and to avoid causing damage to the appliance the instructions below should be followed.


- Always keep the appliance clean.
- This appliance should be cleaned at the end of each day using warm hot soapy water, then rinse thoroughly with clean water. Ensure that the appliance is switched off and has cooled down before any cleaning task is undertaken.
- Using and a damp soft cloth wipe the inside of the urn so that no residue builds up. Any build-up of scale deposits can usually be removed by placing an appropriate solution of vinegar and water in the inner tank and allowing it to soak overnight without turning the appliance on. This should then be followed by the usual cleaning with warm soapy water followed by rinsing thoroughly with clean water.
- Wipe down the remainder of the appliance with a soft damp cloth, taking care to avoid water entering any part of the appliance.




creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>