

mellerware[®]

makes life easier

VAPOUR
steam
iron



Dry, steam
and spray
functions

Non-stick
soleplate

170ml Water
tank



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
1400W

2 YEAR
GUARANTEE

Model:
23140



IMPORTANT SAFEGUARDS

Please read the instruction manual before use and save it for future reference.

- Before first use check that the voltage indicated on the rating label corresponds to the main voltage in your home.
- This appliance is intended for house hold use only.
- Do not use the appliance outdoors.
- Do not immerse the appliance's power cord in water or any other liquids.
- Never pull the power cord to disconnect the plug from the wall socket, instead, grasp the plug and pull to remove it.
- Any damage to the power cord will void your guarantee.
- Do not allow the power cord to touch sharp edges and hot surfaces.
- Always unplug the appliance from the wall socket when filling the water tank with water.
- Do not operate the appliance if it has a damaged power cord or plug, or after the appliance malfunctions, or damaged in any manner. To avoid risk of electric shock, do not disassemble the appliance, take it to manufacturer for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the iron unattended while it is in use.

BEFORE THE FIRST USE

- Remove the protective cover from the soleplate and clean it with a soft cloth.
- Some parts of the steam iron have been slightly greased and as a result the iron may slightly smoke when switched on for the first time. After a short time this will cease.

HOW TO USE

- Always check whether a label with ironing instructions is attached to the clothing article

to be ironed. Follow these instructions in all cases.

- Turn the temperature control dial to set the appropriate temperature indicated in ironing instructions or in fabric label.

LABEL	TYPE OF TEXTILE
	Do not iron this article
•	Synthetics, Nylon, Acrylics, Polyester, Rayon
••	Wool, Silk
•••	Cotton, Linen

- Insert the plug into the wall socket. The indicator light will illuminate.
- When the indicator light switches off you may start ironing.
- If you set the temperature control to a lower setting after ironing at a high temperature, it is not recommended to start ironing before the pilot light switches on again.

WATER TANK FILLING

- Unplug the iron before filling the water tank.
- Hold the iron in a horizontal position.
- Slowly pour water through the water inlet.
- Do not fill past the "MAX" mark on the water tank.

NOTE: Your iron is designed to use tap water, however, if the water is very hard, it is advisable to use distilled water.

The water tank should be emptied after each use.

SPRAYING

As long as there is enough water in the water tank, you may use the spray button at any temperature setting during steam or dry ironing. Press the spray button several times to activate the pump while you are ironing.

STEAM IRONING

Set the temperature control dial to the "••" or "•••" position.

Set the variable steam control to the desired position.

CAUTION: Avoid coming into contact with ejected steam.



DRY IRONING

- The iron can be used on the dry setting with or without water in the water tank, it is best to avoid having the water tank full while dry ironing.
- Turn the variable steam control to the minimum position.
- Select the setting on the temperature control dial best suited for the fabric to be ironed.

CAUTION: If the iron has been used for a long period of time, it is hot and there is no water in it, do not refill it with water until the iron cools down.

BURST OF STEAM

- The burst of steam feature provides additional steam for removing stubborn wrinkles.
- Turn the temperature control to “••” or “•••” position.
- Turn the variable steam control to the maximum position
- Press the powerful steam button to release the burst of steam.

NOTE: To prevent water leakage from the soleplate, do not keep the powerful steam button in for more than 5 seconds.

After Ironing

- Set the temperature control dial to the minimum position.
- Remove the plug from the wall socket.

CARE AND CLEANING

- Before cleaning the iron ensure it is unplugged from the wall socket and that it has completely cooled down.
- Do not use any abrasive cleaners.

SELF-CLEANING

- Fill half of the water reservoir.
- Set the temperature control to its maximum position.
- Insert the plug into the wall socket.
- Allow the iron to heat up until the indicator light goes out.
- Unplug the steam iron.
- Holding the iron horizontally over the sink, change the steam control to the maximum position.
- Boiling water and steam will be ejected from the holes in soleplate with impurities washed out.
- Move the iron over an old piece of cloth. This ensures that the soleplate is dry before storing.

STORAGE

- Unplug the appliance from the wall socket, empty the water tank and the iron to cool down completely.
- To protect the soleplate, place the steam iron in an upright position.



creative housewares

🏠 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

✉ P.O. Box 6156 Parow East, 7501, South Africa

☎ +27 21 931 8117 📠 +27 21 931 4058

Service Centre Helpline: 086 111 5006

🌐 www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>