

mellerware®

TRENDS FOR LIFE



adria ver II
steam iron

complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
1400W

2 YEAR
GUARANTEE

Model:
23300A

PLEASE READ ALL INSTRUCTIONS BEFORE USE
















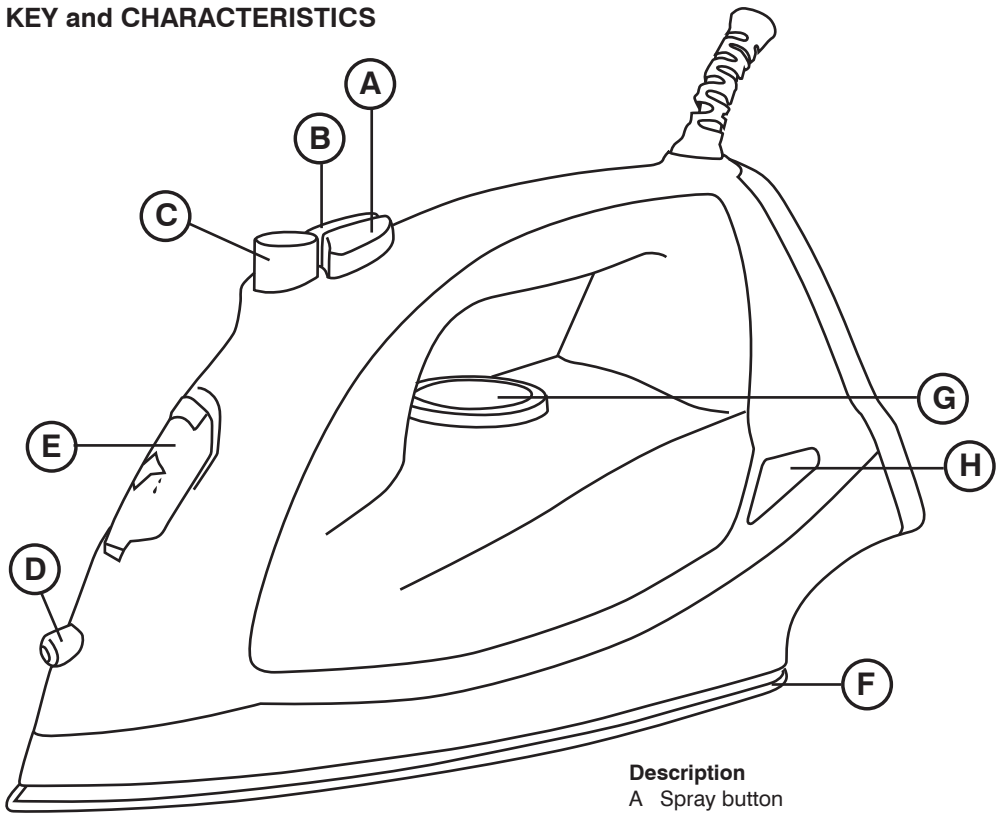 
IRONING TEMPERATURES

WARNING! Always check the label on the article to be ironed for correct ironing instructions!

- Sort the laundry separating different fabric types – wool with wool and cotton with cotton etc. Start ironing the fabrics requiring the lowest temperatures (synthetics) first and progress to a higher temperatures as the iron heats up quicker than it cools. If the fabric to be ironed has various fiber materials (e.g. cotton with polyester), use the lower/lowest ironing temperature.

| NOTE:  On label means: THIS ARTICLE CANNOT BE IRONED! (eg: Chlorofibre, Elastodiene) | | | |
|---|-----------------|---|---|
| LABEL | KIND OF TEXTILE | FIBRE MATERIAL | TEMPERATURE KNOB POSITION |
|  | Synthetic | Acrylic Modacryl Polypropylene Polyurethane |  |
|  | Synthetic | Acetate Triacetate |  |
|  | Synthetic | Metallized Cupro Polyamide (Nylon) Polyester Modal Viscose (Rayon) |  |
| | Silk | Silk | |
|  | Wool | Wool |  |
|  | Cotton | Cotton |  |
| | Linen | Linen | |

KEY and CHARACTERISTICS



Description

- A Spray button
- B Steam blast button
- C Steam regulator knob /
Self-cleaning function
- D Spray nozzle
- E Filling hole
- F Sole plate
- G Temperature control dial
- H Pilot light

| CHARACTERISTIC | FUNCTION |
|-------------------------|---|
| Temperature Dial Knob | Adjust temperature according to fabric to be ironed.(see table below) |
| Power Indicator Light | Indicator light will go off when desired temperature is reached. The light will go on and off as the temperature is regulated by the adjustable thermostat. |
| Soleplate | Super smooth non stick ironing surface. If ironing surface is sticky ensure temperature setting is correct as per table below and item being ironed is clean. |
| Water Filling Aperture | Using the measuring cup only, fill the tank with clean water here. Use demineralized water in hard water areas or water with lime scale. |
| Transparent Water Tank | Do not overfill. Water level in tank is easily visible during ironing. |
| Dry/Steam Iron Selector | Choose desired level of steam or dry ironing by rotating the knob |
| Spray Button | Depress for spraying water onto fabric for dry ironing or when required. |
| Strong Steam | Depress the strong steam button for extra surge of steam for ironing out difficult creases or if steam is required when iron is in the vertical position. |



IRONING INSTRUCTIONS

 
Note: The iron may smoke slightly when switched on for the first time. This is normal and will soon cease.

Please read these instructions carefully before use.

Important!: have you read the section "Important Safeguards"?

CHOICE OF WATER

- This iron can be used with normal tap water.
- If the water in your area is particularly hard. It is advisable to use distilled or demineralized water to prevent the scale forming on the critical point of the iron.
- Do not use chemically de-scaled water.

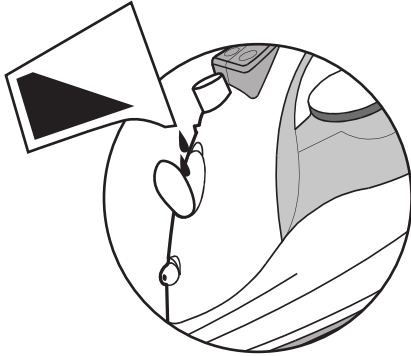

FILLING WITH WATER

- Ensure that the iron is disconnected from the power supply before filling.
- Turn the dry/steam selector dial to "0" or dry position.
- Fill water through the aperture using the measuring cup only. (If you fill the iron at the tap, water can spill into the electric and trip your earth leakage or blow the iron.)

 
Note* Do not fill higher than indication "MAX" of the water tank, In order to avoid spilling out of water.

- Do not fill with any thing but clean water. If you have to refill while ironing, remove the mains plug from the wall socket before filling.
- Pour out any remaining water after use.

SETTING THE TEMPERATURE

- Insert the plug in the wall socket and stand the iron upright.


- Set the temperature control dial to the correct temperature as indicated in the ironing instructions on the label or as per table above.
- The correct temperature will be reached when the indication light has switched off. The indication light will go on and off from time to time indicating that the selected temperature is being maintained.

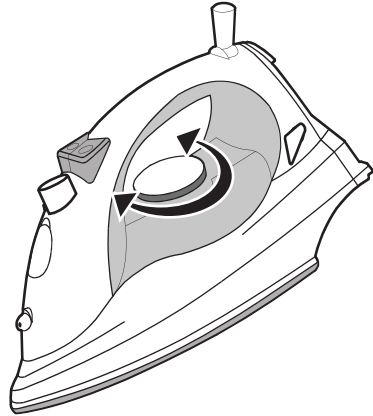

Note: Water may leak from the soleplate if the temperature selected is too low. This will then cause stains. If it happens, set the temperature control to the advised position for steam ironing. Steaming will re-commence as soon as the appropriate temperature has been reached.

SPRAYING

 - At any temperature by pressing on the spray button a couple of times, the laundry can be damped down.
- Ensure that there is enough water in the water tank.

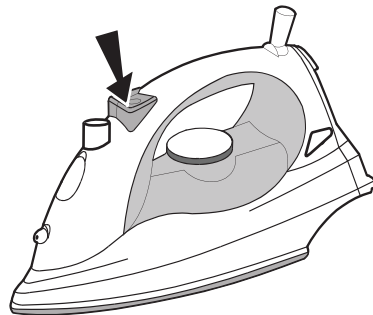



DRY IRONING

- Insert the plug into the wall socket.
- Ensure that the dry/steam selector button (C) is in position "0".
- Select the setting on the temperature control dial best suited for the fabric to be ironed.
- When the indication light has switched off, ironing may commence.

STEAM-IRONING

- As indicated on the temperature control dial and the temperature table, steam ironing is only possible at higher ironing temperature.
- Ensure that there is enough water in the water tank.
- Stand the iron upright.
- Insert the plug into the wall socket.
- Set the temperature control dial to the steam position.
- Wait a little while for the power indication light to switch off and to come on again.
- Set the dry/steam selector knob to the steam position. The steam will emerge from the vents in the sole plate when the iron is held in the horizontal position.

 
CARE AND CLEANING

- Before cleaning the iron, ensure it is disconnected from the power supply and has completely cooled down.
- Deposits and other residues on the soleplate can be removed with a rough cloth soaked in a vinegar/water solution.
- The housing/body may be wiped with a damp cloth and then polished with a dry one.
- Do not use abrasives on the sole plate.
- Keep the soleplate smooth: avoid hard contact with metal objects.
- NOTE: Ironing dirty fabric or fabric not rinsed fully will result in the iron sticking and dirt accumulating on the bottom of the soleplate, as will an iron set at too high a temperature for the relevant fabric.

STORAGE

- Turn the temperature control dial to "MIN" and set the steam selector dial to position "0". ("0"=No Steam).
- Disconnect the plug from the wall socket.
- Pour any remaining water out of the water tank. Then cover the filler cap.
- Stand the iron upright and let it cool down completely.
- The power cord can be wrapped around the iron when it has cooled down.

- Always store the iron in an upright position.

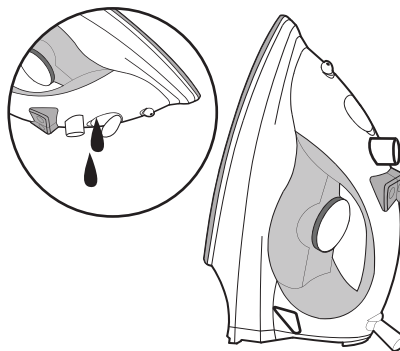

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Note: When using the iron for the first time, test on an old piece of fabric to ensure that the sole plate and water tank is completely clean.

SAFETY PROTECTIVE CUT – OUT

In the unlikely event of the thermostat failing, the protection cut – out will operate to prevent the iron overheating. The iron should then be taken to an authorized dealer/service agent for repair.

IMPORTANT SAFEGUARDS

- Please read all instructions before use.
- Ensure the voltage rating on the rating label corresponds to the main voltage in your home.
- Use the iron only for its intended use.
- The iron should always be switched off before connecting or disconnecting from the power supply. Never yank/pull the cord to disconnect the plug from the wall socket.
- Do not operate the iron with a damaged cord or plug. Never use the iron if it is damaged in any way. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified service centre for examination and repair. Incorrect reassembling can cause electric shock when the iron is used.
- When leaving the appliance momentarily always switch it off, remove the plug from the wall socket and stand the iron on its rear panel.
- Take care that children cannot touch the iron when the iron is hot and make sure they cannot pull the mains cord.
- To protect against the risk of electric shock, do not immerse the iron, cord or plug in water or other liquids.
- Burns can occur from touching hot metal parts,



hot water or steam, take caution when you turn a steam iron upside down: there may be hot water in the tank.

- Do not allow the supply cord to come into contact with hot surfaces. Let the iron cool down completely before transporting, moving or storage. Wrap the power supply cord around the iron when storing.
- Always disconnect the main plug from wall socket before filling the iron with water or pouring the remaining water out.
- To avoid an overloaded circuit, do not operate another high voltage appliance in the same electric circuit.
- If an extension cord is absolutely necessary, a 10-ampere (Europe) or 15 ampere (America) cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- This iron is for household use only.
- Do not operate the iron with wet hands.
- Do not touch the plug or power supply cord with wet hands.
- The iron should not be picked up or carried by the power supply cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



TROUBLE SHOOTING

| Problem | Reason | Action | Pre-caution |
|---------------------------|---|---|---|
| Iron is leaking water. | Temperature is too low | Set the temperature to steam setting (cotton) | Check fabric type is suitable for high steam temperature |
| | Steam switch is on self clean function | Turn steam switch setting to steam or 0 position | Switch steam setting to 0 (off) after use or when filling tank. |
| | Tank is overfilled | Empty water tank | Fill to MAX mark only. |
| | Iron is in the horizontal position too long. | When adjusting item place iron down in the vertical position | If iron is left on the item in the horizontal position for too long it may burn the fabric. |
| Iron is not heating up | Temperature control dial is in the off position | Turn the temperature control dial to the desired temperature setting. | Check temperature setting is suitable for fabric type. |
| | Household socket is off. | Switch on household socket | Ensure iron is in the upright position. |
| | Household socket is not working | Check the socket with another appliance | Appliance must be of similar wattage to prevent overloading. |
| Iron is tripping mains | Overloaded circuit. | Unplug all appliances attached to the same circuit and check iron. | Note that there can be up to 5 household plug sockets on 1 circuit. |
| Iron sticking to clothing | Temperature is too hot | Turn down temperature on control dial. Clean and rinse item. | Check temperature setting is suitable for fabric type. |
| | Clothing is dirty or not rinsed thoroughly. | Use spray function to dampen item and check temperature is correct. | Use a old linen cloth to remove any trace of dirt on the soleplate. Use iron soleplate cleaner for bad marks. |
| Creases not coming out | Item is too dry or temperature too low. | Use steam function. | Check temperature setting is suitable for fabric type. |
| Not Enough Steam | The steam control is off or set too low. | Set the steam button/switch to on or full. | Ensure temperature control dial is set to the 3 dot position for steaming. |
| | The iron temperature is too low. | Set temperature control dial to MAX or 3 dot position for steaming. | Check temperature setting is suitable for fabric type. |
| | The steam valve is blocked due to water scale. | If your iron is fitted with a self clean function carry out cleaning as per instructions. | Use distilled or demineralised water in your iron to prevent blocking. |

creative housewares

27 Nourse Avenue Epping 2 Cape Town
 P.O. Box 975 Eppindust 7475 South Africa
 Tel: +27 21 534 8114 Fax: +27 21 534 8086
 Service Centre Share Call: 086 111 5006
 web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>