



mellerware®

E X E C U T I V E
P R O G L I D E S T E A M I R O N



complies with
INTERNATIONAL
IEC60355
SAFETY SPECIFICATIONS

m
2200W

CE
2 YEAR
GUARANTEE

Model:
23600


PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee



Dear Customer,

Thank you for purchasing a MELLERWARE household appliance. Its technology, design, and functionality, along with complying to the strictest quality standards, will be a source of satisfaction for a long time to come. Please read this instruction manual carefully and familiarize yourself with your new steam iron. Before using the first time, please retain this manual for future reference.

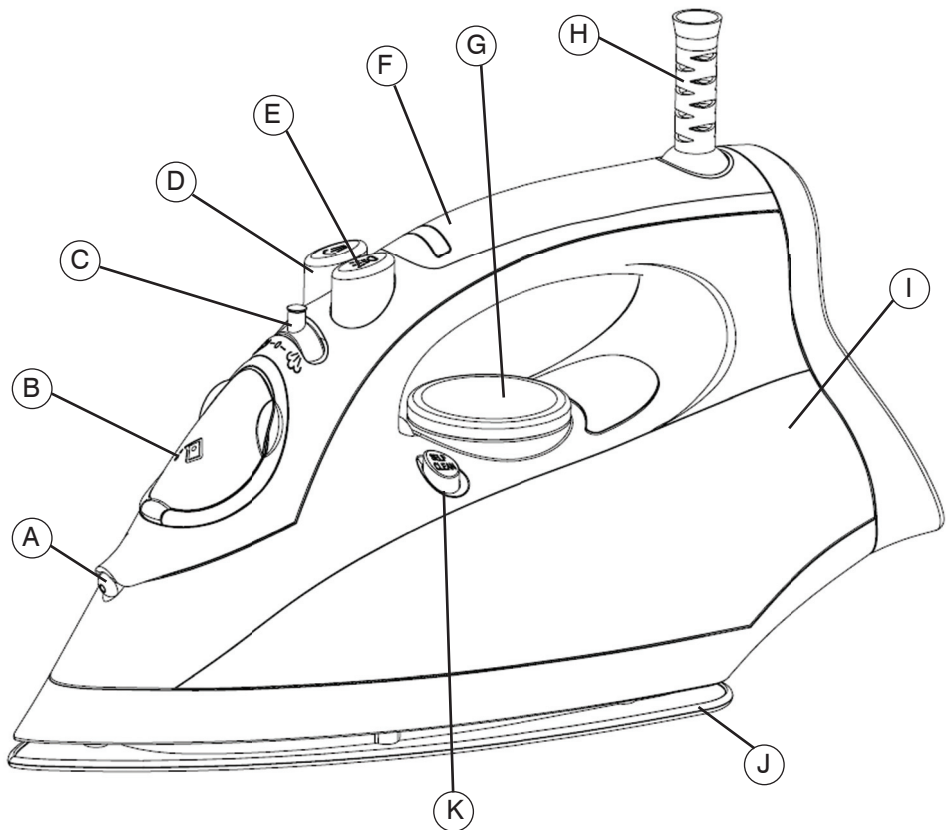

- A. Spray Nozzle
- B. Water filling inlet
- C. Steam control turning knob
- D. Burst of steam button
- E. Spray Button
- F. Soft touch grip
- G. Temperature control dial
- H. Power cord protector
- I. Water tank
- J. Ceramic soleplate
- K. Self-cleaning button



IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed:

- Make sure the voltage used corresponds with the one indicated on the rating label.
- Use the iron only for needed use as described in the instruction manual.

Close supervision is necessary when any appliance is used near children. Do not leave iron unattended while connected or on an ironing board. Burns can occur from touching hot metal parts, hot water or steam.

- Keep the iron out of reach of children.
- The iron should never be left unattended while it is connected to the mains supply.
- Unplug the iron from the mains electrical supply before:

1) Cleaning

2) Filling with water or emptying the water tank

3) Immediately after use

- Never operate the iron with a damaged power cord or plug, or after it has fallen or been damaged in any way. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair.
- Do not let the cord touch hot surfaces.
- To protect against a risk of electric hazards, do not immerse the iron in water or any other liquid.
- The iron must be used and rested on a stable surface.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

BEFORE FIRST USE

- It is normal for a small amount of smoke to be produced the first time, this will quickly disappear.
- When using the steam function for the first time, do not direct the steam towards the laundry, as there could be debris from the steam vents.

FILLING WITH WATER

- Make sure that both the Steam Control turning Knob and Temperature Control Dial are in "OFF" position.
- Hold the iron upright so that the water-filling inlet is in a horizontal position.
- Fill with water through Water Filling Inlet until the water reach the "MAX" mark indicated on the side of the iron, and never fill above this mark.

SETTING TEMPERATURE

Follow the ironing instructions on the garment label. If there is no instruction but you do know the kind of fabric, please consult the following table.

Note: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

FABRIC	TEMP. CONTROL	TEMP. REQUIREMENT
Synthetic	•	Low temperature
Silk, wool	••	Medium temperature
Cotton, linen	•••	High temperature



STEAM IRONING

- Place the iron in a vertical position and set the temperature control dial at the minimum/low heat setting.
- Insert the plug into the socket, and then turn the temperature control dial to the “high heat” marking. The pilot light will come on, indicating that the iron is heating up.
- When the pilot light turns off, the set temperature has been reached and the iron is ready to use.
- During ironing, the pilot light on the iron automatically switches on/off as the thermostat maintains the set temperature (you may continue ironing during this process).
- Turn the steam control turning knob to the required position.
- Steam is produced as soon as the iron is held horizontally.

SPRAYING

- Press the spray button to spray water on clothes, as often as required.

Note: When using the water spray function, ensure that there is enough water in the water tank, and you may have to pump the spray button several times the first time you use the iron in order to start the spraying function.

BURST OR VERTICAL STEAM IRONING

- Press the burst of Steam button to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing again.
- By pressing the Burst of Steam Button at intervals you can also iron vertically (curtain, hung garments, etc.)

Note: The burst steam function can only be used at high temperature. Stop the emission when the pilot light turns on, then start ironing again only after the pilot light has turned off.

DRY IRONING

For ironing without steam, follow the instruction in section “steam ironing”, however, the steam control turning knob should remain in position “O” (no steam).

ANTI-CALC SYSTEM

A special filter inside the water tank softens the water and prevents scale build-up in the soleplate. The filter is permanent and does not need replacing.

Note: Use tap water only. Distilled and demineralized water makes the anti-calc system ineffective by altering its physicochemical characteristics.

SELF-CLEANING

The self-cleaning feature cleans inside the soleplate, removing impurities. We recommend using it every 10-15 days.

- Set the steam control turning knob to Position O (no steam).
- Fill the water tank to maximum level.
- Set the temperature control dial to MAX and wait for the pilot light to turn off.
- Pull the plug out of the socket and press the self-cleaning button until the boiling water, steam, impurities come out.
- When the soleplate has cooled down, you can clean it with a damp cloth

HOW TO CLEAN AND STORE

- After using, remove the plug from the socket, lift the iron with the filling hole downwards to empty the remaining water from the water tank.
- Insert the plug into the socket, and set the Temperature Control Dial to “MAX” for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing it.

**ATTENTION:**

The iron must not be left unattended while it is connected to the supply mains. When the power cord is damaged, contact your dealers or an authorized service center for repair.

In case of any repairs, replacement of cord or plug, or adjustment, please consult a qualified technician, or take appliance to an authorized service facility.

NOTE:

1.This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2.Children should be supervised to ensure that they do not play with the appliance.

3.The iron must not be left unattended while it is connected to the supply mains;

4.The plug must be removed from the socket-outlet before the water reservoir is filled with water (for steam irons and irons incorporating means for spraying water);

5.The filling aperture must not be opened during use. Instructions for the safe refilling of the water reservoir shall be given (for pressurized steam irons);

6.The iron must only be used with the stand provided (for cordless irons);

7.The iron is not intended for regular use (for travel iron);

8.The iron must be used and rested on a stable surface;

9.When placing the iron on its stand, ensure that the surface on which the stand is placed is stable. The iron is not be used if it has been dropped, if there are visible signs of damage or if it is leaking.





TROUBLE SHOOTING

Problem	Reason	Action	Pre-caution
Iron is leaking water.	Temperature is too low	Set the temperature to steam setting (cotton)	Check fabric type is suitable for high steam temperature
	Steam switch is on self clean function	Turn steam switch setting to steam or 0 position	Switch steam setting to 0 (off) after use or when filling tank.
	Tank is overfilled	Empty water tank	Fill to MAX mark only.
	Iron is in the horizontal position too long.	When adjusting item place iron down in the vertical position	If iron is left on the item in the horizontal position for too long it may burn the fabric.
Iron is not heating up	Temperature control dial is in the off position	Turn the temperature control dial to the desired temperature setting.	Check temperature setting is suitable for fabric type.
	Household socket is off.	Switch on household socket	Ensure iron is in the upright position.
	Household socket is not working	Check the socket with another appliance	Appliance must be of similar wattage to prevent overloading.
Iron is tripping mains	Overloaded circuit.	Unplug all appliances attached to the same circuit and check iron.	Note that there can be up to 5 household plug sockets on 1 circuit.
Iron sticking to clothing	Temperature is too hot	Turn down temperature on control dial. Clean and rinse item.	Check temperature setting is suitable for fabric type.
	Clothing is dirty or not rinsed thoroughly.	Use spray function to dampen item and check temperature is correct.	Use a old linen cloth to remove any trace of dirt on the soleplate. Use iron soleplate cleaner or methylated spirits for bad marks.
Creases not coming out	Item is too dry or temperature too low.	Use steam function.	Check temperature setting is suitable for fabric type.
Not Enough Steam	The steam control is off or set too low.	Set the steam button/switch to on or full.	Ensure temperature control dial is set to the 3 dot position for steaming.
	The iron temperature is too low.	Set temperature control dial to MAX or 3 dot position for steaming.	Check temperature setting is suitable for fabric type.
	The steam valve is blocked due to water scale.	If your iron is fitted with a self clean function carry out cleaning as per instructions.	Use distilled or demineralised water in your iron to prevent blocking.





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>