

**mellerware**<sup>®</sup>

makes life easier

# BILTONG KING biltong cutter



Anti bacterial  
cutting block

Detachable knife

Built in tungsten -  
carbide knife  
sharpener



complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

**m**

2 YEAR  
GUARANTEE

Model:  
BC002






## ASSEMBLY AND USE OF YOUR MELLER-WARE BILTONG SLICER

**CAUTION IN ASSEMBLY & USE OF YOUR BILTONG SLICER:** Keep any sharp edge tools away from children! Using a knife is an inherently dangerous activity. Therefore, please only choose well designed, high quality products for any of your cutting chores, and exercise due care in their use.

1. A compact Spanner is stored within a cavity at the rear of the raised wooden block. Remove the spanner.

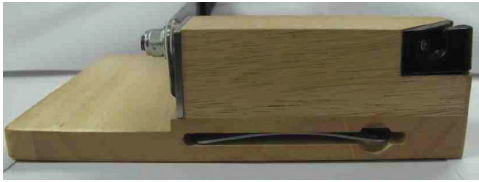

2. Attach the blade to the bolt extending from the raised wooden block. Position a white nylon washer on either side of the blade and then tighten the Nylon fastening nut using the spanner provided. Re-position the spanner within it's storage cavity and your biltong slicer is ready to use.



3. In cutting biltong or any other wide range of food products, the upright rear block can be used as a guide. Press the biltong (or other product) against the guide and push towards the blade as you slice, while carefully ensur-

ing fingers are kept well clear of the cutting edge.



4. The knife can be detached for independent use and cleaning if required, and the wooden board can be used with or without the attached knife.



## USE OF YOUR TUNGSTEN-CARBIDE SHARPENER:

1. Ensure that the sharpener is placed on a stable base when using, and hold the slicing knife handle with the left hand to keep a steady grip on the unit. This keeps the sharpener steady and your left hand well clear of the blade being sharpened.
2. With your right hand, hold the knife in a vertical position (at 90 degrees to floor or table-top) and using slight downward pressure run the blade from it's heel to the tip through the slot.
3. Repeat this action 3 or 4 times, or more if necessary until sharp.
4. After sharpening, clean the knife blade and dry well before storing.

## CAUTION IN USE OF YOUR TUNGSTEN-CARBIDE SHARPENER:

1. Do not use the Tungsten Carbide sharpener to sharpen serrated knives or scissors.
2. Do not use a backwards and forwards motion, sharpen in one direction only.
3. Use only light pressure - do not apply extreme force.
4. Do not put the sharpener or wooden block in a dishwasher or submerge.



## creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa  
 P.O. Box 6156 Parow East, 7501, South Africa  
 +27 21 931 8117     +27 21 931 4058  
Service Centre Helpline: 086 111 5006  
 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>