


# mellerware®

E X E C U T I V E

Munich Glass Bathroom Scale

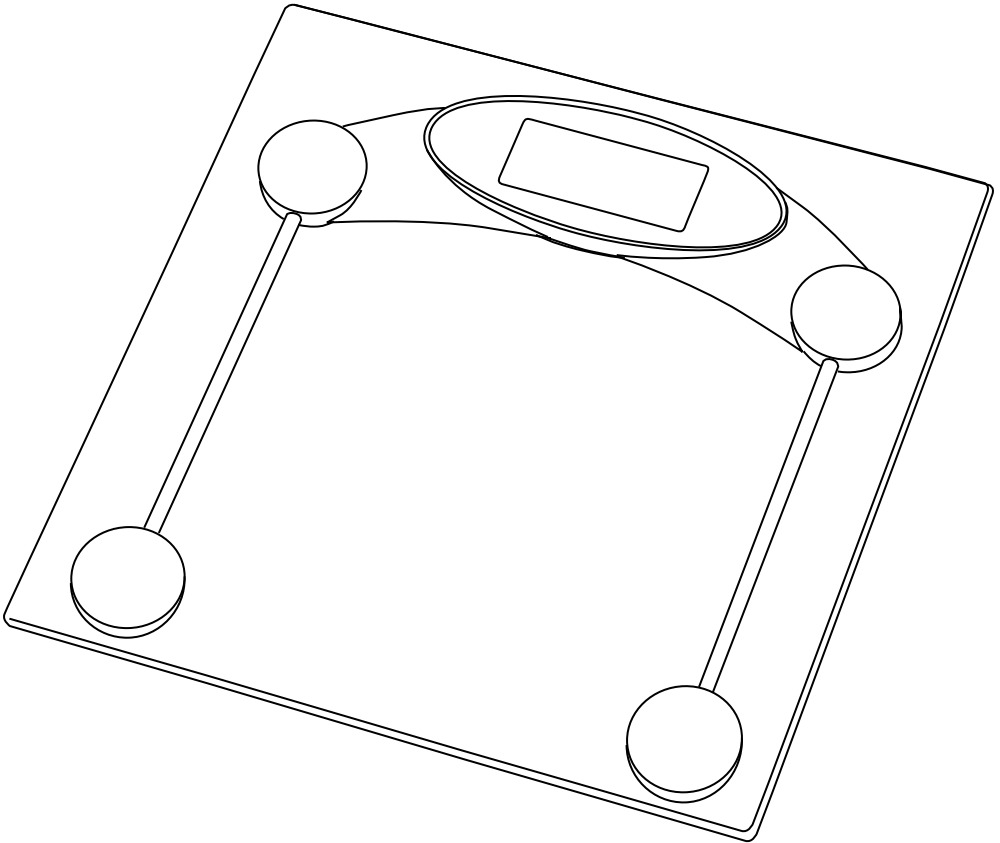

complies with  
SABS  
IEC60355  
SAFETY STANDARDS

  
3V Lithium

  
2 YEAR  
GUARANTEE

Model:  
20502

**PLEASE READ ALL INSTRUCTIONS BEFORE USE**

**2 year guarantee**





## SPECIFICATIONS

- Big LCD display
- Minimum capacity: 2.5kg  
Maximum Capacity: 150 kg
- Division: 100g (0.2 lb)
- Auto Zero-Auto off
- Low Battery / Overload Indication
- Power: 1 Lithium battery (CR2032)
- Equipped with High Precision Strain Gauge Sensor System (4 Sensors)

## Preparations Before Use

1. Insert the Lithium battery (included). See figure 1 (Note: Make sure battery is pushed all the way into its slot. Also make sure + side of battery is facing out)

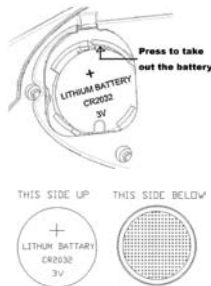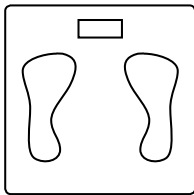

2. Scale Setup: Place the scale on a hard flat surface. Tap the front corner (right or left) of the scale with your foot. The digit "0" will scroll across the display. Then the display will show "0.0" This indicates that the scale has been setup correctly.
  - a) **Note:** This "Scale Setup" procedure applies only after installing a battery. After completing "Scale Setup", it does not need to be performed again unless battery is removed and replaced.
  - b) **Note:** If you step on the platform before "0.0" appears, you will not obtain a reading. If this happens, step off the scale, then wait for display to turn off, follow above steps to setup scale.

## Scale Operation:

To measure weight, simply stand with both feet in the center of the scale's glass platform. Be sure to stand erect and remain still. After 3 seconds the display will flash your weight and then display it steady.

**Note:** If a weight less than 10kg is placed on the scale, the scale will not activate. To weigh something less than 10kg, activate the scale first by tapping the front corner (right or left) of the scale with your foot.

1. When no weight is on the scale for 10 seconds, the scale will turn off automatically.

## Getting Accurate Readings:

1. If the scale has not been used for a long time, proceed as follows:
  - a) First, step lightly on the front corner (right or left) of the scale first to activate the scale.
  - b) Second, wait for the scale to turn off. Then you may use the scale normally.
2. If the scale is moved, proceed as follows:
  - a) remove the battery from the scale for 5 seconds
  - b) replace the battery
  - c) follow "Scale Setup" instruction (listed in Preparations Before Use point 2 above)
3. Place scale on flat hard surface. Do not use scale on carpet because the reading will be inaccurate.
4. If the reading appears inaccurate, please check if the battery and the contact point are well connected. If scale has been in use for a long time, replace the battery and try again. If necessary, contact the local franchisers or contact our company.

## Handling Tips:

1. Store the scale horizontally.
2. Do not overload the scale.
3. The scale is for home use only.
4. Do not submerge scale in water. Use glass cleaner to clean glass platform of scale.
5. Do not leave any objects on top of scale if the product is not to be used during a prolonged period of time. Also remove the battery to prevent it from being depleted or leaking.
6. To avoid possible injury, do not stand on the edge of the platform.
7. Place the scale in an area free from direct sunlight, heating equipment, high humidity, or extreme temperature change.
8. To avoid slipping, make sure your feet and the glass platform of the scale are dry before standing on the scale.
9. Please do not strike, hit or drop objects onto the glass platform, otherwise, the glass may break and cause serious injury.
10. Strong magnetic fields may interfere with the operation of the scale. Avoid operating the scale in such areas.

## Usage Notes:

1. When the display shows "Err", it means that the scale is overloaded.
2. When the display shows "Lo", it means that the battery is low. Please replace the battery as soon as possible.
3. If scale display shows random digits or scale does not automatically shut off, proceed as follows:
  - a. remove the battery for 10 seconds
  - b. replace battery
  - c. follow "Scale Setup" instruction (listed in Preparations Before Use point 2 above)

creative housewares

Service Centre Share Call: 086 111 5006

web: [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>