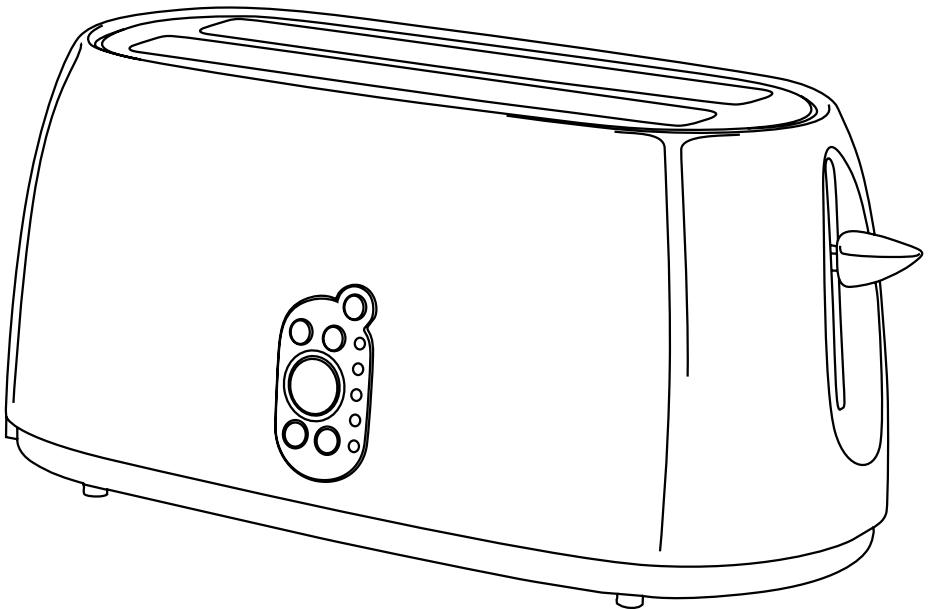


mellerware®

E X E C U T I V E

Emperor 4 Slice Digital Toaster



complies with
SABS
IEC60355
SAFETY STANDARDS


1600W

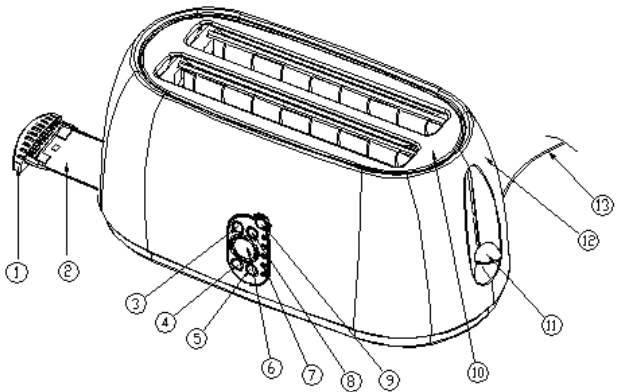

2 YEAR
GUARANTEE

Model:
24409

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee

1. Crumb tray handle
2. Crumb tray
3. Function / Reheat button
4. Plus of browning control
5. Minus of browning control
6. Digital LED display
7. Indicator light for browning control
8. Function / Defrost button
9. Function / Cancel button
10. Top cover
11. Push knob
12. Metal body
13. Power cord



FUNCTIONS/FEATURES:

1. Voltage:220~240V 60Hz,rating:1600 watt.
2. Toasting a wide variety of breads with four wide toasting slots: 1-1/2" slot
3. Defrost button: Defrosts and toasts frozen bread.
4. Cancel button: Interrupts toasting process when pressed.
5. Pull out crumb tray: Removes easy to clean crumbs from bottom of the toaster.
6. Cord storage: Takes up excess cord and keeps the countertop neat.
7. Variable browning control: Sets desired toast color from light to dark.
8. Bagel button: Toasting single surface of a piece of bread

IMPORTANT SAFEGUARDS

When using this and other electrical appliances, the basic safety precautions listed should always be followed. Please keep these instructions for future use:

1. Read all instructions before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs, as the metal surfaces become extremely hot.
3. To prevent against electrical hazards, do not immerse the cord, plug or toaster in water or other liquid. See instructions for cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Always unplug appliance from the outlet when not in use and before cleaning. Allow it to cool before cleaning and handling.
6. Do not operate any appliance with a damaged cord or plug. Do not replace if the power cord or plug if it is damaged, after appliance mal-functions, dropped or is damaged in any manner. Return the appliance to an authorized service facility for examination, repair, electrical or mechanical adjustment.
7. The use of accessory attachments is not recommended by the appliance manufacturer as they may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of the table or counter. Do not let it touch hot surfaces.
10. Do not place the toaster on or near hot gas, electric burner, or a heated oven.
11. To disconnect, grasp plug and remove it from the outlet. Never unplug by pulling the cord.
12. Do not use the toaster for anything other than its intended use.
13. Oversized foods, metal foil packages or utensils must not be inserted into the toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
16. To avoid possibility of fire, do not leave toaster unattended during use.
17. Clean out accumulated crumbs frequently to avoid risk of fire or toaster malfunction. Do not use foods that will drip coatings or fillings when heated. Such accumulations inside the toaster may create unsanitary conditions and the possibility of fire or toaster malfunction. Unplug when not in use and before cleaning.
18. Bread may burn during toasting the bread, and they must be watched.

Please note that this toaster is made for household use only!

USE & CARE

Before first use, remove all packaging from toaster. Check inside the toaster slots for packaging and remove.

Note: Do not place any bread in the toaster during the first toasting to allow the new elements to preheat and burn off any dust that may have accumulated during assembly.

1. Make sure the crumb tray is in place and the bread carriage lever is on the UP position.
2. Set up toaster on a flat, stable countertop surface away from the edge and at least 3 inches away from wall or rear of counter.
3. Unwind the power cord and plug the power cord into a nearby outlet.
4. Insert the desired slices of bread. Be sure the bread carriage lever is on UP position.
5. Press the variable browning control to desired selection. The higher the number, the darker the toast color will be.
6. Press the bread carriage lever down until it locks into position.
7. When the toasting cycle is completed the toast is automatically ejected up. To terminate the toasting cycle before it is completed, simply press the cancel button.
8. After use, unplug the toaster from electrical outlet.

HELPFUL TIPS FOR TOASTING

Toasting is a combination of cooking and drying the bread; moisture levels differ from one type of bread to another, which can result in varying toasting times. Preheating is not necessary before using the toaster.

- For slightly dry bread, use a lower browning setting than normal.
- For fresh or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher browning setting.
- Thick pieces of bread (including bagels) will take longer to toast, sometimes significantly longer,

since more moisture must be evaporated from the bread before toasting can occur.

- Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins from the surface of the bread before placing it into the toaster. This will help prevent pieces from falling into the toaster or sticking on the guard wire in the slot.
- Before toasting bagels, slice each bagel into two equal halves.
- Single slice toasting: If you are toasting as single slice of bread, set the variable browning control lighter than normal. The toaster is designed to heat the whole toasting chamber for two slices. By reducing the toasting time for a single slice it will not be over toasted.
- Pastries: Exercise caution when toasting pastries. The filling can become quite hot long before the surface of the pastry becomes brown.

CLEANING AND MAINTENANCE

1. Always unplug the toaster from the electrical outlet and allow it to cool before cleaning.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleaning agent to the cloth, and not directly onto the toaster.
3. To remove crumbs, slide out the crumb tray and discard the crumbs. Wipe the crumb tray clean and place it back. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and shake gently. Never insert any hard or sharp instrument into the slots as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outsides of the toaster, use the cord storage on the underside of the toaster.
6. Warning: any other servicing should be performed by an authorized service representative.

Note: Please consult the 2 year guarantee card for conditions.

TROUBLE SHOOTING GUIDE

Problem	Reason	Action	Pre-caution
Bread rack lever does not stay down.	There is no power to the appliance.	Check that the mains switch is working and in the "ON" position.	Too many appliances on the same circuit could overload it.
Bread is toasted unevenly.	Heat has dispersed unevenly due to one slice of toast being used.	Four slices of toast will give better results.	
Inside elements are dull compared to outside.	The appliance is warmer in the center so the inside elements are not as powerful as the outside elements.	This is normal.	Do not place any sharp objects into the toaster or this will create a hazard.
Toast is too brown or too light.	Thickness and type of bread will determine moisture content.	Use browning control to adjust to the required toasting time.	Keep the crumb tray clean to avoid a hazard and the infestation of insects.

creative housewares

Service Centre Share Call: 086 111 5006

web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>