



# mellerware®

TRENDS FOR LIFE

Sigma 2 Slice Brushed S/Steel Toaster



complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS


**m**  
900 W

**CE**  
2 YEAR  
GUARANTEE

Model:  
24101/  
24107

**PLEASE READ ALL INSTRUCTIONS BEFORE USE**

**2 year guarantee**

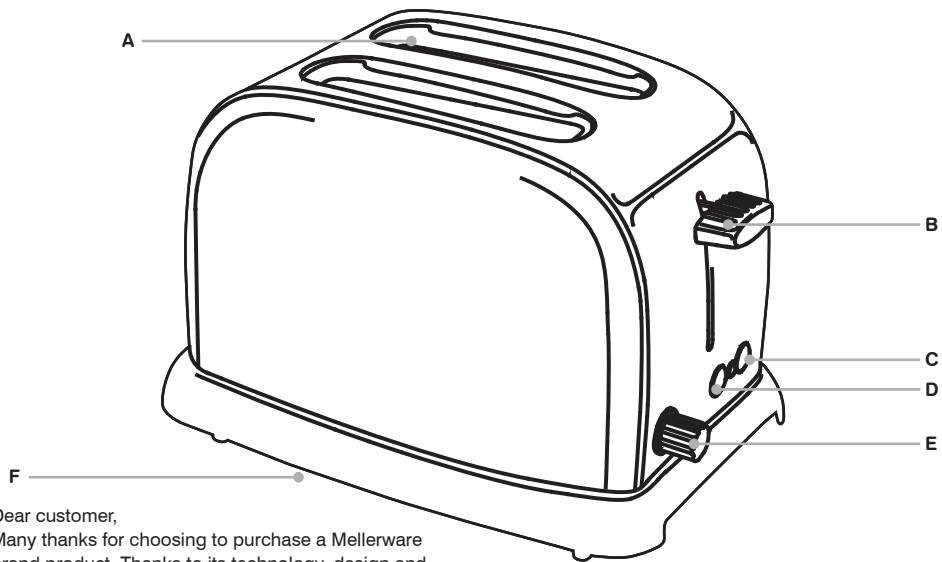

Dear customer,  
 Many thanks for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

**Description**

- A Wide Slots
- B Bread rack lever
- C Defrost button
- D Cancel/stop button
- E Variable Browning Control
- F Crumb tray

CHARACTERISTIC	FUNCTION
Variable Browning Control	Adjust browning control to desired level. Your personal preference and different bread types will require different settings.
Cancel Button	Depress cancel button to stop toasting at any time.
Defrost Button	Use this function for toasting frozen bread. It gives a longer toasting time.
Bread Rack Lever	Depress lever to begin toasting.
High Lift Function	The bread rack lever can be lifted higher to allow easier access to the toasted bread without burning fingers. It is recommended to use tongs to avoid touching hot metal surfaces.
Wide Slots	For thick slices of bread, muffins or bagels.
Bread Centering	To center standard size bread for even browning.
Crumb Tray	Remove crumb tray after each use and wipe clean to avoid ingress of insects and avoid fire hazard.
Power Cord Storage	Wrap excess length cord in cord storage facility under toaster.



## USING YOUR TOASTER

**WARNING!** Never attempt to extract jammed toast, \ muffins, bagels or any other item with a knife or sharp metal object, as contact with the live elements can cause electrical shock. Unplug the appliance and allow to cool down completely before attempting to remove the bread.

- 1) Insert the plug into a suitable mains supply socket and turn the power on.
- 2) Place two slices of bread, muffins or bagels into the bread slots.
- 3) Select the desired browning setting. (When using the toaster for the first time we suggest toasting on no. 4. Varying types of bread and personal preference may require a different browning setting)
- 4) Press the bread rack lever down until it clicks into place. The toasting cycle will automatically commence. NOTE: If the toaster is not plugged in and switched on, the bread rack will not stay down.
- 5) The toaster automatically switches off and raises the toast after the desired toast cycle is complete. The toasting process can be stopped at any time by pressing the cancel button.

**TOASTING FROZEN BREAD:** place the bread into the bread slots and select desired browning setting. Press the bread rack lever down until it clicks into place and then press the "Frozen" button.

## CARE AND CLEANING

- 1) Always turn the power off, remove the plug from the power supply outlet and allow the product to cool completely before cleaning.
- 2) To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty crumbs, wipe with a cloth and replace in the toaster before using it again.
- 3) Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth. **DO NOT IMMERSE THE APPLIANCE IN WATER.**
- 4) To clean the interior, turn the toaster upside down over the sink and shake crumbs free. **DO NOT PLACE ANY METAL OR SHARP OBJECTS INSIDE YOUR TOASTER.**

## IMPORTANT SAFEGUARDS

**PLEASE READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE**

- 1) To protect against electrical shock, do not immerse any part of the appliance or cord into water or any other liquid.
- 2) Close supervision is necessary when the appliance is used by, or near children.
- 3) Do not leave the appliance unattended when in use.

- 4) Always use the appliance on a dry and stable work surface.
- 5) Do not use this appliance outdoors.
- 6) Always unplug the appliance from the power outlet socket when not in use and before cleaning. Do not operate the appliance if damaged, or after it malfunctions. If the appliance is damaged or malfunctions in any manner, return it to the approved service agent for service or repair to avoid any hazard.
- 8) In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged, return the appliance to the approved service agent for service or repair.
- 9) Do not let the cord hang over the edge of the table or work surface, or touch any hot surfaces. Allow the appliance to cool before wrapping cord in cord storage where applicable.
- 10) Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- 11) Do not place the appliance on or near a hot gas or electric burner, in or where it could touch a heated oven or microwave oven.
- 12) Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- 13) CAUTION: When using this appliance, allow adequate air space above and on all sides for circulation. Keep the appliance away from curtains, dish towels, wall coverings or any other flammable materials during use. Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- 14) **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**
- 15) Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- 16) Do not use this appliance with any food stuff or product containing sugar, jam or preserves.



## TROUBLE SHOOTING GUIDE

Problem	Reason	Action	Pre-caution
Bread rack lever does not stay down.	There is no power to the appliance.	Check that the mains switch is working and in the "ON" position.	<b>Too many appliances on the same circuit could overload it.</b>
Bread is toasted unevenly.	Heat has dispersed unevenly due to one slice of toast being used.	Four slices of toast will give better results.	
Inside elements are dull compared to outside.	The appliance is warmer in the center so the inside elements are not as powerful as the outside elements.	This is normal.	<b>Do not place any sharp objects into the toaster or this will create a hazard.</b>
Toast is too brown or too light.	Thickness and type of bread will determine moisture content.	Use browning control to adjust to the required toasting time.	<b>Keep the crumb tray clean to avoid a hazard and the infestation of insects.</b>





## creative housewares

27 Nourse Avenue Epping 2 Cape Town  
P.O. Box 975 Eppindust 7475 South Africa  
Tel: +27 21 534 8114 Fax: +27 21 534 8086  
Service Centre Share Call: 086 111 5006  
web: [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>