



INSTRUCTION MANUAL



MODEL: 24408

TROY

4 Slice Long Slot Toaster

Please read all instructions before using this product

1. KEY and CHARACTERISTICS



- 1) Bread Rack Lever with high lift function
- 2) Cord Storage
- 3) Control Panel (including Variable Browning, Cancel button, Reheat and Defrost Buttons)
- 4) Crumb Tray
- 5) Wide bread slot with bread centering.

CHARACTERISTIC	FUNCTION
Variable Browning Control	Adjust browning control to desired level. Your personal preference and different bread types will require different settings.
Stop Button	Depress the stop button to stop toasting at any time.
Defrost Button	Use this function for toasting frozen bread. It gives a longer toasting time.
Reheat Button	Use this function to reheat toast. It gives a shortened toasting time.
Bread Rack Lever	Depress lever fully to begin toasting. After toasting, lift lever for removing small slices of bread to avoid placing fingers or obstacles into the toaster
Crumb Tray	Slide out crumb tray after each use and wipe clean for efficient and safe use of your toaster.
Cord Storage	Wrap cord in cord storage facility when not in use or extra length of cord if not required.

2. USING YOUR TOASTER

WARNING! Never attempt to extract jammed toast, muffins, bagels or any other item with a knife or sharp metal object, as contact with the live elements can cause electrical shock. Unplug the appliance and allow it to cool down completely before attempting to remove the bread.

- 1) Insert the plug into a suitable mains supply socket and turn the power on.
- 2) Place two or four slices of bread, muffins or bagels into the bread slots.
- 3) Select the desired browning setting. (When using the toaster for the first time we suggest toasting on no. 3. Varying types of bread and personal preference may require a different browning setting)
- 4) Press the bread rack lever down until it clicks into place. The toasting cycle will automatically commence. **NOTE:** If the toaster is not plugged in and switched on at the mains supply, the bread rack will not stay down.
- 5) The toaster automatically switches off and raises the toast after the desired toast cycle is complete. The toasting process can be stopped at any time by pressing the cancel button.

HIGH LIFT: To remove smaller items such as crumpets and muffins, lift the bread rack lever approximately 20mm above the starting position for easier access.

TOASTING FROZEN BREAD: place the bread into the bread slots and select desired browning setting. Press the bread rack lever down until it clicks into place and then press the "DEFROST" button

REHEATING TOAST: place the toast into the bread slots and press the bread rack lever down until it clicks into place. Depress the "REHEAT" button. The indicator light will illuminate.

3. CARE AND CLEANING

- 1) Always turn the power off, remove the plug from the power supply outlet and allow the product to cool completely before cleaning.
- 2) To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty crumbs, wipe with a cloth and replace in the toaster before using it again.
- 3) Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth. **DO NOT IMMERSE THE APPLIANCE IN WATER.**
- 4) To clean the interior, turn the toaster upside down over the sink and shake crumbs free. **DO NOT PLACE ANY METAL OR SHARP OBJECTS INSIDE YOUR TOASTER.**

4. IMPORTANT SAFEGUARDS

PLEASE READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- 1) To protect against electrical shock, do not immerse any part of the appliance or cord into water or any other liquid.
- 2) Close supervision is necessary when the appliance is used by, or near children.
- 3) Do not leave the appliance unattended when not in use.
- 4) Always use the appliance on a dry and stable work surface.
- 5) Do not use this appliance outdoors.
- 6) Always unplug the appliance from the power outlet socket when not in use and before cleaning.
- 7) Do not operate the appliance if damaged, or after it malfunctions. If the appliance is damaged or malfunctions in any manner, return it to the approved service agent for service or repair to avoid any hazard.
- 8) In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged, return the appliance to the approved service agent for service or repair.
- 9) Do not let the cord hang over the edge of the table or work surface, or touch any hot surfaces. Allow the appliance to cool before wrapping cord in cord storage where applicable.
- 10) Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- 11) Do not place the appliance on or near a hot gas or electric burner, in or where it could touch a heated oven or microwave oven.
- 12) Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- 13) **CAUTION:** When using this appliance, allow adequate air space above and on all sides for circulation. Keep the appliance away from curtains, dish towels, wall coverings or any other flammable materials during use. Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- 14) **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**
- 15) Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- 16) Do not use this appliance with any food stuff or product containing sugar, jam or preserves.

Creative Housewares (Pty) Ltd

18 Jig Avenue, Montague Gardens, Cape Town, South Africa

Tel: (021) 551 5760; Fax: (021) 551 1189

e-mail: info@creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>