

mellerware[®] HOT SLICE
4 slice
toaster

makes life easier



Variable browning control

Stop button

Slide out crumb tray



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
1300W


2 YEAR
GUARANTEE

Model:
24445



Description

1. Bread slots (4 slice)
2. Cancel/Stop button
3. Variable browning control
4. Removable crumb tray
5. Power cord storage
6. Cool touch housing

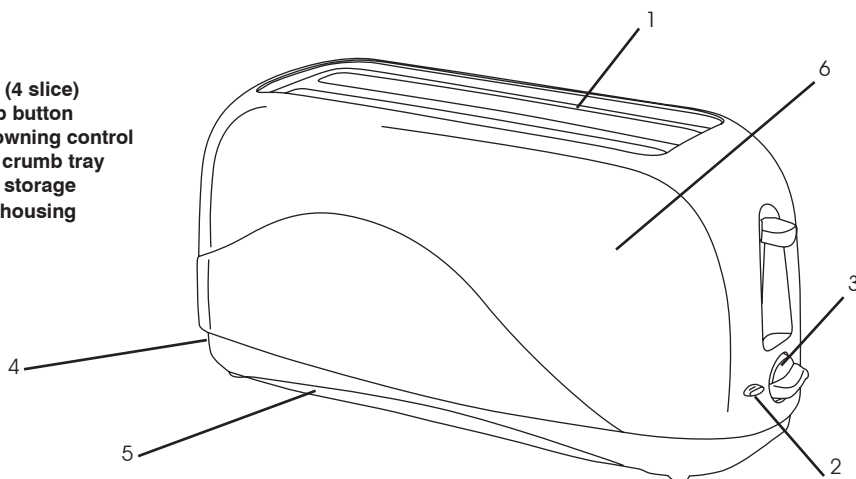

CHARACTERISTIC	FUNCTION
Variable browning control	Adjust browning control to desired level. Your personal preference and different bread types will require different settings.
Cancel/Stop button	Depress cancel button to stop toasting at any time.
Removable crumb tray	Remove crumb tray after each use and wipe clean
Power cord storage	Wrap excess length cord in cord storage facility under toaster.

USING YOUR TOASTER

WARNING!

Never attempt to extract stuck toast or any other item with a knife or sharp metal object, as contact with the live elements can cause electrical shock. Unplug the appliance and allow it to cool down completely before attempting to remove the bread. Make sure the rating label on the appliance corresponds to that of the mains.

- 1) Insert the plug into the wall socket and turn the power on.
- 2) Place four slices of bread into the bread slots.
- 3) Select the desired browning setting. When using the toaster for the first time we suggest toasting on no. 3. Varying types of bread and personal preference may require a different browning setting.
- 4) The toaster automatically switches off and raises the toast after the desired toast cycle is complete. The toasting process can be stopped at any time by pressing the cancel button.

CARE AND CLEANING

- 1) Always turn the power off, remove the plug from the wall socket and allow the appliance to cool completely before undertaking any cleaning task.
- 2) To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty crumbs, wipe

with a cloth and replace in the toaster before using it again.

- 3) Wipe the outside of the toaster with a damp cloth.
DO NOT IMMERSE THE APPLIANCE IN WATER OR ANY OTHER LIQUID.
- 4) To clean the interior, turn the toaster upside down over the sink and shake crumbs free.
DO NOT PLACE ANY METAL OR SHARP OBJECTS INSIDE YOUR TOASTER.

IMPORTANT SAFEGUARDS

PLEASE READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- 1) To protect against electrical shock, do not immerse any part of the appliance or its power cord into water or any other liquid.
- 2) Close supervision is necessary when the appliance is used by, or near children.
- 3) Do not leave the appliance unattended while it is in use.
- 4) Always use the appliance on a dry and stable work surface.
- 5) Do not use this appliance outdoors.
- 6) Always unplug the appliance from the wall socket when not in use and before undertaking any cleaning task.
- 7) Do not operate the appliance if it is damaged, or after it malfunctions. If the appliance is damaged or



- malfunctions in any manner, return it to the approved service centre for repair.
- 8) In the interest of safety, regular checks should be carried out on the power cord to ensure that no damage is evident. Should there be any signs that the power cord is damaged, return the appliance to the approved service centre for repair.
 - 9) Do not let the power cord hang over the edge of the table or work surface, or touch any hot surfaces. Allow the appliance to cool down completely before wrapping the power cord in cord storage.
 - 10) Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
 - 11) Do not place the appliance on or near a hot gas or electric burner, in or where it could touch a heated oven or microwave oven.
 - 12) Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
 - 13) **CAUTION:** When using this appliance, allow adequate air space above and on all sides for circulation. Keep

- the appliance away from curtains, dish towels, wall coverings or any other flammable materials during use. Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- 14) **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**
 - 15) Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
 - 16) Do not use this appliance with any food stuff or product containing sugar, jam or preserves.
 - 17) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - 18) Children should be supervised to ensure that they do not play with the appliance.

TROUBLE SHOOTING GUIDE

Problem	Reason	Action	Pre-caution
Bread rack lever does not stay down.	There is no power to the appliance.	Check that the mains switch is working and in the "ON" position.	Too many appliances on the same circuit could overload it.
Bread is toasted unevenly.	Heat has dispersed unevenly due to one slice of toast being used.	Four slices of toast will give better results.	
Inside elements are dull compared to outside.	The appliance is warmer in the center so the inside elements are not as powerful as the outside elements.	This is normal.	Do not place any sharp objects into the toaster or this will create a hazard.
Toast is too brown or too light.	Thickness and type of bread will determine moisture content.	Use browning control to adjust to the required toasting time.	Keep the crumb tray clean to avoid a hazard and the infestation of insects.



creative housewares

🏠 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

✉ P.O. Box 6156 Parow East, 7501, South Africa

☎ +27 21 931 8117 📠 +27 21 931 4058

Service Centre Helpline: 086 111 5006

🌐 www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>