



mellerware®

TRENDS FOR LIFE



doppio
sandwich maker



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
7 0 0 W

2 YEAR
GUARANTEE

Model:
25200B


PLEASE READ ALL INSTRUCTIONS BEFORE USE





Dear customer,

Many thanks for choosing to purchase a MELLERWARE brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

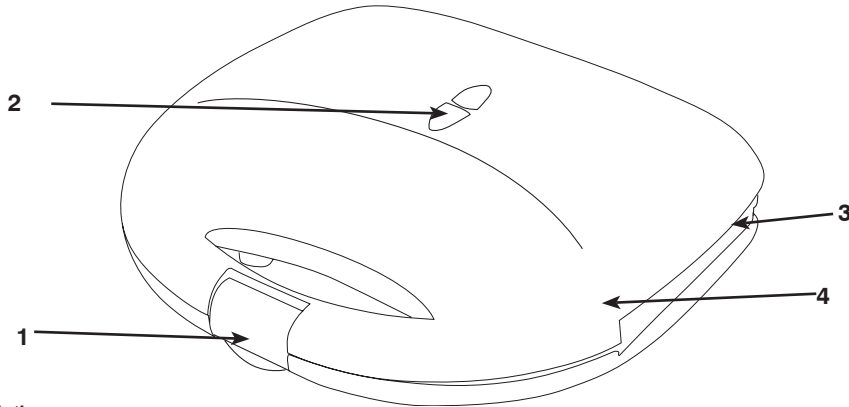

Description

1. Lock clip
2. Indicator lights
3. Non-stick grill cooking plates
4. Cool-touch housing

KEY AND CHARACTERISTICS

1. USING YOUR SANDWICH TOASTER

1. Before first use clean the surface of the cooking plate with a damp cloth and then wipe again with a dry cloth. Oil the cooking plate with olive oil, butter, margarine, or any cooking fat.
2. Insert the plug into a suitable mains supply socket.
3. Ensure the appliance is placed horizontal on the worktop.
4. Turn the power on. The RED indicator light will come on.
5. Prepare the sandwich while waiting for the toaster to heat up.
6. After 4 to 6 minutes the toaster will be ready as indicated by the GREEN light going on.
7. Open the sandwich toaster and place in the sandwich. Be careful of the hot surfaces.
8. For golden brown toasted sandwiches, place the buttered sides of the bread onto the cooking plates.
9. Close both halves of the sandwich toaster without placing too much force on the sandwich. If too much force is required to close the sandwich toaster, the clip may come loose or break during toasting.
10. Keep the sandwich toaster closed during toasting.
11. Toasting time will depend on the type of bread used and personal preferences.
12. After toasting is complete open the toaster and remove sandwich with a plastic or wooden utensil. Never use a metal or sharp object, as this will

damage the non-stick coating on the cooking plates.

13. Close the sandwich toaster to retain the heat if further use is required.
14. After use, remove the plug from the power socket outlet.

WARNING: Do not operate the appliance in the vertical position. This is for storage only.

Helpful Hints:

1. Preheat cooking plates before use.
2. Smaller or drier fillings may require pre-toasting of the bread to reduce toasting time in the sandwich toaster.
3. You can use butter with herbs for extra flavour.
4. Lard on the outside of the bread can improve taste.
5. Sprinkling sugar on the outside of the bread will result in crispier toasted sandwiches.

2. CARE AND CLEANING

1. Always turn the power off, remove the plug from the power supply outlet and allow the product to cool completely before cleaning.
2. Wipe the interior as well as the side of the cooking plates with an absorbent tissue, paper towel or soft cloth. Never use an abrasive substance to clean the appliance. Clean after each use to prevent any caking of fillings.
3. Re-oil the cooking plates taking care to wipe up any





excess oil as this can become hard and sticky during storage.

4. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.

DO NOT IMMERSE THE APPLIANCE OR THE CORD IN WATER OR ANY OTHER LIQUID.

3. IMPORTANT SAFEGUARDS

PLEASE READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

1. To protect against electrical shock, do not immerse any part of the appliance or cord into water or any other liquid.
2. Do not touch hot surfaces. Use handles or knobs.
3. Close supervision is necessary when the appliance is used by, or near children.
4. Do not leave the appliance unattended when not in use.
5. Always use the appliance on a dry and stable work surface.
6. Do not use this appliance outdoors.
7. Do not operate the appliance if damaged, or after it malfunctions. If the appliance is damaged or malfunctions in any manner, return it to the approved service agent for service or repair to avoid any hazard.
8. In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged, return the appliance to the approved service agent for service or repair.
9. Do not let the cord hang over the edge of the table or work surface, or touch any hot surfaces. Allow the appliance to cool before wrapping cord in cord storage where applicable.
10. Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
11. Do not place the appliance on or near a hot gas or electric burner, in or where it could touch a heated oven or microwave oven.
12. CAUTION: When using this appliance, allow adequate air space above and on all sides for circulation. Keep the appliance away from curtains, dishtowels, wall coverings or any other flammable materials during use. Caution is required on surfaces where heat may cause a problem.
13. THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.
14. Please do not operate the appliance using wet hands.
15. Do not touch the plug with wet hands.
16. Do not pull or tug on the cord when removing the plug from the wall socket.
17. This appliance must not be used by persons with disabilities, children or persons incapable of understanding the operation of this appliance.

4. WARRANTY / GUARANTEE

- We guarantee that this product has been thoroughly inspected and tested before dispatched and is free from mechanical and electrical defects. Should defects due to faulty material or workmanship develop within two years from date of purchase, under normal domestic use, the appliance will be repaired, or exchanged free of charge.

Note: If this product is used commercially the guarantee is limited to 90 days.

- Kindly retain your purchase slip for this must be presented if making a claim under the terms of the guarantee. If such proof is not available the product shall be deemed to be older than one year and a charge for service and \ or spares will be applicable. Should your appliance require attention or appear not to be operating properly, please take it to the retailer from whom it was purchased, together with all parts and your purchase slip.
- This guarantee does not cover wear and tear or damaged cause by over-loading negligence, accidental or improper use. Any changes will invalidate the guarantee, as would any attempted repair.

SERVICE

Before returning your product for service or repair – check the following:

- Your household mains supply socket is working properly.
- The mains supply circuit is not overloaded. If service becomes necessary within the guarantee period the appliance should be returned to the retail outlet where purchased or carefully packed and marked "fragile-handle with care"and sent carriage paid to the address below. (Postage is not refundable) Service outside the guarantee period is still available but this will be chargeable.





creative housewares

🏠 20 Tekstel Street, Parow, Cape Town, 7493, South Africa
✉ P.O. Box 6156 Parow East, 7501, South Africa
☎ +27 21 931 8117 📠 +27 21 931 4058
Service Centre Helpline: 086 111 5006
🌐 www.creativehousewares.co.za



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>