




# mellerware®

E X E C U T I V E

Planet Sandwich Maker

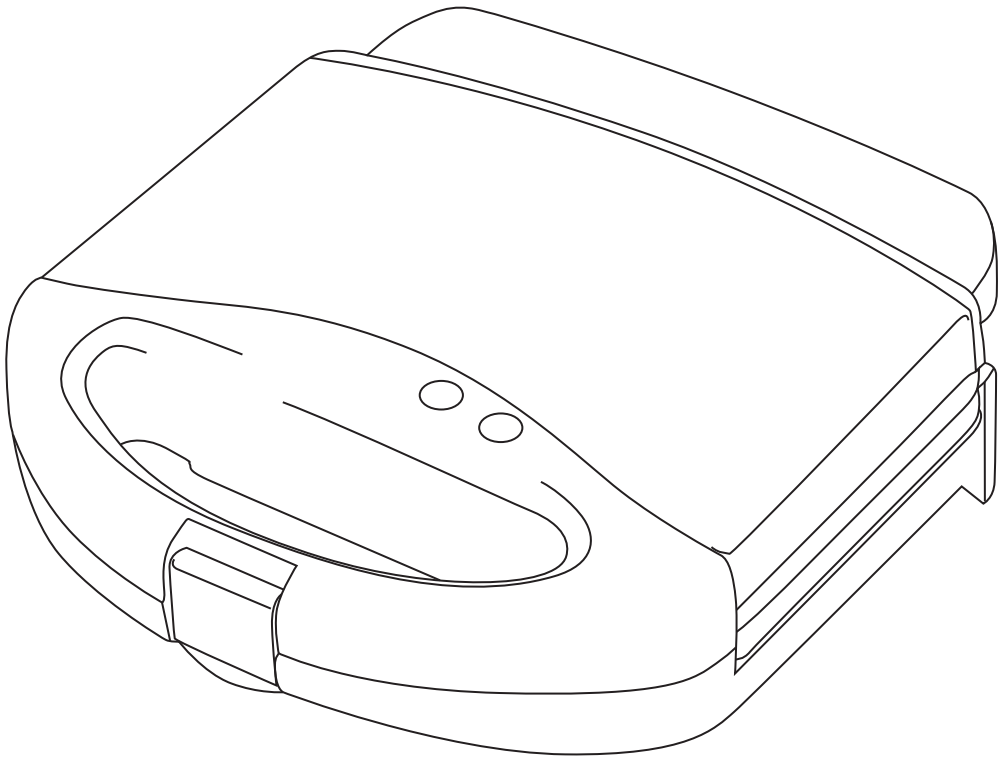

complies with  
INTERNATIONAL  
IEC60355  
SAFETY SPECIFICATIONS



CE  
2 YEAR  
GUARANTEE

Model:  
25301

**PLEASE READ ALL INSTRUCTIONS BEFORE USE**

**2 year guarantee**





## USING YOUR SANDWICH TOASTER

- 1) Before first use clean the surface of the cooking plate with a damp cloth and then wipe again with a dry cloth. Oil the cooking plate with olive oil, butter, margarine, or any cooking fat.
- 2) Insert the plug into a suitable mains supply socket.
- 3) Ensure the appliance is placed horizontal on a flat surface and close the toaster.
- 4) Turn the power on at the mains socket. The red "power" indicator light will illuminate.
- 5) Prepare the sandwich while waiting for the toaster to heat up.
- 6) After 4 to 6 minutes the required temperature would have been reached indicated by the green "ready" indicator light illuminating.
- 7) Open the sandwich toaster and place in the sandwich. Be careful of the hot surfaces.
- 8) For golden brown toasted sandwiches, place the buttered sides of the bread onto the cooking plates.
- 9) Close both halves of the sandwich toaster without placing too much force on the sandwich. If too much force is required to close the sandwich toaster, the clip may come loose or break during toasting.
- 10) Keep the sandwich toaster closed during toasting.
- 11) Toasting time will depend on the type of bread used and personal preferences.
- 12) After toasting is complete open the toaster and remove sandwich with a plastic or wooden utensil. **Never use a metal or sharp object, as this will damage the non-stick coating on the cooking plates.**
- 13) Close the sandwich toaster to retain the heat if further use is required.
- 14) After use, remove the plug from the power socket outlet.

**WARNING: Do not operate the appliance in the vertical position. This is for storage only.**

### Helpful Hints:

- 1) Preheat cooking plates before use.
- 2) Smaller or drier fillings may require pre-toasting of the bread to reduce toasting time in the sandwich toaster.
- 3) You can use butter with herbs for extra flavour.
- 4) Lard on the outside of the bread can improve taste.
- 5) Sprinkling sugar on the outside of the bread will result in crispier toasted sandwiches.

### CARE AND CLEANING

- 1) Always turn the power off, remove the plug from the power supply outlet and allow the product to cool completely before cleaning.
- 2) Wipe the interior as well as the side of the cooking plates with an absorbent tissue, paper towel or soft cloth. **Never use an abrasive cloth to clean the appliance.** Clean after each use to prevent any caking of fillings.
- 3) Re-oil the cooking plates taking care to wipe up any excess oil as this can become hard and sticky during storage.
- 4) Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.

**DO NOT IMMERSE THE APPLIANCE OR THE CORD IN WATER OR ANY OTHER LIQUID.**



## IMPORTANT SAFEGUARDS

### PLEASE READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- 1) To protect against electrical shock, do not immerse any part of the appliance or cord into water or any other liquid.
- 2) Do not touch hot surfaces. Use handles or knobs.
- 3) Close supervision is necessary when the appliance is used by, or near children.
- 4) Do not leave the appliance unattended when not in use.
- 5) Always use the appliance on a dry and stable work surface.
- 6) Do not use this appliance outdoors.
- 7) Always unplug the appliance from the power outlet socket when not in use and before cleaning.
- 8) Do not operate the appliance if damaged, or after it malfunctions. If the appliance is damaged or malfunctions in any manner, return it to the approved service agent for service or repair to avoid any hazard.
- 9) In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged, return the appliance to the approved service agent for service or repair.
- 10) Do not let the cord hang over the edge of the table or work surface, or touch any hot surfaces. Allow the appliance to cool before wrapping cord in cord storage where applicable.
- 11) Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- 12) Do not place the appliance on or near a hot gas or electric burner, in or where it could touch a heated

oven or microwave oven.

- 13) Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- 14) CAUTION: When using this appliance, allow adequate air space above and on all sides for circulation. Keep the appliance away from curtains, dishtowels, wall coverings or any other flammable materials during use. Caution is required on surfaces where heat may cause a problem.

**THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**



## creative housewares

27 Nourse Avenue Epping 2 Cape Town  
P.O. Box 975 Eppindust 7475 South Africa  
Tel: +27 21 534 8114 Fax: +27 21 534 8086  
Service Centre Share Call: 086 111 5006  
web: [www.creativehousewares.co.za](http://www.creativehousewares.co.za)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>