



**mellerware®**

E X E C U T I V E  
F O C U S V A C U U M C L E A N E R



Complies with  
INTERNATIONAL  
IEC60355  
SAFETY SPECIFICATIONS

**m**  
1400W

2 YEAR  
GUARANTEE

Model:  
VAC1400

**PLEASE READ ALL INSTRUCTIONS BEFORE USE**


**2 year guarantee**





Dear customer,

Many thanks for purchasing a MELLERWARE product. Thanks to its technology, design and operation and the fact that it goes through strict quality controls - we feel sure you will be entirely satisfied.

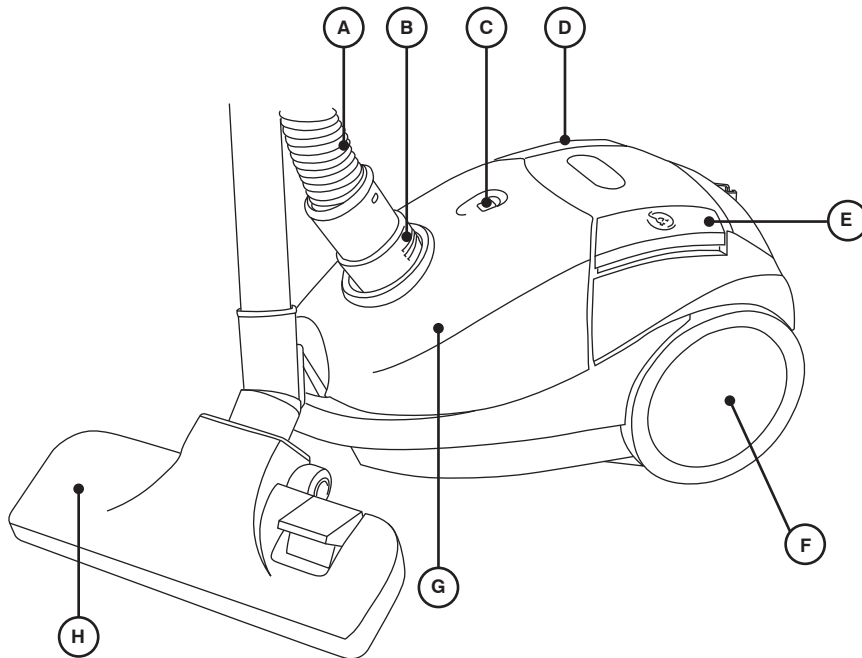

- a) Hose
- b) Hose connector
- c) Dust full indicator
- d) Switch button
- e) Rewinder button
- f) Big wheel
- g) Front cover
- h) Floor tool

 <p><b>Floor tool</b> For carpet and wooden floor, etc.</p>	 <p><b>Crevice tool</b> For corners, cracks, etc.</p>	 <p><b>Bristle brush</b> For sofa, bookshelf, curtain and furniture, etc.</p>
--	--	---





### Power source:

You should only plug your vacuum cleaner into a 230V 50Hz AC supply (or specified on the rating label).

### Using your vacuum cleaner

For safety reasons you should not vacuum wet surfaces, pick up wet objects or use in wet conditions.

Do not use the vacuum cleaner to pick up burning objects as this is fire risk!

Do not use the vacuum cleaner to pick up hot objects such as coal and ashes.

Do not use the vacuum cleaner to pick up large objects that are likely to cause damage.

Do not allow the appliance to run over the supply cord. Do not use this appliance if the supply cord is damaged.

Use only for domestic use. Industrial or commercial use invalidates the warranty.

Most new carpets have a breaking in period in which only light vacuuming is recommended.

Do not let children use the vacuum cleaner. Keep hair, loose clothing, fingers, feet and body parts away from openings or moving parts.

Do not use appliance without filters in place.

### Transporting your vacuum cleaner

To move your vacuum cleaner from room to room, unplug the unit and carry using the carry handle.

Never pull the vacuum cleaner by its cord or the flexible hose when moving.

### Servicing and maintenance

Ensure you replace the filters when necessary.

Always empty the dust when indicated on the vacuum cleaner.


The plug of the power cord must be removed from the wall socket before changing the filters, cleaning the appliance or undertaking any maintenance operations.

If the power cord becomes damaged, do not use the vacuum cleaner, it must be replaced by an authorized service agent.


#### Dust bag

The bag full indicator will automatically change to red when the dust bag is full or when the tube is blocked. The bag should be changed and / or blockage should be removed from the hose or tubes to prevent the vacuum cleaner from overheating and causing damage.


#### To change the dust bag

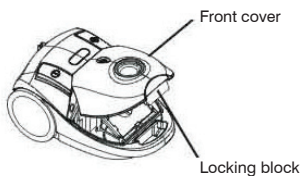

Press the locking block to open the front cover.

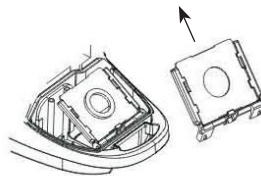

Take out the dust bag holder.  
Take out the dust bag.

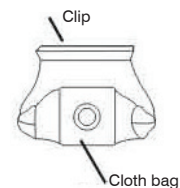

Paper dust bag can't be re-used; cloth bag can be re-used after cleaning.


**Attention:** the opening of the cloth bag must be completely closed by the clip.






## Operation Method:

1.

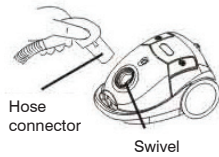


Insert the hose connector into the swivel of the vacuum cleaner.

2.

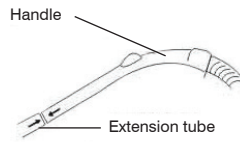


Insert the handle into the tube with a twisting force.

 
3.



4.

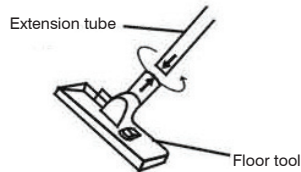


5.

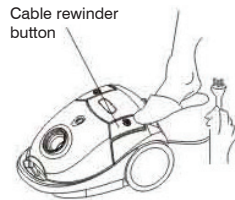


1) Pull out the cord as long as you need, but do not exceed the mark of red and yellow.  
2) Hold the plug when rewinding, you can press the button with your foot to retract the cable into the machine.

6.

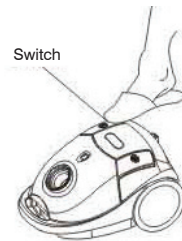

Use the On / Off button to switch the appliance on and off.

7.

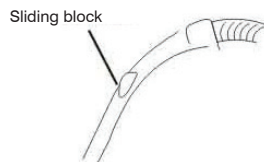


You can adjust the airflow by pushing the sliding block up and down.

8.



If the red buoy of the dust indicator moves into the middle of the small window, please check if (A) the dustbag is full, or (B) has been blocked up somewhere.  
(A) Replace or clean the dustbag.  
(B) Please solve as soon possible.

9.

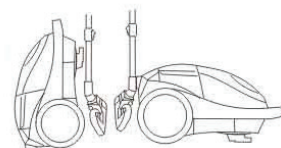

Standing / Vertical Positions: The floor tool may be attached to the appliance by fixing the tool to the designated slot.






## Filter Cleaning:


The filter should be removed and rinsed twice a year or whenever it is visibly clogged. Always operate the unit with the filter installed or damage may occur to the unit.

1.

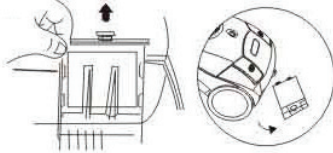


Remove the filters.

2.

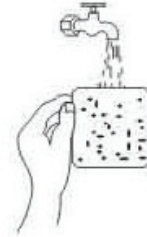


Hand wash in cool soapy water, rinse thoroughly under running water to remove all particles and soap.

3.

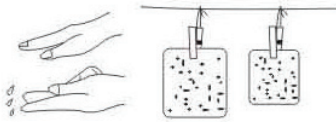

Allow to dry naturally.

4.

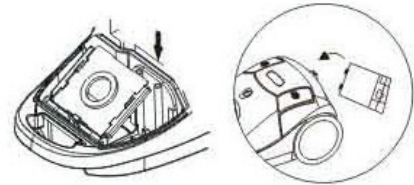

Replace filters when dry. Do not machine wash the filter and do not attempt to dry using any kind of heated appliance.





## creative housewares

27 Nourse Avenue Epping 2 Cape Town  
PO. Box 975 Eppindust 7475 South Africa  
Tel: +27 21 534 8114 Fax: +27 21 534 8086  
Service Centre Share Call: 086 111 5006  
web: [www.creativehousewares.co.za](http://www.creativehousewares.co.za)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>