

mellerware®

makes life easier

BANGKOK
electric
wok



Tempered glass lid
with steam vent

Adjustable
temperature control

High quality
non-stick
coating



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
1500W

2 YEAR
GUARANTEE

Model:
27607



Please save and read this instruction manual carefully before use.

IMPORTANT SAFEGUARDS

When using any electrical appliance, the following basic safety precautions should always be followed:


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
- Close supervision is required when the appliance is used near children.
- Always ensure that the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the power cord or the plug is damaged, it must be replaced by the manufacturer to avoid any injury.
- This product is intended for household use only. Any other use will void the warranty, and the supplier can not be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the appliance to the manufacturer for repair.
- To reduce the risk of electrical shock, do not immerse or expose the plug or the power cord to water or any other liquid.
- Never immerse the appliance in water or any other liquid.
- Remove the plug from the wall socket by gripping the plug. Do not pull on the power cord

to remove the plug. Always unplug the appliance when not it is not in use or before cleaning.

- Do not use attachments or accessories other than those supplied by the manufacturer.
- Do not let the power cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the power cord to touch any hot surfaces and do not place it on or near a hot gas or electric burner or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or where it can be tripped over.
- This appliance is not suitable for outdoor use..
- Do not carry the appliance by the power cord.
- Do not touch hot surfaces directly. Use handles or knobs.
- Extreme caution should be exercised when using or moving the appliance containing hot oil or other hot liquids.
- The heating base and the other parts may become hot. Be sure to use the handle and wear protective oven mitts or gloves.
- Do not leave this appliance unattended during use. Allow the appliance to cool before putting on or taking off parts, and before cleaning the appliance.
- Always operate the appliance on a smooth, even and stable surface. Do not place the appliance on a hot surface.
- The unit must not work via an External Timer or a Separate remote-control system.
- Store in a cool, dry place.

KNOW YOUR ELECTRIC WOK

1. Glass Lid
2. Handle
3. Wok body
4. Temperature controller
5. Nonstick interior surface

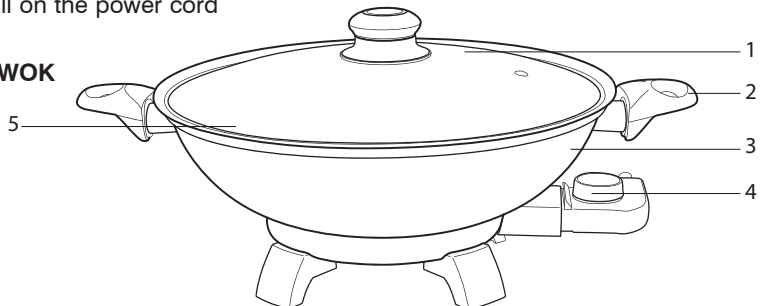



SPECIFICATIONS

Capacity: 4.20 liters

Voltage : AC 230 / 50Hz

Wattage : 1500W

USING YOUR ELECTRIC WOK

You must read all instructions before using.

1. Remove all packing material and please check carefully to ensure that your Electric Wok is in good condition. It must not have any cracks on the unit and no damage to the power cord/plug.
2. Wash the wok in warm, soapy water. Rinse and dry thoroughly.
3. Place wok on a dry and level countertop or table. Keep the edge of the wok 5-10cm away from any walls and objects on the countertop or table.
4. Check the handles on a regular basis to ensure that they are firmly attached to the wok.
5. Do not use abrasive cleaners or scouring pads.
6. Do not immerse the wok, power cord or plug in water at any time.

TO COOK

1. Attach the thermostat to the wok and plug it into the wall socket.
2. Add cooking oil and adjust the cooking temperature to the desired setting. When the indicator light goes off, the temperature has been reached and the wok is ready.
3. Do not cover the wok with the lid when heating up the cooking oil.
4. When cooking is complete, move the temperature dial to "0" position and take food out of the wok.

Remove the plug from the wall socket immediately after you have finished cooking. When the wok has cooled down, remove the thermostat. Allow the wok to cool completely before cleaning.

CARE AND CLEANING

Always ensure that the Electric Wok has cooled down completely and that it is unplugged before cleaning. Following a few general tips can prolong the life of your Electric Wok.

1. Move the temperature dial to the "Off" position and unplug the power cord immediately after cooking.

2. DO NOT pour cold water into a hot Electric Wok
3. Hold the unit at a 45° angle, this will prevent or at least minimize the water getting into the socket.
4. Never scrape with hard or sharp utensils while cleaning. Do not use harsh abrasive cleaners, products or utensils that are not considered safe to use on nonstick coatings.
5. Wash the Electric Wok after each use to avoid stains caused by a build-up of food or grease residues. Never leave food in the Electric Wok overnight.
6. With the wok turned off and completely cold, condition the surface with 1 to 1-1/2 tablespoons of cooking oil; use a kitchen paper towel to wipe it thoroughly.

NOTE:

- Temperature Control Probe - If cleaning is necessary, wipe it with a damp cloth. NEVER IMMERSE THE TEMPERATURE CONTROL PROBE IN WATER AND ANY OTHER LIQUIDS. Always ensure that the probe is completely dry before inserting it into the socket.


- Electric Wok - Wash the inside surface of the Electric Wok in hot soapy water, using a sponge or soft cloth. Do not use any harsh abrasive cleaners. Normal dish washing liquid should be sufficient. Rinse and dry thoroughly, try not to get any water into the socket but if by chance this happens, always ensure the socket is completely dry before inserting the control probe.


- Glass lid - Always ensure the glass lid has cooled down before cleaning. Wash the lid in warm soapy water using a soft sponge, rinse and dry thoroughly.






creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>