


## Operating and Installation Instructions

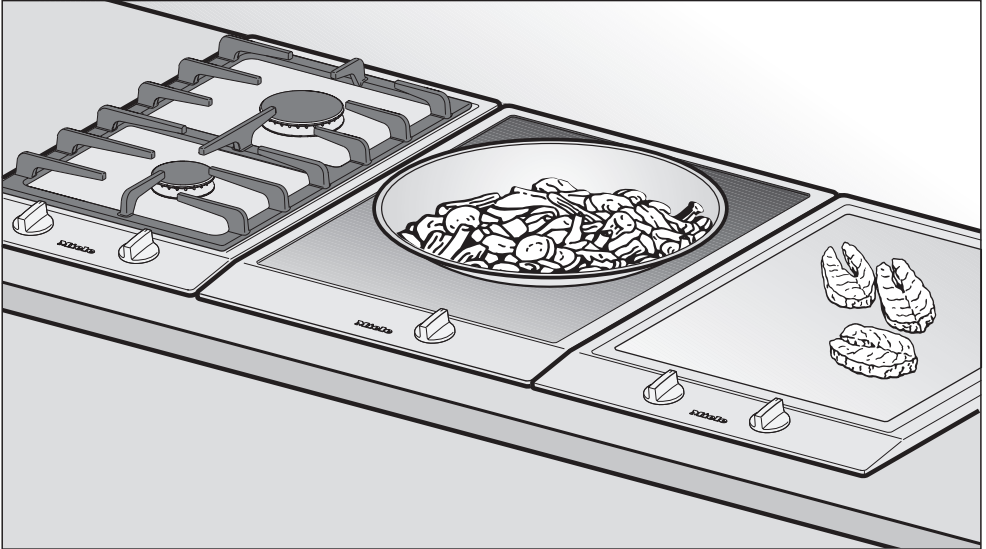

## Ceramic combiset with Induction CS 1212 CS 1221

To prevent accidents and  
machine damage,  
read the Operating Manual  
**before**  
installation or use.

en - CA

M.-Nr. 07 353 950

# Contents

---

<b>IMPORTANT SAFETY INSTRUCTIONS</b> . . . . .	4
<b>Description of the unit</b> . . . . .	9
CS 1212 . . . . .	9
CS 1221 . . . . .	10
Display . . . . .	11
Burner data . . . . .	11
<b>Before using for the first time</b> . . . . .	12
<b>Induction</b> . . . . .	13
How it works . . . . .	13
Noises . . . . .	14
Cookware . . . . .	15
<b>Use</b> . . . . .	16
Turning the combiset On/Off . . . . .	16
Residual heat indicator . . . . .	16
Settings . . . . .	17
Auto-heat . . . . .	18
Booster function . . . . .	19
Keep warm . . . . .	20
<b>Safety features</b> . . . . .	21
Child Safety Lock . . . . .	21
Safety cut-out . . . . .	21
Overheating protection . . . . .	22
<b>Cleaning and care</b> . . . . .	23
<b>Frequently asked questions</b> . . . . .	25
<b>Technical Service</b> . . . . .	27

<b>SAFETY INSTRUCTIONS FOR INSTALLATION</b> . . . . .	30
<b>Installation</b> . . . . .	33
Installation dimensions . . . . .	34
CS 1212 . . . . .	34
CS 1221 . . . . .	35
Cut out . . . . .	36
Installation of multiple appliances . . . . .	37
Attach the spring clips and support bars . . . . .	40
Installing the appliance . . . . .	42
Sealing . . . . .	43
Tiled surfaces . . . . .	43
<b>Electrical connection</b> . . . . .	44
<b>Help protect our environment</b> . . . . .	45

# IMPORTANT SAFETY INSTRUCTIONS

**WARNING- When using your appliance follow basic precautions, including the following:**

**Read all instructions before installation or use to prevent injury and appliance damage.**

**This appliance conforms to all uniform safety codes and regulations. The manufacturer cannot be held responsible for damage or injury caused by improper use of this appliance.**

**Keep these operating instructions in a safe place and pass them on to any future user.**

**SAVE THESE INSTRUCTIONS**

## Correct usage

▶ Only use the combiset for residential cooking, and for the purposes described in this manual.

Other uses are not permitted and can be dangerous. The manufacturer will not be held liable for damage caused by unauthorized use or improper operation of any kind.

▶ Persons who lack physical, sensory or mental abilities, or experience with the appliance should not use it without supervision or instruction by a responsible person.

## Children

▶ Activate the Child Safety Lock so that the combiset cannot be turned on inadvertently.

▶ Children should not be left unattended in an area where the appliance is in use. Never allow children to sit or stand on any part of the appliance.

**Caution:** Do not store items of interest to children in cabinets above the appliance. Children climbing on the appliance to reach these items could be injured.

▶ The appliance is hot during use and remains so for some time after being switched off. Keep children away from the appliance.

▶ Ensure that any packing material, is disposed of safely and kept out of the reach of children. Danger of suffocation!

▶ Keep all pots and pans out of the reach of children. Danger of burning or scalding.

# IMPORTANT SAFETY INSTRUCTIONS

## Technical Safety

► Installation, repair and maintenance work should be performed by a Miele authorized service technician. Work by unqualified persons could be dangerous and may void the warranty.

► Before installing the combiset, check for externally visible damage.

**Do not** operate a damaged appliance.

► To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer will not be held responsible for damages caused by the lack, or inadequacy, of an effective grounding system.

► Before installation, make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent injury and appliance damage. Consult a qualified electrician if in doubt.

► Do not use an extension cord to connect this appliance to electricity. Extension cords do not guarantee the required safety of the appliance.

► Do not use the appliance until it has been properly installed in the countertop.

► Install the appliance so that the power cord does not come into contact with any portion of the cooktop which may become hot during use.

► Before servicing, disconnect the appliance from the main power supply.

► Do not operate any appliance with a damaged cord or plug, or if the appliance has been damaged in any manner. Contact Miele's Technical Service Department.

► Under no circumstances open the outer casing of the appliance.

► The combiset must not be installed outdoors.

► While the appliance is under warranty repairs should only be performed by an authorized service technician. Otherwise the warranty is void.

► In the event of any damage to the appliance, it must be turned off immediately and disconnected from the main power supply. Contact Miele's Technical Service Department. Do not use the appliance until it has been repaired. Ensure power is not supplied to the appliance until repair work is completed.

► Defective components should be replaced by Miele original spare parts only. Only with these parts can the manufacturer guarantee the safety of the appliance.

# IMPORTANT SAFETY INSTRUCTIONS

---

▶ Do not cook on a broken combiset. Any breakages or cracks in the ceramic surface of the appliance are defects and must be treated as such. If the combiset should break, cleaning solutions and spills may penetrate the broken combiset and create a risk of electric shock. Do not use the appliance until it has been repaired.

## Safety

- ▶ Individuals with a pacemaker or similar medical device: Please note that an electromagnetic field develops when the combiset is turned on. It is not likely that this will affect the pacemaker or similar device. If in doubt contact the manufacturer of the device or your doctor.
- ▶ Keep magnetized items, e.g. credit cards, disks, etc. away from the combiset while in operation. Damage may result.
- ▶ Do not touch the combiset or the surrounding areas during or immediately after use. The combiset may be hot even though it is dark in color. Wait until the residual heat indicators go out.
- ▶ Protect your hands with oven mitts or potholders when using the appliance. Use only dry, heat resistant potholders. Moist or damp potholders used on hot surfaces can result in steam burns. Do not let the potholder touch the hot heating elements. Do not use towels or other bulky items near the appliance.
- ▶ Do not heat unopened containers. Built-up pressure may cause the container to burst and result in injury.
- ▶ Do not flambé under an exhaust hood. Flames could be drawn up into the hood by the suction and the grease filters may ignite.

# IMPORTANT SAFETY INSTRUCTIONS

- ▶ Do not store items on the appliance when not in use. Items could melt or catch fire from residual heat or if the appliance is turned on inadvertently. Always switch the cooking zone(s) off after use.
- ▶ Flammable materials should not be stored on or near the appliance.
- ▶ The combiset is fitted with a cooling fan. Drawers under the combiset are not recommended. If a drawer is fitted directly underneath the combiset, ensure that there is sufficient space between the drawer, its contents and the underside of the appliance in order to ensure sufficient ventilation for the combiset. Do not store small items or paper in the drawer. They could get sucked into the housing by the fan and cause damage or impair cooling. Ensure that no aerosols, combustible liquids or other flammable materials are kept in this drawer. If cutlery inserts are to be placed in the drawer they must be made of heat-resistant material.
- ▶ Metallic items kept in a drawer under the combiset can become hot when the appliance is used for a longer period of time. Use caution.
- ▶ If the combiset is installed above a pyrolytic oven it should not be used during the pyrolytic process. The overheating protection feature of the combiset might be activated.
- ▶ Never cover the appliance with a cloth. A fire may result.
- ▶ Be aware of loose fitting or hanging garments when operating the appliance, they may present a fire hazard.
- ▶ Never leave a combiset unattended at high settings or when cooking with oil or fat. Overheated oil could ignite. Always heat oil slowly, monitoring it as it heats.
- ▶ Never heat an empty pan unless the pan manufacturer states that you can do so.
- ▶ Do not use water on grease fires. Smother or use a dry chemical or foam-type extinguisher on any fire or flame.
- ▶ Make certain that the power cords of small appliances do not come in contact with the appliance. The insulation of the cable could become damaged. Danger of electric shock!
- ▶ Be careful not to drop anything on the ceramic surface of the combiset. Even lightweight objects may cause damage.
- ▶ Use the proper pan size. Select cookware with flat bottoms large enough to cover the heating element. Using undersized cookware will expose a portion of the heating element and may result in ignition of clothing or handles becoming hot. The proper size pot or pan will also improve efficiency.

# IMPORTANT SAFETY INSTRUCTIONS

---

▶ Pot and pan handles should be turned inward and not extend over the countertop to reduce the risk of burns, ignition of flammable materials, and spills.

▶ Do not use pots or pans with pronounced edges or ridges on the ceramic combiset. These could scratch the combiset permanently. See "Cookware" for more information. Grains of salt and sand can cause scratches. Make sure that the bases of any pots and pans are clean, free of any fat or oils, and are dry.

▶ To prevent burns and breathing difficulty, allow the combiset to cool before cleaning. Some cleaners may produce toxic fumes if applied to a hot surface.

▶ Keep the combiset clean. Salt, sugar, and grit can cause scratches.

▶ When wiping spills on a hot combiset with a wet sponge or cloth, be careful to avoid steam burns.

▶ Do not let flammable materials, i.e. cooking grease, accumulate on the appliance.

▶ Do not use a steam cleaner to clean this appliance. Steam could penetrate electrical components and cause a short circuit.

▶ Do not allow solid or liquid sugar, pieces of plastic or foil to fall on the burner when hot. If these residues are allowed to cool on the ceramic surface pitting or even cracking may occur.


▶ Any spills should be removed as quickly as possible to prevent them from burning on and becoming difficult to remove.

The manufacturer cannot be held liable for damage caused by non-compliance with these Important Safety instructions.

**SAVE THESE INSTRUCTIONS  
AND REVIEW THEM  
PERIODICALLY**



## CS 1212

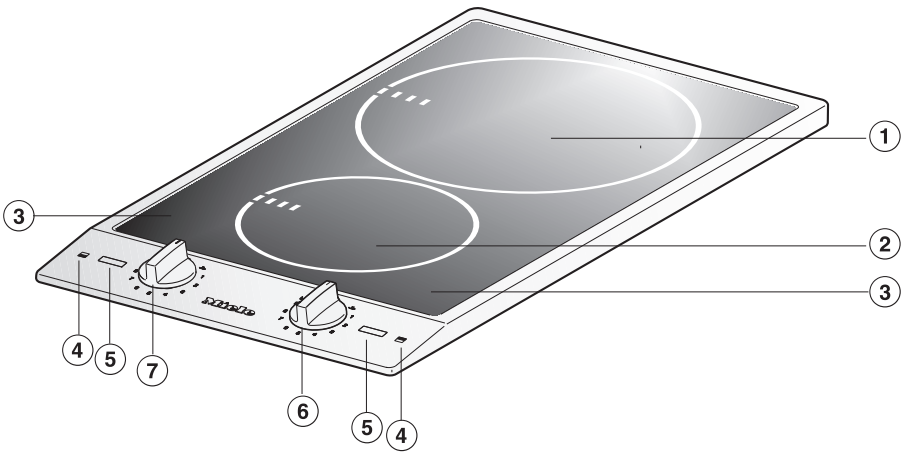


- ① Burner with double booster (BI/II)
- ② Burner with single booster (BI)
- ③ Display
- ④ Cooking zone indicators
- ⑤ Indicators

Control knobs for the burners:

- ⑥ rear
- ⑦ front

### Indicators

 


- ⑫ On/Off indicator
- ⑬ Booster indicator
- ⑭ "Residual Heat" indicator

# Description of the unit

---

## CS 1221

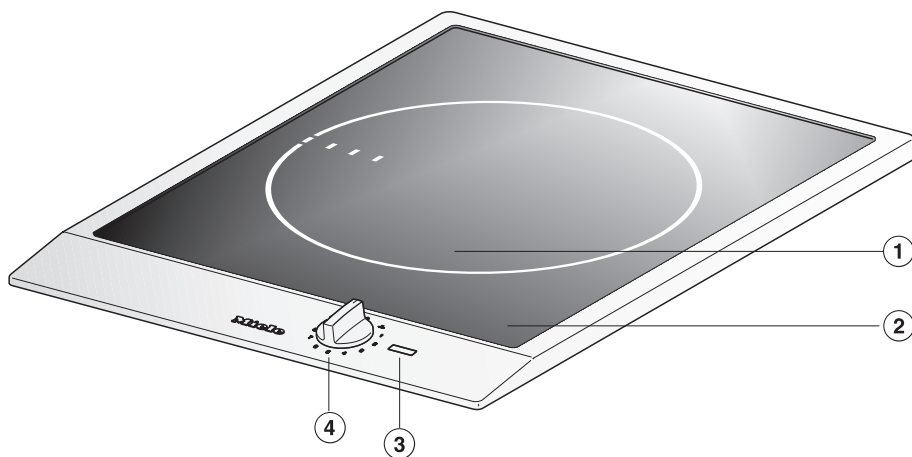

- ① Burner with double booster
- ② Display
- ③ Indicators
- ④ Control knob

### Indicators



- ⑫ On/Off indicator
- ⑬ Booster indicator
- ⑭ "Residual Heat" indicator

# Description of the unit

## Display

- U** = No pan on burner or pan is unsuitable  
**R** = Auto-heat  
**F** = Fault (see "Frequently asked questions")  
**E / O** = Safety cut-out feature (see "Safety features")  
**I** = Booster I activated  
**II** = Booster II activated  
**H** = Overheating protection (see "Safety features")  
**L** = Child safety lock (see "Safety features")

## Burner data

Burner	CS 1212		
	Minimum to maximum diameter in cm*	Rating in watts 240 V**	
Front	(10 cm - 16 cm)	normal: with Booster:	1400 1800
Rear	(16 cm - 23 cm)	normal: with Booster I: with Booster II:	2300 3000 3700
		Total:	3700

CS 1221		
Minimum to maximum diameter*	Rating in watts 240 V**	
7" - 11 3/4" (18 cm - 30 cm)	normal: with Booster I: with Booster II:	2400 3000 3700

\* Pots with a bottom diameter in the stated range may be used.

\*\* The stated power may vary depending on the size and material of the cookware.

## Before using for the first time

---

### Clean the combiset

- Before using for the first time, clean the appliance with a damp cloth and dry with a soft cloth.

Do not use liquid dish soap to clean the combiset, this may cause permanent blue discolorations.

### Heat the appliance

When the combiset is first connected to the power supply and after a power failure, all indicators in the display will light up for approx. 1 second. The combiset can be used as normal once the indicators go out.

Metal components of the appliance have a protective coating which may give off a slight odor the first time the appliance is heated.

The smell will dissipate after a short time and does not indicate a faulty connection or appliance defect.

## How it works

An induction coil is located under the burner. When the burner is switched on, this coil creates a magnetic field which impacts directly on the base of the pan and heats it up. The burner itself is heated indirectly by the heat given off by the pan.

Induction burners only work when a magnetic based pan is placed on it (see "Cookware").

Induction automatically recognizes the size of the pan, i.e. heat is only generated in the area covered by the base of the pan.

The burner will not work:

- if it is switched on without a pan in place, or if the pan is unsuitable (non-magnetic base).
- if the diameter of the pan is too small.
- if the pan is taken off the burner when it is turned on.

If this happens, **E** will flash in the display.

If a suitable pan is placed on the burner within 3 minutes, **E** will go out and you can continue cooking as normal.

If no pan or an unsuitable pan is placed on the burner, the burner and the combiset will switch off automatically after 3 minutes. **E** will flash alternately with **E** in the display.

To use the burner again as normal, first turn the control knob to "0".

Be careful not to place cutlery or other metal objects on the combiset. When the appliance is switched on, or when there is residual heat present, there is the risk of metal objects heating up quickly. Beware of burns. Depending on the material, other objects left on the combiset could also melt or catch fire. Turn off the burner after use.

# Induction

---

## Noises

When using an induction burner, the following noises can occur in the pan, depending on what it is made of and how it is constructed.

- Higher power settings may cause a buzz. This will decrease or cease altogether when the power setting is reduced.
- If the pan base is made of layers of different materials (e.g. a sandwiched base), a cracking sound may be heard.
- You may hear a clicking sound from the electronic switches, especially on lower settings.

The appliance has a cooling fan to help extend the life of the electronics. When the combiset is being used at high levels for a long period of time, this will come on and you will hear a whirring sound. The fan may continue to run after the appliance has been switched off.

## Cookware

### Suitable pans include:

- stainless steel pans with a magnetic base
- enameled steel pans
- cast iron pans

### Unsuitable pans:

- stainless steel pans without a magnetic base
- aluminum and copper pans
- glass, ceramic or earthenware pots and pans

To test whether a pot or pan is suitable for use on an induction combiset, hold a magnet to the base of the pan. If the magnet sticks, the pan is suitable.


Unless the pan manufacturer states that you can do so, do not use pans with very thin bases on this combiset, and never heat empty pans. This could damage the appliance and cookware, and effect the uniformity of the cooking.

## Pan size

To make optimum use of the burner, choose cookware that fits between the inner and outer marking of the burner. If the base diameter of the pan is smaller than the inner marking, the induction heating will not work. The burner will behave as if it has no pan on it.


# Use

## Turning the combiset On/Off

 Do not leave the appliance unattended while in use.

To turn the combiset on turn the control knob clockwise ① to the desired power level.

To turn the combiset off turn the control knob counterclockwise ② to "0".

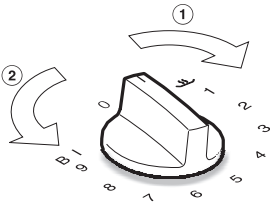

## Residual heat indicator

The residual heat indicator will go out once the combiset has cooled to a safe temperature.

As long as the residual heat indicator is lit do not touch or place any heat sensitive items on the burner. Danger of burns, and fire hazard.


The knob must only be turned clockwise to turn the burner on and counterclockwise to turn the burner off.

When the combiset is turned on the On/Off indicator lights up. Once the combiset has reached a factory set temperature the residual heat indicator will light.

When the combiset is turned off the On/Off indicator will go out.



## Settings

Use for	Power level*
Melting butter, chocolate, etc. Dissolving gelatin Prepare yogurt	1 - 2
Warming small quantities of food or liquid Keeping delicate dishes warm Cooking rice, Thawing frozen vegetables	1 - 3
Warming liquid or half-set foods Thickening sauces, e.g., hollandaise sauce Cooking rice pudding	2 - 4
Defrosting frozen foods Steaming vegetables, fish, etc. Cooking pasta, soups, etc. Steaming grains	3 - 5
Boiling and continued cooking of large quantities of food	5 - 6
Gently sautéing fish, cutlets, sausages, fried eggs, etc. (without smoking the oil/fat)	7
Frying pancakes, crepes, etc.	7 - 8
Boiling large quantities of water Parboiling	9
Keep warm	

\* These settings are intended as guidelines only. When cooking with large pots, large quantities of food/liquid or without using a lid, a higher setting is needed. For smaller quantities select a lower setting.

# Use

---

## Auto-heat

When Auto-heat has been activated, the burner switches on automatically at the highest setting and then switches to the continued power level which was selected. The "heat-up" time depends on which continued power level has been chosen (see table).

Continued power level*	Heat-up time (approx.) min : sec
1	0 : 15
2	0 : 15
3	0 : 25
4	0 : 50
5	2 : 00
6	5 : 50
7	2 : 50
8	2 : 50
9	-

The higher continued cooking settings are generally used for frying, a short heat-up time is needed to heat up the pan initially.

Taking a pan off the burner while Auto-heat is in operation interrupts the function. It will resume if a pan is placed back on the burner within 3 minutes.

## Activating Auto-heat

- Turn the control knob counterclockwise as far as it will go and hold until an *H* appears in the display.
- Turn the control knob clockwise to the desired continued power level.

Once Auto-heat has been activated the continued power level must be set within 10 seconds. After this time the level cannot be changed.

Changing the continued power level after 10 seconds will deactivate the Auto-heat function.

During the Auto-heat phase an *H* will show in the display.

## Booster function

The burner is equipped with a booster function to temporarily increase the power level. This boost is intended to quickly bring large quantities of water to the boil, e.g. cooking pasta. When the Booster is activated the burner will operate with extra power for 10 minutes.

Once the booster time has elapsed the burner will automatically revert to power level 9. The **B** indicator and *I* or *II* in the display will go out.

Taking a pan off the burner while the booster is in operation interrupts the booster function. It will resume if a pan is placed back on the burner within 3 minutes.

### To activate Booster I

- Turn the control knob past power level 9 to BI/II, then turn back to level 9.

*I* appears in the display and the **B** indicator lights up.

### To activate Booster II

- Turn the control knob past power level 9 to BI/II, then turn back to level 9.

*I* appears in the display and the **B** indicator lights up.

- Turn the control knob again past power level 9 to BI/II, then turn back to level 9.

*II* appears in the display.

### To deactivate the Booster function

The booster function can be turned off early if desired.

- Turn the control knob so often past power level 9 to BI/II and back to 9 until the symbol *I* respectively *II* goes out in the display; or simply reduce the power level.

# Use

---

## Keep warm

This function can be used for keeping food warm right after it has been cooked. It is not for reheating food which has already cooled.

Once activated the keep warm function will switch off automatically after 2 hours.

## Tips

- Cover the pan with a lid.
- It is not necessary to stir the food while it is being kept warm.
- Nutrients are lost when food is cooked, therefore try to keep the warming time to a minimum.

## Child Safety Lock

Keep children away from the combiset for their own safety.

The combiset has a Child Safety Lock to prevent children from turning on the burner.

### To activate the Child Safety Lock:

- Turn the control knob counterclockwise as far as it will go, and hold until **L** appears in the display.

If the control knob is touched after the lock is activated an **L** will appear in the display for 3 seconds.

### To deactivate the Child Safety Lock:

- Turn the control knob counterclockwise as far as it will go, and hold until the **L** goes out and **D** appears briefly in the display.

## Safety cut-out

The combiset has a safety cut-out feature in case it is not turned off after use.

If the burner is heated for an unusually long period of time (see table), and the power level settings are not adjusted, the combiset will turn itself off automatically and the residual heat indicator will light.

**L** and **D** will flash alternately in the display.

- To use the combiset again, first turn the control knob to "0". The On/Off indicator and the display will go out.

Power level	Maximum operating hours
1	10
2	5
3	5
4	4
5	3
6	2
7	2
8	2
9	1

# Safety features

---

## Overheating protection

The induction coils and the cooling element of the electronics are fitted with an overheating protection feature. This prevents the induction coils and cooling element from overheating.

This mechanism works in the following ways:

- If the booster function is being used, it will be switched off.
- The power level will be reduced.
- If an induction coil is affected, the burner will turn off and an **H** will appear in the display.

■ Turn the control knob to "0".

Once the **H** has gone out, the combiset can be used again as normal.

If the control knob is not turned back to "0", **E** and **D** will flash in the display. To use the burner again, first turn the control knob to "0".

- If the cooling element is affected, the power supply to the burner will be reduced.

Once the cooling element has cooled sufficiently the burner will continue working again at the original power level.

- If the temperature continues to rise after the power level has been reduced, the burner will switch off.

**E** and **D** will flash alternately in the display.

■ Turn the control knob to "0".

Once the burner has cooled to a safe temperature the combiset can be used again as normal.

The overheating protection feature may be activated by:

- heating an empty pan,
- oils or fats being heated on the highest power level,
- the underside of the appliance is not sufficiently ventilated.

If the overheating protection feature activates again, contact Miele Technical Service.

Do not use a steam cleaner to clean this appliance. Steam could penetrate electrical components and cause a short circuit. Pressurized steam could cause permanent damage to the surface and to components for which the manufacturer cannot accept responsibility.

Do not use any sharp pointed objects which could damage the seal between the ceramic surface, the surrounding frame and the countertop.

Never use abrasive cleaners, caustic (oven) cleaners, dishwasher detergent, scouring pads, steel wool or hard brushes. They will damage the surface.

The ceramic surface can be cleaned using a cleaner for ceramic surfaces. Follow the manufacturer's instructions.

Make sure that no cleaner residue remains on the ceramic surface by carefully wiping the combiset with a damp cloth. They may damage the combiset or produce toxic fumes when heated.

Be sure that pot and pan bases are clean and dry.

After cleaning dry the ceramic surface with a soft cloth to prevent a build up of limescale deposits.

Clean any spills immediately before they become difficult to remove.

Clean the appliance regularly, preferably after each use. Allow the appliance to cool before cleaning.

## Ceramic surfaces

- Wipe off any soiling using a damp cloth. Stubborn soiling is best removed with a shielded scraper blade.
- Apply a ceramic cleaner (available from Miele) using a soft cloth or paper towel.
- To remove any limescale deposits or metallic residue apply a ceramic cleaner using a soft cloth or use a shielded scraper blade if necessary.
- After cleaning wipe the ceramic surface with a damp cloth and dry.

A cleaner with a special additive to prevent water marks and smears on the ceramic surface may be used.

Any melted solids like **sugar, plastic or aluminum foil** should be removed as quickly as possible, while the burner is still warm. If they are allowed to harden the combiset may become pitted.

- Turn the burner off.
- Using a shielded scraper blade, scrape the melted item **immediately** off the burner while it is still hot.  
**Use caution:** Danger of burns!
- Allow the combiset to cool and clean as previously described.

# Cleaning and care

---

## Stainless steel

Clean stainless steel surfaces with warm water and liquid dish soap applied with a non-abrasive sponge and then wipe dry with a soft cloth. Soak baked or hardened spills first to loosen them.


Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner (available from Miele).

To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure.

Do not use stainless steel cleaner on or around the **printing**, it may rub off. Use only a soft sponge with a mild solution of warm water and liquid dish soap to clean this area.



## Frequently asked questions

 Repairs should only be carried out by an authorized technician in accordance with local and national safety regulations. Unauthorized repairs could cause injury or appliance damage. The manufacturer cannot be held responsible for unauthorized work.

### What if the burner does not heat up after it is turned on?

Possible fault	Solution
The Child safety lock is activated.	See "Child safety lock".
The Overheating protection feature has activated.	See "Overheating protection".
The main fuse has blown.	Check the main fuse. Replace the fuse or "trip" the circuit breaker.
If none of the above is the case, turn the control knob to "0", and disconnect the appliance from the electrical supply for 1 minute. Reconnect the power and turn the appliance on. If it still does not heat, contact Miele Technical Service.	

### What if $\cup$ appears in the display?

Possible fault	Solution
The burner is turned on but no cookware is placed on it.	Turn the burner off and place suitable cookware on it.
The pan being used is not suitable for the combiset or is not the right size.	See "Cookware" for information on type and size of suitable cookware.

### What if an $F$ appears in the display?

Possible fault	Solution
The temperature sensor for the burner is faulty.	Do not use the combiset until it has been repaired. Contact Miele Technical Service.

## Frequently asked questions

---

### What if the combiset turns itself off automatically?

Possible fault	Solution
Either the "Safety cut-out" feature or the "Overheating protection" feature has been activated.	See "Overheating protection" or "Safety cut-out".

### What if one of the following errors occurs:

- The booster function turns off automatically ahead of time.
- $\llcorner$  and  $\lrcorner$  flash alternately in the display.
- $H$  is shown in the display.

Possible fault	Solution
The overheating protection feature has been activated.	See "Overheating protection".

### The food does not cook when using the Auto-heat function.

Possible fault	Solution
Large amounts of food are being cooked.	Select a higher continued power level or begin cooking at the highest level and turn the power back by hand.
The pot or pan does not transfer the heat properly.	Use the correct pots and pans, see "Cookware".


### The cooling fan continues to run after the combiset is turned off.

Possible fault	Solution
This is not a fault.	The fan continues to run until the appliance has cooled sufficiently. It will turn off automatically.

In the event of a fault which you cannot easily fix yourself, please contact the Miele Technical Service Department at the address on the back of this booklet.

When contacting Technical Service please quote the serial number and model of the appliance. This information is visible on the silver data plate supplied with the appliance.



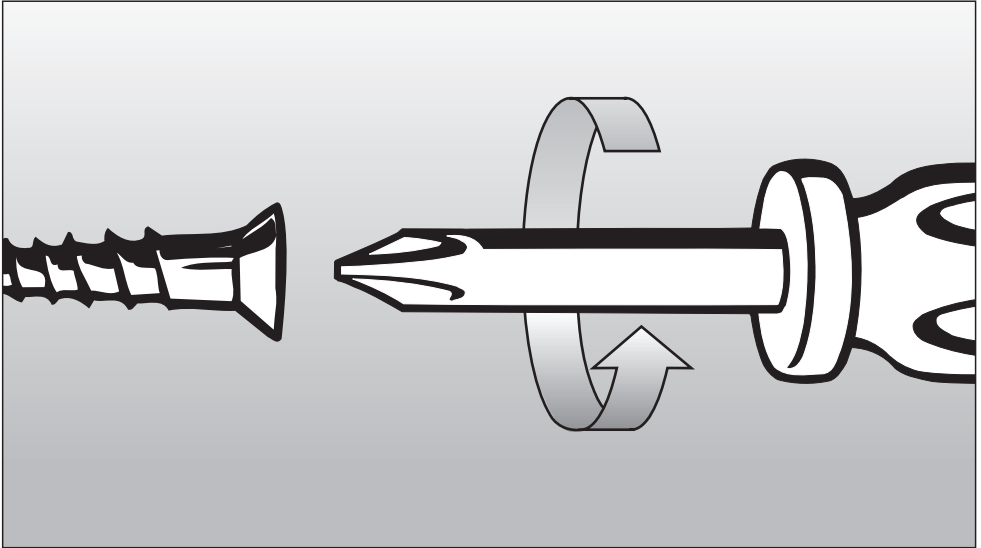

## Installation Instructions

IMPORTANT: SAVE FOR THE LOCAL ELECTRICAL INSPECTOR'S USE

To prevent accidents  
and machine damage  
read these instructions

**before**  
installation or use.

# SAFETY INSTRUCTIONS FOR INSTALLATION

## Note to the installer:

**Please leave this instruction book with the consumer for the local electrical inspector's use.**

The minimum distances given in these Installation Instructions must be observed in order to ensure safe operation. Failure to do so increases the risk of fire.

The cabinetry and venting hood should be installed first to prevent damage to the appliance.

- ▶ The countertop must be bonded with heat resistant (212 °F/100 °C) adhesive to prevent distortion or dissolving. Any back splashes must be heat-resistant as well.
- ▶ The appliance must not be installed over a dishwasher, washer, dryer, refrigerator or freezer. Heat radiated by the appliance may damage them.
- ▶ To eliminate the risk of burns or fire by reaching over heated surfaces cabinet storage space above the appliance should be avoided. If cabinet storage is necessary, the risk can be reduced by installing a venting hood to project horizontally a minimum of 5" (127 mm) beyond the bottom of the cabinets.

▶ This appliance has not been designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft. However, under certain conditions it may be possible for installation in these applications. Please contact the Miele Technical Service Department with specific requirements.

▶ You must ensure the power cord for the appliance will not be subject to any mechanical strain after installation.


▶ If a protective base is installed beneath the appliance, a minimum distance of 1 <sup>9</sup>/<sub>16</sub>" (40 mm) between the top of the protective base and the bottom of the appliance must be maintained.

▶ The appliance must not be permanently sealed into the countertop when installed. The sealing strip under the edge of the appliance provides a sufficient seal for the countertop. See "Sealing".

**Keep this instruction book in a safe place for reference and pass it on to any future user.**

# SAFETY INSTRUCTIONS FOR INSTALLATION

## Safety distances above the appliance

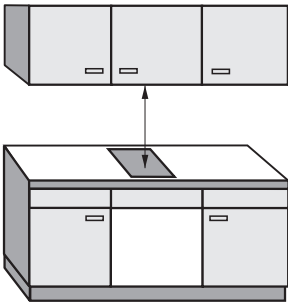

If there is more than one appliance beneath a hood (e.g. wok burner and electric combiset), and they have different minimum safety distances always observe the greater distance.

The minimum safety distance given by the hood manufacturer must be maintained between the combiset and the hood above it. See the installation instructions of the hood for these safety measurements.

If the hood manufacturers instructions are not available or if flammable objects are installed over the combiset (e.g. cabinets, utensil rail, etc.), a minimum safety distance of 30" (760 mm) must be maintained.

# SAFETY INSTRUCTIONS FOR INSTALLATION

## Safety distances to the sides of the appliance

The appliance should only be installed as shown in the illustrations, while maintaining the required safety distances shown. Do not install the appliance between two tall cabinets, this is a fire hazard.


 
A distance of at least 2" (50 mm) must be kept between the countertop cut-out and the rear wall because of the high temperatures radiated.

The minimum distance ① between the worktop cut-out and a wall or tall unit to the right or left of it is:


**2" (50 mm)** for CS 1112  
CS 1122  
CS 1212  
CS 1221  
CS 1223  
CS 1326  
CS 1411

**6" (150 mm)** for CS 1312  
CS 1322  
CS 1421


**10" (250 mm)** for CS 1011  
CS 1012  
CS 1028

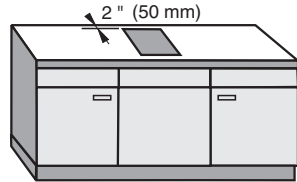

**recommended**

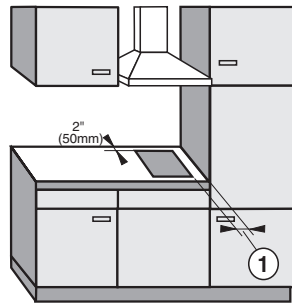

**not recommended**

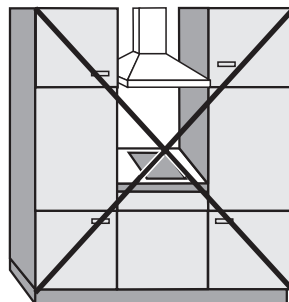


**not permitted**



## Safety distance when installing the appliance near a wall with trim or a back splash

A minimum distance of 2" (50 mm) between the trim or back splash and the countertop cut-out if required.

This distance is only necessary if these items are made of combustible materials e.g. wood. If the trim or back splash is made of a non-combustible material, the required safety distance can be reduced by the thickness of the wall covering material.

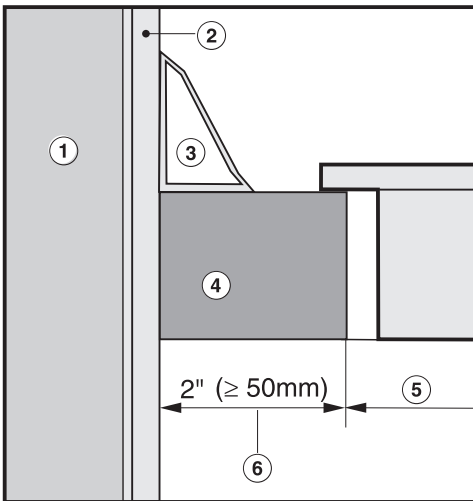


- ① Wall frame
- ② Sheet rock or wall board
- ③ Trim or back splash
- ④ Countertop
- ⑤ Countertop cut-out
- ⑥ 2" (50 mm) minimum clearance

# Installation


## Installation dimensions

### CS 1212

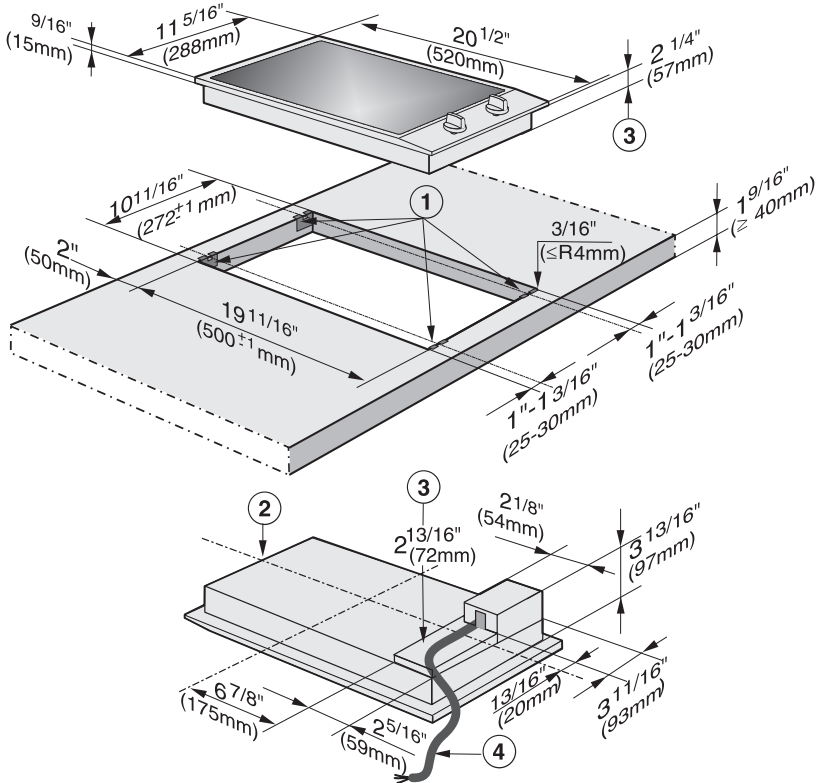

- ① Spring clips
- ② Appliance front
- ③ Installation height
- ④ Power supply box with connection cable

## CS 1221

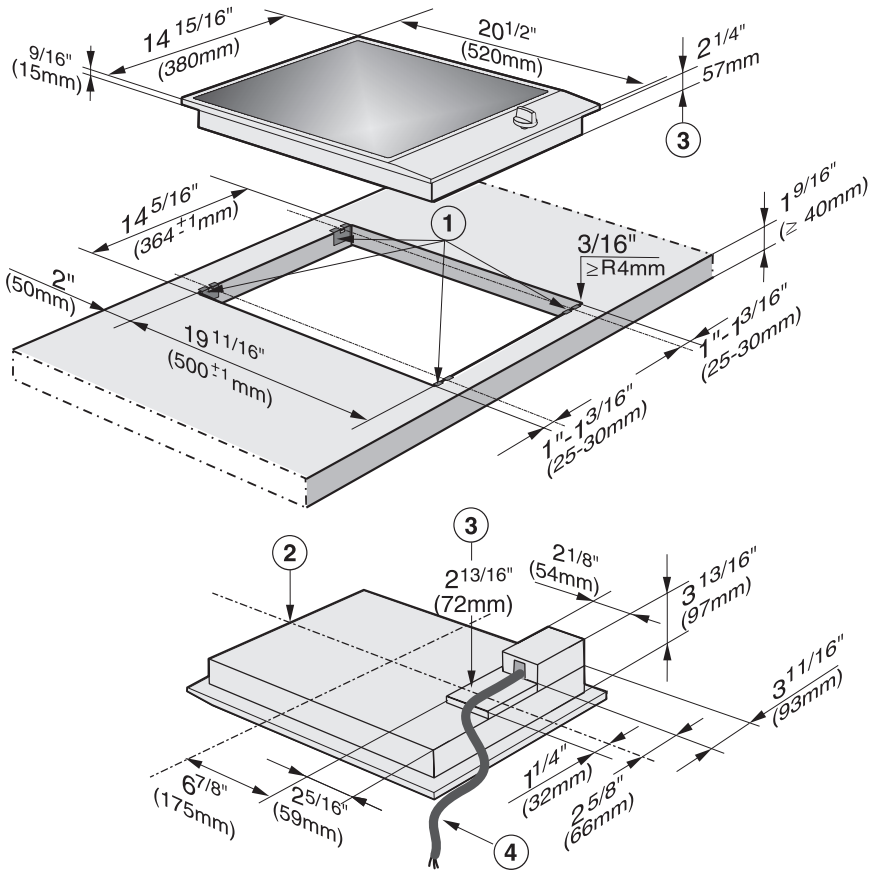

- ① Spring clips
- ② Appliance front
- ③ Installation height
- ④ Power supply box with connection cable

# Installation

---

## Cut out


- Make the worktop cut-out for one or more appliances as applicable. Remember to maintain a **minimum safety distance** from the **back wall**, as well as from any **tall unit or side wall** to the right or left of the appliance(s). See also "SAFETY INSTRUCTIONS FOR INSTALLATION".
- Seal the cut surfaces with a suitable sealant to avoid swelling caused by moisture. The materials used must be heat resistant.

If during installation the seal around the frame does not sit flush with the countertop in the corners, the corner radius, maximum  $\frac{3}{16}$ " (4 mm), can be carefully filed down to fit.

## Installation of multiple appliances

When installing more than one combiset appliance, a support bar ② must be installed between the appliances.

### Countertop cut-out two appliances

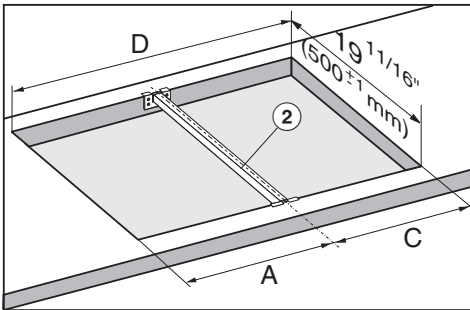


For the installation of **two appliances** the width of the countertop cut-out D is the sum of A and C.

**A, B** and **C** = appliance widths  
 $11 \frac{5}{16}$ " , 15" or  $22 \frac{11}{16}$ "  
 (288 mm, 380 mm or 576 mm)  
**minus  $\frac{5}{16}$ " (8 mm)** to allow for the overhang

**D** = width of the countertop cut-out

### Countertop cut-out three appliances

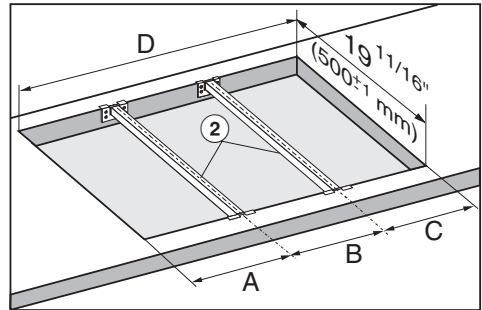


For the installation of **three appliances** the width of the countertop cut-out D is the sum of A and B and C.

If **more than three appliances** are being installed, you will need to add, A, B or C for each additional appliance.

# Installation

## Sample calculations for a countertop cut-out for three appliances

<b>A</b> appliance width minus $\frac{5}{16}$ " (8 mm)	<b>B</b> appliance width	<b>C</b> appliance width minus $\frac{5}{16}$ " (8 mm)	<b>D</b> <b>Countertop cut-out</b>
11" (280 mm)	$11 \frac{5}{16}$ " (288 mm)	11" (280 mm)	$33 \frac{3}{8}$ " (848 mm)
11" (280 mm)	15" (380 mm)	$14 \frac{5}{8}$ " (372 mm)	$40 \frac{5}{8}$ " (1032 mm)
11" (280 mm)	$22 \frac{11}{16}$ " (576 mm)	$22 \frac{3}{8}$ " (568 mm)	$56 \frac{1}{16}$ " (1424 mm)
$14 \frac{5}{8}$ " (372 mm)	$11 \frac{5}{16}$ " (288 mm)	11" (280 mm)	37" (940 mm)
$14 \frac{5}{8}$ " (372 mm)	15" (380 mm)	$14 \frac{5}{8}$ " (372 mm)	$44 \frac{1}{4}$ " (1124 mm)
$14 \frac{5}{8}$ " (372 mm)	$22 \frac{11}{16}$ " (576 mm)	$22 \frac{3}{8}$ " (568 mm)	$59 \frac{11}{16}$ " (1516 mm)
$22 \frac{3}{8}$ " (568 mm)	$11 \frac{5}{16}$ " (288 mm)	11" (280 mm)	$44 \frac{3}{4}$ " (1136 mm)
$22 \frac{3}{8}$ " (568 mm)	15" (380 mm)	$14 \frac{5}{8}$ " (372 mm)	52" (1320 mm)
$22 \frac{3}{8}$ " (568 mm)	-	$22 \frac{3}{8}$ " (568 mm)	$44 \frac{3}{4}$ " (1136 mm)

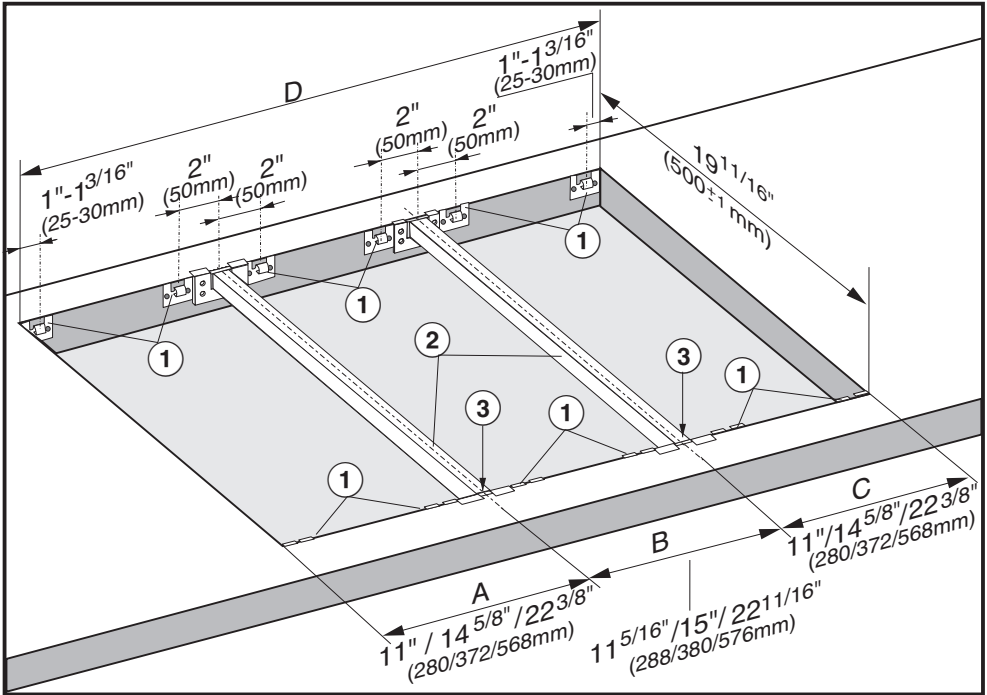


- ① Spring clips
- ② Support bars
- ③ Space between support bar and countertop

An additional support bar is required for each additional appliance. The position for attachment of an additional spacing strip depends on the width of the appliance **B**.




# Installation

## Attach the spring clips and support bars

### Wood or solid surface countertops

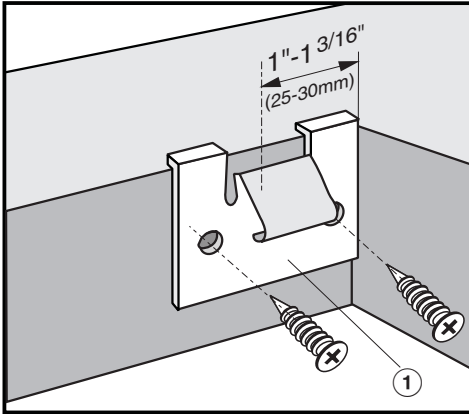

### Granite countertop

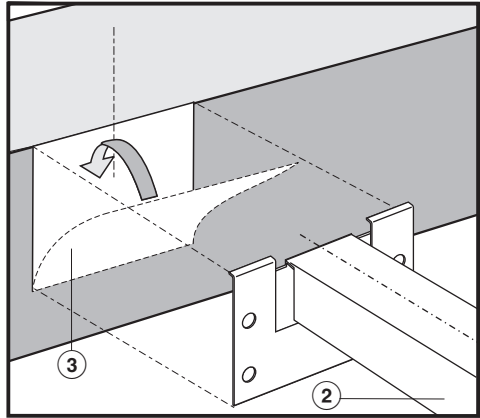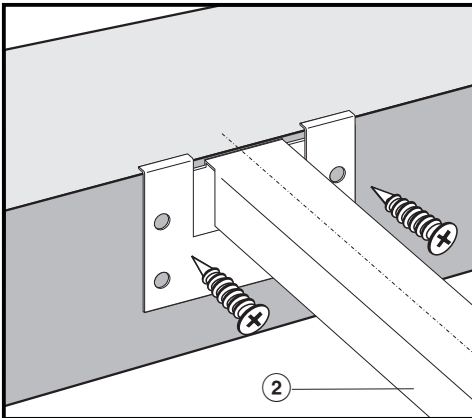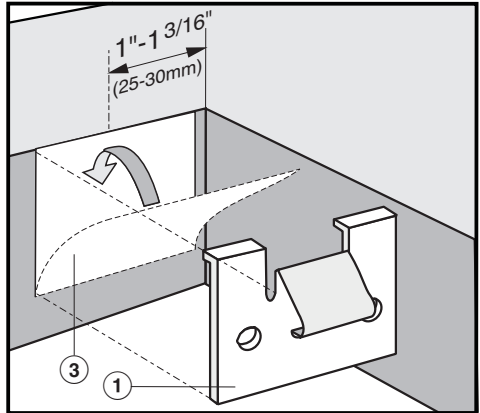


- Place the supplied spring clips ① and the support bars ② at the marked positions as shown above, by laying them on the upper edge of the cut-out and then securing them with the  $\frac{1}{8}$ " x 1" (3.5 x 25 mm) screws (supplied).


- Position and attach the spring clips ① and support bars ② with strong, double-sided tape ③.

The screws are not needed for granite countertops.



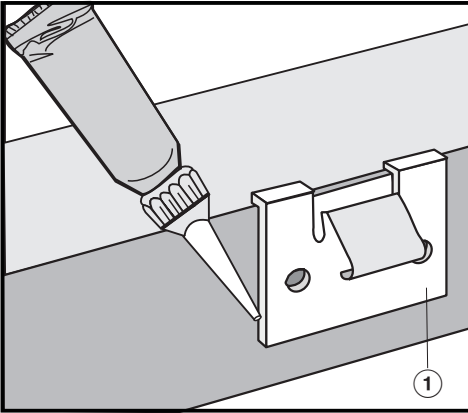

- Coat the edges of the spring clips ①,

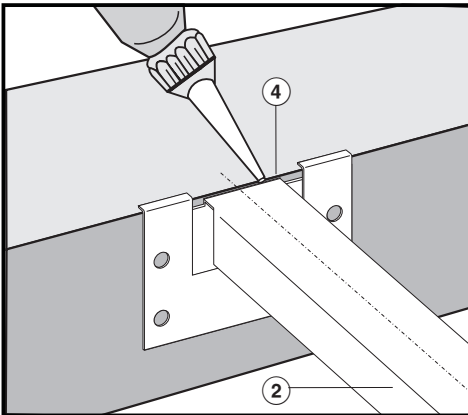

- and the space ④ between the strips ② and the countertop with silicone (supplied).

# Installation


---

## Installing the appliance

- Feed the power cord down through the cut-out.
- Then place the front side of the appliance in the countertop cut-out.
- Then with a hand on each side of the appliance press down evenly on the edges until it clicks into position. When doing so make sure that the appliance seal sits tightly on the countertop to ensure it is sealed correctly. **Do not** permanently seal into the countertop.
- Connect the appliance to the main power supply.
- Turn the appliance on and check the function.

The appliance can be lifted out using a special tool.  
The appliance can also be pushed up and out from underneath. Note that the rear will need to be pushed out first.


## Sealing

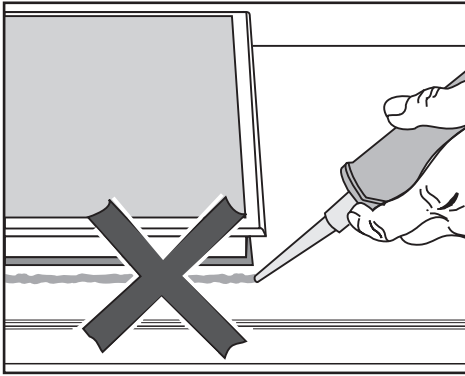

The appliance must not be permanently sealed into the countertop when installed. The sealing strip under the edge of the appliance provides a sufficient seal for the countertop.

If the appliance is sealed into position, the countertop or appliance could be damaged if it needs to be removed for maintenance or service.


## Tiled surfaces

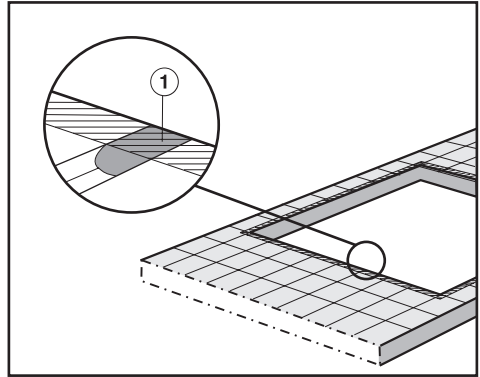

The grouting ① and shaded area under the appliance frame must be flat and even, so that the frame will lie evenly and the sealing strip under the edge of the upper part of the appliance can provide an adequate seal against the countertop.

# Electrical connection

---

 **CAUTION:** Before installation or servicing, disconnect the power supply by either removing the fuse, shutting off the main power supply or manually "tripping" the circuit breaker.

Installation work and repairs should only be performed by a qualified technician in accordance with all applicable codes and standards. Repairs and service by unqualified persons could be dangerous and the manufacturer will not be held responsible.

Before connecting the appliance to the power supply, make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent appliance damage. Consult an electrician if in doubt.

Only operate the combiset after it has been installed into the countertop.

**Installer:**  
**Please leave these instructions with the consumer.**

## Power supply

- Be sure your electrical supply matches the data plate.

The combiset is equipped with a flexible metal conduit encasing 3 wires ready for connection to a grounded power supply.

A dedicated line and junction box should be used to connect the combiset to a 15 A circuit.

Black wire: connect to L1 (hot)


Red wire: connect to L2 (hot)

Green wire: connect to GND (ground)

240 V, 60 Hz, 15 A fuse rating.

Be sure the power outlet is accessible after installation.

For further information, see the wiring diagram provided with the appliance.

 **WARNING:**  
**THIS APPLIANCE MUST BE GROUNDED!**

### **Disposal of packing materials**

The cardboard box and packing materials are biodegradable and recyclable. Please recycle.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children.  
Danger of suffocation!

### **Disposal of an old appliance**

Old appliances contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials.

Before discarding an old appliance disconnect it from the electrical supply and cut off the power cord to prevent it from becoming a hazard.







## **Miele Limited**

### **Headquarters and Showroom**

161 Four Valley Drive

Vaughan, ON L4K 4V8

Phone: 800-643-5381

905-660-9936

Fax: 905-532-2290

[www.miele.ca](http://www.miele.ca)

[info@miele.ca](mailto:info@miele.ca) (general enquiries)

[professional@miele.ca](mailto:professional@miele.ca) (commercial enquiries)

### **MieleCare National Service**

Phone: 800-565-6435

905-532-2272

Fax: 905-532-2292

[customercare@miele.ca](mailto:customercare@miele.ca) (technical enquiries)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>