




# Plein de PDF

Vous pouvez consulter les recommandations faites dans le mode d'emploi, le manuel technique ou le guide d'utilisation ou d'installation du MIELE KM 424. Vous trouverez une réponse à toutes vos questions sur le MIELE KM 424 dans le mode d'emploi (informations, spécifications, consignes de sécurité, dimension, accessoires, etc...). Les instructions détaillées pour l'utilisation figurent dans le Guide de l'utilisateur.

**Mode d'emploi MIELE KM 424**  
**Notice MIELE KM 424**  
**Manuel d'utilisation MIELE KM 424**  
**Instructions d'emploi MIELE KM 424**  
**Guide d'utilisation MIELE KM 424**

**Miele**

## Operating Instructions

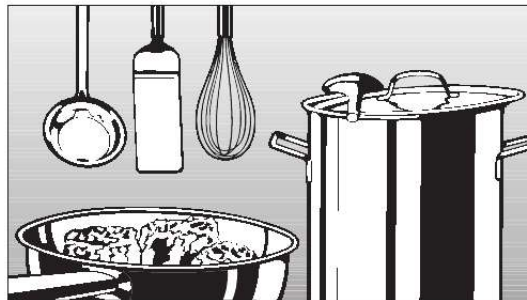

**Ceramic Cooktops**  
KM 421  
KM 424  
KM 427

To prevent accidents and machine damage, read these instructions **before** installation or use.



M.-Nr. 05 647 560



[Votre mode d'emploi  
MIELE KM 424](#)  
<http://pleindepdf.com/dref/3823496>

**Extrait du mode d'emploi :**

*If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer cannot be held responsible for damages caused by the lack, or inadequacy of, an effective grounding system. Do not connect the appliance to the main electrical supply using an extension cord. Extension cords do not meet the safety requirements of this appliance. Before servicing, disconnect the power supply by either removing the fuse, unplugging the unit or manually "tripping" the circuit breaker. 3 IMPORTANT SAFETY INSTRUCTIONS Do not install the cooktop directly above a dishwasher, refrigerator or freezer. Heat radiated by the cooktop may damage them. If the cooktop is installed above an oven, keep the cooktop's power cord from contacting the oven. Because of the heat radiated it is not recommended to install the cooktop above a drawer. It should only be installed above a cabinet base unit with a dummy drawer front and an additional protective base between the appliance and the cabinet.*

*This equipment has not been designed for maritime use or for use in mobile installations such as aircraft or recreational vehicles. However, under certain circumstances it may be possible for an installation in these applications. Please contact the nearest Miele Dealer or the Miele Technical Service Department with specific requirements. Use Do not use the appliance until properly installed in the countertop. This appliance is equipped with an overheating protection. See, "Overheating protection" for information. Never use the appliance to warm or heat the room. Due to the high temperatures radiated objects left near the appliance could catch fire. 4 IMPORTANT SAFETY INSTRUCTIONS Protection from damage Do not drop anything on the ceramic surface of the cooktop.*

*Although the ceramic glass is shock and scratch resistant, it is not shock or scratch proof.*

*Do not use pots or pans with pronounced edges or ridges on the ceramic cooktop. These could scratch the cooktop permanently. Grains of salt and sand can also scratch. Make sure that the bases of any pots and pans are clean, free of any fat or oils and are dry. Do not allow either solid or liquid sugar, pieces of plastic or aluminium foil to fall on the burners when they are hot. If these residues are allowed to cool on the ceramic surface pitting or even cracking could occur. Any spills should be removed as quickly as possible to prevent them from burning on and becoming difficult to remove. Do not use a steam cleaner to clean the appliance. Steam could penetrate electrical components and cause a short circuit. Never place hot pots or pans over the display, as the underlying electronics may be damaged.*

*In areas subject to infestation by cockroaches or other vermin, keep the appliance and its surroundings clean at all times. Any damage caused by pests will not be covered under warranty. 5 IMPORTANT SAFETY INSTRUCTIONS Injury prevention Do not touch the cooktop or the area surrounding it during or immediately after use. The cooktop may be hot even though it is dark in color. Areas near it may become hot enough to cause burns. Do not touch, or let clothing or other flammable materials touch the cooktop or areas near it until they have cooled. Wait until the residual heat indicators go out. CAUTION: Do not store toys or items of interest to children in cabinets above or behind the appliance. Children climbing onto the cooktop to reach these items may be injured. Children should not be left alone or unattended near the appliance when in use.*

*They should never be allowed to sit or stand on any part of the appliance. Protect your hands with insulated gloves or potholders when using the appliance. Use only dry, heat resistant potholders. Moist or damp potholders used on hot surfaces can result in steam burns. Do not let the potholder touch the hot heating element.*

*Do not use towels or other bulky items near the appliance. To prevent burns and breathing difficulty, allow the cooktop to cool before cleaning.*

*Some cleaners may produce toxic fumes if applied to a hot surface. Keep all pans out of reach of children. Danger of burns Pot and pan handles should be turned inward and not extend over the countertop to reduce the risk of burns, ignition of flammable materials, and spills.*

*Use the proper pan size. Select cookware having flat bottoms large enough to cover the heating element. Using undersized cookware will expose a portion of the heating element to direct contact and may result in ignition of clothing or handles becoming hot. The proper size pot or pan will also improve efficiency. Before using glass, glass/ceramic, ceramic, earthenware or other glazed cookware on the cooktop, verify that they can be used on a cooking surface. Do not heat unopened food containers. Build-up pressure may cause the container to burst and result in injury. At higher settings, be cautious of splattering grease or boiling over liquids, which may produce smoke. 6 IMPORTANT SAFETY INSTRUCTIONS Before removing pots and pans, be sure to turn off the burners. Do not store items on the appliance when not in use.*

*Items could melt or catch fire from residual heat or if the cooktop is turned on inadvertently. Never cover the cooktop with a cloth. A fire could result. Never leave the cooktop unattended when cooking with oil or fat. Overheated fat could ignite. Always heat oil slowly, monitoring it as it heats. Do not use water on grease fires. Smother any fire or flame, or use a dry chemical or foam-type extinguisher. When frying food, make sure that the food is as dry as possible before placing it in the oil. Moisture can cause hot oil to splatter and boil over.*

*Do not flambé under an exhaust hood. Flames could be drawn up into the hood by the suction or the grease filters may ignite. Do not let cooking grease or other flammable materials accumulate on the appliance. Wear proper clothing while cooking. Loose or hanging garments should never be worn while cooking.*

*Flammable materials should not be stored on or near your appliance. If there is a drawer directly underneath the appliance without any wooden base in between, ensure that no aerosols, combustible liquids or other easily flammable materials are kept in it. If cutlery inserts are to be placed in the drawer, they must be made of heat-resistant material. 7 IMPORTANT SAFETY INSTRUCTIONS Appliance safety In the event of any damage to the appliance, it must be turned off immediately and disconnected from the electricity supply by either removing the fuse or manually "tripping" the circuit breaker. Contact the Miele Technical Service Department.*

*Do not use the appliance until it has been repaired. Ensure power is not supplied to the appliance until repair work is completed. Do not cook on a broken cooktop. Any breakages or cracks in the ceramic surface of the appliance are defects and must be treated as such. If the cooktop should break, cleaning solutions and spills may penetrate the broken cooktop and create a risk of electric shock. Do not use the appliance until it has been repaired. Repairs should only be performed by qualified technicians to ensure safety. Repairs and other work by unqualified persons could be dangerous. Under no circumstances open the outer casing of the appliance. While the appliance is under warranty repairs should only be performed by a Miele authorized service technician.*

*Otherwise the warranty is void. 8 IMPORTANT SAFETY INSTRUCTIONS Further safety notes When using a portable appliance near the cooktop, make sure that its power cord does not come into contact with the cooktop. The insulation of the power cord could be damaged. Danger of electric shock! Always make sure food is sufficiently cooked or reheated. If in doubt, select a longer cooking or reheating time. Only use cookware suitable for the range-top. Unsuitable cookware may break due to sudden temperature changes. Do not use plastic or aluminium containers. They will melt at high temperatures. Fire hazard! Do not heat empty pots or pans, they may be damaged.*



[Votre mode d'emploi](#)

[MIELE KM 424](#)

<http://pleindepdf.com/dref/3823496>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>