




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 572 DISHWASHER. You'll find the answers to all your questions on the MIELE G 572 DISHWASHER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 572 DISHWASHER
User guide MIELE G 572 DISHWASHER
Operating instructions MIELE G 572 DISHWASHER
Instructions for use MIELE G 572 DISHWASHER
Instruction manual MIELE G 572 DISHWASHER

Miele

Operating Instructions

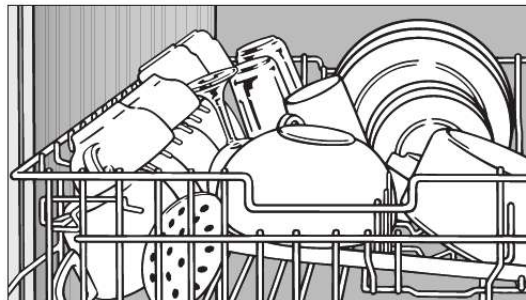

Dishwasher
G 1202

To prevent accidents
and appliance damage
read these instructions
before
installation or use.

en - US, CA

M.-Nr. 07 768 740



[Your user manual](#)
[MIELE G 572 DISHWASHER](#)

Manual abstract:

Disposal of an appliance ~ If the appliance is removed from its installation site and will not be used, remove the doorlock to the wash cabinet to prevent children from locking themselves in the machine. SAVE THESE INSTRUCTIONS 6 Guide to the dishwasher a Upper spray arm (not visible) b Cutlery tray c Upper basket d Middle spray arm e Air inlet for drying (depending on model) f Lower spray arm g Triple filter system h Data plate i Child Safety Lock in the door handle (not visible) j Rinse aid reservoir k Dual compartment detergent dispenser l Salt container 7 Guide to the dishwasher Control panel a Program selection b Time display c Additional options with indicators d Program sequence display e On/Off button K f Check/Refill indicators g Start/Stop button with indicator light h Delay start button with indicator light i Options button j Program button 8 Caring for the environment Energy saving washing This dishwasher is exceptionally economical in the use of water and electricity. For best results follow these tips: ^ For lowest energy consumption you may connect the dishwasher to a cold water source. ^ For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. ^ Make full use of the baskets without overloading for the most economical washing. ^ Use the correct amount of detergent and rinse aid. Detergent dosage is dependent upon the amount of soiling and type of dishware being washed. See the "Program Guide" for more information. ^ When using powder or gel detergent, reduce the amount to 2/3 of the normal amount when washing a small load. ^ Choose a program that best suits the degree of soiling and the type of dishes being washed.

^ For small loads select "Express". 9 Before using for the first time To open the door Child Safety Lock ^ Press the release catch inside the door grip. If the door is opened during operation, the dishwasher will stop running. Once the door is closed the program will restart. The Child Safety Lock is designed to prevent children from opening the dishwasher.

^ To lock the door, push the slider below the door grip to the right. ^ To unlock the door, push the slider to the left. To close the door ^ Push the baskets in. ^ Lift the door and push until it clicks into place. 10 Before using for the first time Water softener Every dishwasher is tested before leaving the factory. Any water remaining in the machine is from the final factory test and does not indicate that the machine has been used. To achieve good cleaning results, the dishwasher needs soft water. Hard water results in calcium deposits on dishware and in the dishwasher. If your tap water hardness is above 4 °d (4 gr/gal [US]), the water should be softened. The water softener must be filled with dishwasher salt for reactivation. If using "Tab" products which include salt, you should still add salt to the machine to achieve optimal cleaning results. Your local water authority will be able to advise you of the water hardness level in your area. The dishwasher must be programmed to correspond to the water hardness in your area. If the hardness of your local supply is constantly lower than 4 °d (4 gr/gal [US]), you do not need to add water softener salt. However the water hardness level must still be programmed.

In areas where the water hardness fluctuates (example 37 - 50 °d [39 52 gr/gal]) always program the machine to the higher value (in this example 50 °d [52 gr/gal]). If there is a fault, it will help the service technician to know the hardness of your local water supply. ^ Please note your water hardness.: °d (gr/gal) The water hardness was programmed to 15 °d (16 gr/gal) by factory default 11 Before using for the first time Programming the water softener To exit the programming mode at any time, turn the dishwasher off with the "K" button. ^ Turn the dishwasher off with "K". ^ Press and hold the "Program" and "Start / Stop" buttons simultaneously turn the dishwasher on with "K". Hold the "Start / Stop" button until the "Start / Stop" indicator lights. If it does not come on, start over. ^ Press the "Delay Start" button twice..



[Your user manual](#)
[MIELE G 572 DISHWASHER](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>