

Operating and installation instructions



Oven H 5360 BP, H 5460 BP

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 07 247 440

Contents

Warning and Safety instructions	5
Caring for the environment	0
Guide to the appliance	1
H 5360 BP, H 5460 BP1	1
Features	2
Oven controls1	2
Safety features	2
System lock	2
Safety switch-off	2
Cooling fan	2
Door lock for pyrolytic operation	2
Pyrolytic cleaning1	2
PerfectClean treated surfaces1	3
Door contact switch	3
Vented oven door	3
Information about the Automatic programmes, baking, roasting, grilling13	3
Energy efficiency rating according to EN 503041	
Accessories	
Baking tray, universal tray and rack	
Anti-splash insert	
Handle1	
Food probe	
Opener	5
Controls	6
Function selector	
Temperature selector	
Sensors	
Keypad tone	
Display1	
Functions	0
Before using for the first time	2
To enter the basic settings	2
Cleaning and heating up for the first time	3
Operation	4
To use an Automatic programme2	
Manual operation	
Cooling fan	5

Contents

Recommended temperature	6
Changing the temperature	
Heating phase	6
Pre-heating	7
Activating moisture reduction	7
Entering the duration, start time or finish2	8
Entering a cooking duration	
Entering the duration and delaying the start or the finish time	
Changing or deleting an entered cooking time	9
Making use of residual heat	
Minute minder (egg timer)3	
Settings3	
Language •	
Time of day	
Display	
Clock format	
Setting the time of day	
Lighting	
Catalyser	
Cooling fan run-on	
Pyrolytic	
Heating phase	
Recommended temperature	3
Display	
Volume	3
Buzzer tones	3
Keypad tone	3
Safety	4
Temperature format	4
Showroom programme	4
Factory default	4
Cleaning and care	5
Appliance front	5
Accessories	6
Baking tray, universal tray, anti-splash insert (if applicable)	
Rack, runners	6
Food probe	6

Contents

PerfectClean
Oven interior
Manual cleaning of the oven interior
Pyrolytic cleaning of the oven interior40
To remove the oven door43
To dismantle the oven door
To refit the door
To remove the runners48
To lower the top heat/grill element
Problem solving guide
After sales service
Optional accessories
Electrical connection
Building-in diagrams
Appliance dimensions and unit cut-out
Front dimensions
Installing the oven

This appliance conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.

Correct application

The appliance is intended for domestic use to cook food, and in particular to bake, roast, grill, cook, defrost and dry fruit. Any other usage is at the owner's risk and could be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised whilst using it, or have been shown how to use it correctly by a person responsible for their safety.

Safety with children

- This appliance is not a toy! To prevent the risk of injury or damage do not let children play with the appliance or its controls.
- Older children may only use the oven when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.
- Freat care should be taken to ensure that children do not touch the appliance when it is being used. Children's skin is far more sensitive to high temperatures than that of adults. External parts of the oven such as the door glass, control panel and the vent become quite hot.
- The oven door gets much hotter during pyrolytic operation than during normal use.

Make sure children cannot touch the oven whilst a pyrolytic programme is running. Danger of burning.

Technical safety

- Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.
- ▶ Before installation, check the appliance for visible signs of damage. Do not install and use a damaged appliance. A damaged appliance could be dangerous.
- The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and tested regularly, and where there is any doubt the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ Before connecting the appliance, make sure that the connection data on the data plate (voltage and connected load) match the mains electricity supply.

This data must correspond in order to avoid the risk of damage to the appliance. Consult a competent person if in doubt.

- Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).
- For safety reasons, this appliance may only be used when it has been built in.
- Never open the housing of the appliance.

Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee will be invalidated.

- During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:
- the mains fuse is disconnected,
- the screw-out fuse is removed (in countries where this is applicable),
- it is switched off at the isolator.

Ensure that current is not supplied to the appliance until after maintenance or repair work has been carried out.

- Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.
- If the supply cord is damaged, it must be replaced by a Miele approved service technician to avoid a hazard.
- This appliance may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.
- In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Correct use

Caution. Danger of burning.
High temperatures are produced by the oven.

- Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven. Be very careful that you do not burn yourself on the top heating/grill element.
- Never leave the appliance unattended when cooking with oil or fats, as these are a fire hazard if allowed to overheat.
- Do not exceed the recommended grilling times when using the Full grill , Economy grill and Fan grill functions. Excessively long grilling times can lead to food drying out and burning, or could even cause it to catch fire.
- Do not use the Full grill, Economy grill or Fan grill to finish baking par-cooked rolls or bread or to dry flowers or herbs. Fire hazard. Use Fan plus or Conventional heat instead.

If using alcohol in your recipes, high temperatures can cause the alcohol to vaporise and even to ignite on the hot heating elements.

Alcohol should be burnt off before the dish is placed in the oven to avoid this danger.

- Cover any food which is left in the oven to be kept hot. Any moisture in the food could lead to corrosion damage in the oven. This also prevents the food from drying out.
- If you wish to complete a cooking process using the residual heat in the oven, leave the oven at the function selected and select the lowest temperature for that function. Do not switch the appliance off until the food has been removed. Increased moisture in the oven could cause condensation to form which could lead to
- corrosion inside the oven.
- damage to the control panel, worktop and surrounding kitchen furniture.
- Do not line the floor of the oven with aluminium foil when using Conventional heat ☐/Bottom heat ☐/Intensive bake ᠘.

This would cause a build-up of heat which could cause damage to the floor of the oven.

For this reason do not place a dish, tin or baking tray directly on the oven floor.

If using a tray made by a different manufacturer, make sure that there is a gap of at least 6 cm between the bottom of the tray and the floor of the oven.

- Never add cold water to food on a hot universal tray, baking tray or directly onto food in a hot oven. The steam created could cause serious burns or scalding and the sudden change in temperature can damage the enamel.
- Always ensure that food is suitably cooked or reheated.

Some foods may contain microorganisms which are only destroyed by thorough cooking at temperatures over 70°C for a minimum of 10 minutes. Therefore when cooking or reheating foods, e.g. poultry, it is particularly important that food is fully cooked through. If in doubt select a longer cooking or reheating time.

It is important that the heat is allowed to spread evenly throughout the food being cooked. This can be achieved by stirring and/or turning the food during cooking.

If using plastic containers for cooking, they must be declared by the manufacturer as being suitable for use in an oven. Other types of plastic containers melt at high temperatures, and could damage the oven.

- Do not heat up unopened tins or jars of food in the oven. Pressure can build up and they may explode, resulting in injury or damage.
- Do not push pots and pans around on the oven floor, as this could damage the surface.
- Do not lean or sit on an open oven door, or place heavy items on it. Make sure that nothing gets trapped between the door and the oven compartment. This could damage the oven. The oven door can support a maximum load of 15 kg.
- Do not use the appliance to heat up the room. Due to the high temperatures radiated, objects near the appliance could catch fire.

- Only use the Miele food probe supplied with this oven. If a replacement is necessary it can be obtained from the Miele Spare Parts Department or your Miele Dealer.
- When not in use do not leave the food probe in the oven, especially when grilling.

The high temperatures used for grilling could cause plastic components on the food probe to melt.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and safety instructions.

Accessories

▶ Only use genuine Miele spare parts and accessories with this appliance. If spare parts or accessories from other manufacturers are used, this will invalidate the guarantee, and Miele cannot accept liability.

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposing of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.




Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply be a competent person.

Guide to the appliance

H 5360 BP, H 5460 BP

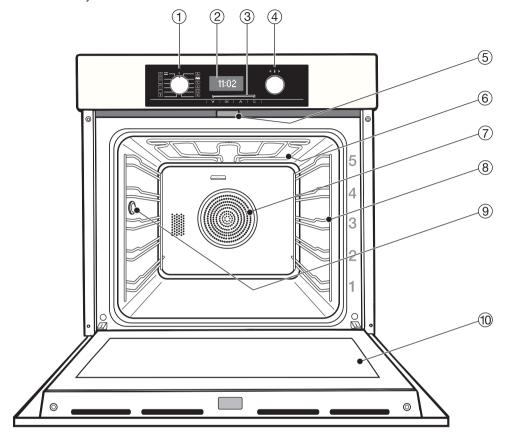

- 1) Function selector, retractable when it is at "0"
- ② Display
- ③ Sensors V, OK, ∧, △
- 4 Temperature selector, retractable
- 5 Door lock for pyrolytic operation
- 6 Top heat/grill element
- Back panel with air inlet for the fan
- 8 Side runners with five shelf levels
- Onnection socket for the food probe
- 10 Door

Features

Oven controls

In addition to operating the various cooking programmes to bake, roast and grill the controls also offer the following:

- a time of day display,
- a minute minder,
- a timer to automatically switch cooking programmes on and off,
- Automatic programmes
- settings that can be customised.

Safety features

System lock

The system lock from prevents the oven from being used unintentionally by children, for example. See "System lock".

Safety switch-off

Safety switch-off is triggered automatically if the oven is operated for an unusually long period of time. The period of time will depend on the particular oven function being used. The oven will switch off automatically and "Fault 55" will appear in the display. The oven can be used again immediately after switching it off and back on.

Cooling fan

A cooling fan will come on automatically when a cooking programme is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or on the oven housing unit.

Door lock for pyrolytic operation

For safety reasons the door is locked as soon as the pyrolytic cleaning programme is started. After the pyrolytic programme has finished, the door will remain locked until the temperature in the oven has fallen below 280°C.

Pyrolytic cleaning

The oven interior can be kept clean by using the Pyrolytic function.

The oven interior is heated up to approx. 460 °C. Any residual soiling is broken down and reduced to ash by the high temperatures.

See "Cleaning and care" for more information.

PerfectClean treated surfaces

The following surfaces are all treated with a special PerfectClean finish:

- Runners,
- Baking tray,
- Universal tray, anti-splash insert and
- Rack

PerfectClean surfaces have very good anti-stick properties and are much easier to keep clean than conventional enamel, if cleaned regularly.

See "Cleaning and care" for more information

Door contact switch

If the door is opened during operation, the door contact switch automatically switches off the heating elements, and the fan if a "Fan" setting is being used.

This helps reduce the amount of heat lost from the oven interior, e.g. when checking food.

Vented oven door

The oven door is an open system and the door panes have a heat-reflecting coating. During operation, cool air is passed through the oven door to keep the outer pane cool.

If necessary, the oven door can be dismantled for cleaning.

Information about the Automatic programmes, baking, roasting, grilling ...

The "User instructions" booklet, supplied with your appliance in addition to these Operating and installation instructions, contains detailed information about the following:

- Automatic programmes
- Food probe
- Baking
- Roasting
- Slow cooking
- Grilling
- Defrosting
- Cooking ready meals
- Automatic programme recipes

Energy efficiency rating according to EN 50304

This appliance is rated energy efficiency class **A** in accordance with EN 50304. Tests were carried out using "Fan plus "\(\mathbb{L}\)". The catalyser should be switched off during testing, see "Settings – Catalyser – Off once".

Features

Accessories

The following accessories are supplied with this oven.

These and other accessories are also available to order from the Miele Spare Parts Department, your Dealer or via the internet on www.miele-shop.com.

Baking tray, universal tray and rack



The baking tray, universal tray and rack are inserted into the oven between the two rails of a shelf runner.

The trays and rack have non-tip safety notches in the middle which prevent them being pulled right out when they only need to be partially pulled out. The trays and rack can then only be taken out of the oven by raising them upwards and then pulling them out.



If you are using a tray with the rack on top, insert the tray between the rails of a shelf runner and the rack will sit on top of it.

Anti-splash insert

(depending on model)



The anti-splash insert should be placed in the universal tray when grilling or roasting.

The juices from the food being cooked collect under the anti-splash tray. This prevents them from spitting and making the oven dirty. The juices can then be used for making gravy and sauces.

Handle

(depending on model)



The handle makes it easier to take the universal tray, baking tray and rack out of the oven, or to put them into it. The two prongs at the top go inside the tray or above the rack and the U-shaped supports underneath.

Food probe



Using the food probe enables the roasting process to be monitored simply and reliably.

Please refer to the separate "User instructions" booklet supplied with the oven for information on how to use the food probe.

Opener



This opener is used to remove the cover of the lighting in the sides of the oven.

Controls



Function selector

The left-hand control is used to select the function.

It can be turned clockwise or anti-clockwise.

The function selector can only be retracted when it is at "0".

- Automatic
- Fan grill
- Auto roast
- * Defrost
- Conventional heat
- Bottom heat
- Full grill
- Economy grill
- M Pyrolytic: cleaning function
- 🔅 Lighting:

For switching on the oven light independently. This is useful when cleaning the oven. It also works with the door removed.

Settings:

From this position you can also alter the settings of the appliance.

Temperature selector

It can be turned clockwise or anti-clockwise.

It can be retracted in any position.

Sensors

The sensors underneath the display react to touch. A keypad tone sounds each time a sensor is touched.

	Use
OK	- For calling up the list of options.
	 For confirming an entry.
V	 For scrolling down the list of options.
	- For decreasing time entries, brightness, contrast,
^	For scrolling up the list of options.For increasing time entries, brightness, contrast,
\triangle	For entering a minute minder time, e.g. for boiling eggs.

Keypad tone

The volume of the keypad tone is set to medium. You can change the volume of the keypad tone in the Settings menu, see "Settings - Volume - Keypad tone".

Controls

Display

All information about functions, temperature, cooking durations, Automatic programmes and settings is shown in the display.

The following **Information windows** or **list of options** appear in the display depending on the position of the function selector **and/or** confirmation with the OK sensor:

Position of the function selector	When the OK sensor is touched, the following appears
0	1 Information window
Function (does not apply to or _Auto)	Cooking programme list: - Duration - Finish - Start time
	 Moist. reduction Settings list: Language Time of day Lighting Catalyser Cooling fan run-on Pyrolytic Heating phase Recommended temperature Display Volume Safety Temperature format Showroom programme Factory default
Auto	List of the Automatic programmes available. Please refer to the separate "User instructions" booklet supplied with your oven in addition to these Operating instructions for more information.

- Use the ∧ or ∨ sensors to scroll through the list until the option you want is highlighted.
- Then select the option with the OK sensor.

The following **Symbols** can appear in addition to the text:

Symbol	Meaning
#	Duration
(<u>1</u>)	Start time
손	Finish
Δ	Minute minder (egg timer)
≠ 1	Core temperature when using the food probe
*	Arrows will appear if there are more than two options available. Use the Λ or V sensors to scroll through the list.
	The end of a list is indicated by a dotted line.
Back ←	Confirming with OK returns you to the original list of options.
✓	A tick will appear beside the option which is currently selected.
i	This indicates additional information that is available. This information window can be deleted by selecting OK.
•	System lock

Functions

Your oven has a range of oven functions for preparing a wide variety of recipes.

Functions	Notes	
Conventional	- For baking traditional recipes, e.g. fruit cake, casseroles.	
heat	 Also ideal for soufflés. 	
	 If using an older recipe or cookbook, set the oven temperature for Conventional heat 10°C lower than that recommended. The cooking duration does not need to be changed. 	
Bottom heat	 Use this setting towards the end of baking, to brown the base of a cake, quiche or pizza. 	
Full grill	For grilling larger quantities of thin cuts (e.g. steaks).For browning food in larger dishes.	
Economy grill	For grilling smaller quantities of thin cuts (e.g. steaks).For browning food in smaller dishes.	
* Defrost	For the gentle defrosting of frozen food.	

Function	Notes	
	For baking and roasting.You can bake and roast on different levels at the same time.	
	 Lower temperatures can be used than with "Conventional heat "as the Fan plus system distributes the heated air around the food. 	
Auto Automatic	The list of Automatic programmes available will appear in the display.	
□ Auto roast	You will find this function in the list of Automatic programmes. - For roasting. During the searing phase, the oven is heated up to a high temperature (230 °C) to sear the meat. Once this temperature has been reached, the temperature of the oven is automatically lowered to the set cooking temperature (continued roasting temperature).	
T Fan grill	 For grilling larger items, e.g. rolled meat, poultry. The hot air from the grill is distributed over the food by the fan. This enables a lower temperature to be selected than when using "Full grill """ "Economy grill """. 	
△ Intensive bake	 For cooking dishes which require a moist topping and a crisp base such as pizza and quiche lorraine. Intensive bake is not suitable for baking thin biscuits etc. or for roasting as the juices will become too dark. 	

Before using for the first time

To enter the basic settings

The oven will switch on automatically when it is connected to the electricity supply.

Welcome screen

A welcome screen will appear in the display, and you will then be requested to select some basic settings which are needed before the appliance can be used.

Follow the instructions in the display.

Setting the language

The welcome screen will be replaced by the request to set a language:

- Use the ∧ or ∨ sensor to scroll through the list until the language you want appears highlighted in the display.
- Confirm your selection with the OK sensor.
 - A tick \checkmark will appear beside the language you have selected.

Clock format

The request to select a Clock format will appear. The default setting for the clock is 24 h.

- Touch the ∧ or ∨ sensor until the clock format you want appears highlighted in the display.
- Confirm with OK sensor.

Setting the time

You will then be asked to enter the time of day. The hour is highlighted.

■ Set the hour with the ∧ or ∨ sensor and confirm your setting with the OK sensor.

The minutes are then highlighted.

■ Set the minutes with the ∧ or ∨ sensor and confirm your setting with the OK sensor.

Time of day display

You will then be asked when you want the time of day to show in the display:

- On
 The time is always visible in the display.
- On for 60 seconds
 When a sensor is touched the time
 will only appear for 60 seconds.
- Use the ∧ or V sensor to select the setting you want and confirm with the OK sensor.

The oven is now ready for use.

If you have selected the wrong language by mistake proceed as described in "Settings - Language" to get back to the correct language.

Before using for the first time

Cleaning and heating up for the first time

Before use, please remove

- any stickers from the floor of the oven, baking tray, universal tray etc.
- any protective foil from the oven front.

See "Cleaning and care" for more information.

Before using the oven for the first time

- take all accessories out of the oven and wash them.
- then heat the oven up once with nothing in it. New ovens can give off a slight smell on first use. Doing this will dissipate the smells before you use it to cook food.
- Before heating the oven up it is a good idea to wipe the interior out with a damp cloth. This way any dust or bits of packaging that may have accumulated in the oven cavity during storage and unpacking will be removed.
- Press and release the function selector and the temperature selector.
- Use the function selector to select "Fan plus 🔊".

The recommended temperature of 160 °C will appear.

■ Use the temperature selector to set the highest temperature (250 °C).

The oven will start heating up as soon as this entry has been accepted.

■ Heat the empty oven for at least an hour.

Please ensure the ktichen is well ventilated during this operation. Close doors to other rooms to prevent the smell spreading throughout the house.

This procedure can be set up to switch itself off automatically. See "Operation - Entering duration, start time or finish".

- Leave the appliance to cool down to room temperature.
- Then wipe the oven interior out with a solution of hot water and a mild detergent and then dry it thoroughly with a soft clean cloth.

Leave the oven door open until the oven interior is completely dry.

Operation

To use an Automatic programme

Your oven has a wide range of Automatic programmes to enable you to achieve excellent results with ease.

The Automatic programmes available will appear when you select the "Automatic [Auto]" function.

The main list will appear in the display:

- Slow cooking
- Cakes
- Baked goods
- Bread
- Bread mixtures
- Bread rolls
- Pizza
- Meat
- Poultry
- Fish
- Bakes/gratin
- Frozen food

Each of the above Automatic programmes has a sub-menu of further options.

Each step you need to take before starting the Automatic programme will appear in the display.

Depending on the programme you have selected, further information or prompts will appear regarding

- the roasting or baking dish,
- the shelf level.
- the use of the food probe,
- the cooking duration.

Please refer to the "User instructions" booklet supplied with your oven for more information on the Automatic programmes and a selection of recipes.

Manual operation

If you do not want to use an Automatic programme you can enter the settings for a cooking programme manually.

- Place the food in the oven.
- Select the function you want (e.g. Fan plus 🔊).

The following will appear in the display:

- Fan plus
- "160" the recommended temperature,
- the words "Heating phase".

At the same time the oven compartment heating, lighting and cooling fan will switch on.

The lighting switches off automatically after approx. 15 seconds. If you wish, you can set the lighting to be on all the time, see "Settings - Lighting".

You can follow the temperature rising in the display. When the set temperature has been reached, "Heating phase" will disappear from the display.

- At the end of the programme, turn the function selector to "0" and remove the food from the oven.
- If you touch the OK sensor during a cooking programme, the duration, start time, finish and moisture reduction options will appear. See "Operation - Entering duration, start time or finish" for more information.

Cooling fan

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or on the oven housing unit.

When the temperature in the oven has fallen sufficiently, the cooling fan will switch off automatically.

The cooling fan can be set to switch off after a specific time, see "Settings - Cooling fan".

Operation

Recommended temperature

As soon as a cooking function is selected, the **recommended temperature** will appear in the display.

Function		Recommend ed temperature
Image: Control of the	Fan plus	160 °C
	Intensive bake	170 °C
	Conventional heat	180 °C
	Bottom heat	190 °C
T	Fan grill	200 °C
***	Full grill	240 °C
**	Economy grill	240 °C
*	Defrost	25 °C
	Auto roast*	160 °C

^{*} The initial searing phase temperature is approx. 230°C. This then drops to 160 °C for continued roasting

Changing the temperature

If the recommended temperature is not suitable, you can use the temperature selector to change it.

As soon as you turn the temperature selector, the temperature range for that function will appear in the display. The temperature can be changed in increments of 5°.

You can also change the recommended temperature for a function permanently if you wish, see "Settings - Recommended temperature".

Heating phase

"Heating phase" will appear in the display until the set temperature has been reached for the first time.

All the heating elements come on together with the fan to enable the required temperature to be reached as quickly as possible (factory default setting).

You can alter this default setting, if wished. See "Settings - Heating phase".

Pre-heating

Most dishes can be placed in a cold oven. They will then make use of the heat produced during the heating phase.

It is only necessary to pre-heat the oven in a few instances:

With Fan plus

- pre-heating may be necessary for foods which cook in less than 20 minutes and for foods such as puff pastry and yeast mixtures where instant heat is required to make them rise quickly.
- roasting beef/fillet.

With Conventional heat

it is usually necessary to pre-heat the oven.

Change the setting for the heating phase from "Rapid" to "Normal" when baking pizza or biscuits and small cakes. As otherwise they will brown too quickly from the top. See "Changing settings - Heating phase".

To pre-heat the oven:

- Select the required function and set the temperature.
- Place the food in the oven once "Heating phase" has disappeared from the display for the first time as the set temperature has now been reached.

Activating moisture reduction

It is a good idea to use this function when cooking items which are moist on the inside but which should be crispy on the outside, e.g. frozen chips, croquettes or pork with crackling.

It is also suitable for deep filled fresh fruit cakes, such as plum or apple cake.

You can activate Moisture reduction with any function.

For best results, activate it at the beginning of the cooking programme.

- Place the food in the oven.
- Select the required function and set the temperature.
- Touch the OK sensor.

The list of options will show in the display.

- Use the ∧ or ∨ sensor to highlight "Moist. reduction" and select it with the OK sensor.
- Use the ∧ or ∨ sensors to select "On" and confirm your selection with the OK sensor.

The Moisture reduction function needs to be activated individually for each cooking programme.

Operation

Entering the duration, start time or finish

You can programme the oven to switch off automatically or on and off automatically by entering the duration, start time or finish time.

The maximum duration which can be set is 9 hours and 59 minutes.

We recommend using automatic switching on and off when roasting. However, do not delay the start for too long when baking as the cake mixture or dough will dry out, and the raising agents will lose their effectiveness.

Entering a cooking duration

■ Select the function you want and set a temperature.

The oven heating, lighting and cooling fan will switch on.

■ Touch the OK sensor.

A list of options will appear:

- Duration
- Start time
- Finish
- Moist. reduction
- Use the ∧ or ∨ sensor to scroll through the list until "Duration" is highlighted.
- Touch the OK sensor.

"-:- -" will appear in the display.

■ Use the ∧ or ∨ sensor to enter the duration.

You can follow the duration counting down in the display.

The oven will switch itself off automatically at the end of the cooking duration.

Entering the duration and delaying the start or the finish time

You can set the Start time and Finish to specify when you want cooking to start or finish.

To switch a programme on and off automatically you can either:

- Enter the Duration and Finish time, or
- Enter the Start time and the Duration.
 The time which has not been entered is calculated automatically.

The **Start time** will be shown in the display up until the heating elements are switched on

During the course of the programme you can follow the **Time left** counting down in the display.

At the end of the programme the message "Prog. finished" will appear in the display and the buzzer will sound.

Changing or deleting an entered cooking time

- Touch the OK sensor.
- Use the ∧ or ∨ sensor to highlight the duration, start time or finish time and select it with the OK sensor.
- Use the ∧ or ∨ sensor to set the time to "-:- -".

If there is a power cut, all data entered will be deleted.

Making use of residual heat

The heating in the oven switches off shortly before the end of the cooking programme. The residual heat in the oven is sufficient to complete the cooking process.

Using the residual heat in the oven saves energy.

"Use residual heat" will appear in the display to show that the oven is in energy save mode. The current core temperature of the food will no longer be shown.

The cooling fan continues to run, as does the hot air fan if a "fan" setting has been chosen.

Minute minder (egg timer)

The minute minder can be used to time any activity in the kitchen, e.g. boiling eggs.

You can enter a time of up to a maximum of 9 hours and 59 minutes.

You can set the minute minder at the same time as another timed programme, e.g. as a reminder to stir a dish or add seasoning etc.

To set the minute minder

- Touch the △ sensor.
- "-:- -" will appear in the display.
- Use the ∧ or ∨ sensor to enter the duration.

You will then see the minute minder time counting down in the display.

At the end of the time set for the minute minder

- the ♠ symbol will flash.
- a buzzer will sound, if it is switched on (see "Settings - Volume").
- at the end of the minute minder time, the display will show the time counting upwards.
- Touch the △ sensor.

To cancel the time set for the minute minder

■ Touch the △ sensor.

The minute minder time will be deleted.

Your appliance is supplied with a number of standard default settings.

To change these, proceed as follows:

■ Select "Settings".

A list of settings which can be changed will appear in the display.

- Use the ∧ or V sensor to scroll through the list until the setting you want appears highlighted in the display.
- Select the setting with the OK sensor.
- Use the ∧ or V sensor to select the setting you want and confirm with the OK sensor.

Settings which are currently selected are marked with a \checkmark .

If you do not make another selection within approx. 15 seconds after selecting a setting, the display will return to the Settings list.

Language 🏲

You can set the language you want the display to appear in. After selecting and confirming "Language", the language you have selected will appear in the display.

If you have selected the wrong language by mistake, you can follow the flag symbol • to get back to the Language menu.

Time of day

Display

Select how you want the time of day to show in the display:

- On
 The time is always visible in the display.
- On for 60 seconds
 When a sensor is touched the time will only appear for 60 seconds.
- Do not display
 The time of day will not be displayed when the oven is switched off. It will only show in the display when the oven is being operated.

Clock format

The time of day can be altered from a 24-hour display to a 12-hour display.

Settings

Setting the time of day

You cannot set the time of day while a cooking programme is in progress.

- Set the hour with the ∧ or V sensor and confirm your setting with the OK sensor.
- Then set the minutes with the ∧ or V sensor and confirm your setting with the OK sensor.

If there is a power cut, the current time of day will reappear once power has been restored. The appliance will store this data for approx. 200 hours. After 200 hours it will show "D:DD" and will need to be re-set.

Lighting

The oven interior lighting can be set so that it that it stays on throughout cooking or goes out 15 seconds after a cooking programme has started.

If the you have set the lighting to go out 15 seconds after a cooking programme has started, it will switch on again for 15 seconds when one of the sensors is touched.

Catalyser

The oven is delivered with the catalyser engaged for all functions.

If the catalyser is set to:

- "On" it will work with all functions.
- "Off once"
 it will not come on during the next programme.

Cooling fan run-on

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

You can set the cooling fan to switch off either when the temperature in the oven is below approx. 70°C, or after a period of approx. 25 minutes.

Do not leave food in the oven to keep it warm if you have set the cooling fan to timed operation. Moisture levels in the oven could increase, leading to condensation forming on the control panel and surrounding kitchen furniture and drops of moisture collecting under the worktop.

Condensate can

- damage the housing unit/ worktop.
- lead to corrosion in the oven.

Pyrolytic

A message will appear in the display after a certain length of time to remind you to run a pyrolytic cleaning programme. You can disable this message if you do not wish to be reminded. Confirm the option "Without reminder".

Heating phase

The heating phase works as follows with the Fan plus, Conventional heat and Auto roast functions:

- "Rapid"
 All the heating elements are switched on together in order to heat the oven up as quickly as possible to the required temperature.
- "Normal"
 Only the heating elements for the cooking function selected are switched on.

Recommended temperature

If you frequently change a recommended temperature it may be a good idea to change it permanently.

Select the function you want and change the temperature within the range allowed.

Display

You can change the contrast or brightness of the display with the Λ or \mathbf{V} sensors.

The setting is represented by a bar with seven segments. The middle setting is displayed by a filled-out segment in the middle of the bar.



To change the setting, move the filledout segment to the left or right.

Volume

Buzzer tones

You can change the volume of the buzzer by using the Λ or V sensor to move the filled-out segment to the left or right. If none of the segments is filled-out, all buzzers are switched off.

Keypad tone

You can change the volume of the keypad tone which sounds each time a sensor is touched, by using the Λ or V sensor to move the filled-out segment to the left or right. If none of the segments is filled-out, the keypad tone is switched off.

Settings

Safety

The oven is delivered with the system lock deactivated (factory default setting).

The system lock prevents the oven being switched on unintentionally, by children for example.

Selecting "On" activates the system lock. When the oven is switched off, the symbol will show in the display. If you turn the function selector to a function, a message will appear to tell you that the system lock is activated. The minute minder can still be used whilst the lock is on.

To deactivate the lock, select and confirm "Off".

Temperature format

You can choose for the temperature to be shown in °C or °F.

Showroom programme

This programme is for dealers who want to demonstrate the appliance without the heater elements working. Do not activate this setting for domestic use!

A message will appear briefly in the display when you call up this option. Demo mode can then be activated or deactivated.

Factory default

If you select

- "All settings" any settings that you have altered will be reset to the factory default setting.
- "Recommended temperature"
 recommended temperatures which
 have been changed will be reset to
 the factory default settings.

Cleaning and care

Miele branded cleaning and conditioning products are available from the Miele Spare Parts Department or via the internet on www.miele-shop.com.

⚠ Do not use a steam cleaner to clean the appliance. The steam could reach electrical components and cause a short circuit.

Appliance front

Remove any soiling immediately. If not, it might become impossible to remove and could cause the surface to alter or discolour.

Clean the front using a damp Miele microfibre E-cloth or with a clean sponge and a solution of hot water and washing-up liquid. Wipe dry using a soft cloth.

The external surfaces are susceptible to scratching. Scratches on glass surfaces could even cause a breakage in certain circumstances.

Contact with unsuitable cleaning agents can alter or discolour the external surfaces

To prevent damage to your appliance when cleaning, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- oven sprays,
- glass cleaning agents,
- hard, abrasive sponges and brushes, e.g. pot scourers,
- sharp metal scrapers.

Cleaning and care

Accessories

Remove all accessories as well as the runners and any extra accessories such as FlexiClip runners from the oven interior before starting the pyrolytic cleaning process.

The high temperatures needed for pyrolysis will damage the accessories.

Baking tray, universal tray, antisplash insert (if applicable)

The surface has been treated with **PerfectClean enamel**.

Please refer to the section on "PerfectClean" for information on cleaning and care.

Rack, runners

The surface has been treated with **PerfectClean enamel**.

Treat in the same way as other surfaces coated with PerfectClean. See "PerfectClean".

Food probe

Clean the food probe with a damp cloth only.

Do not put the food probe into water or clean it in the dishwasher.

PerfectClean

Before using for the first time remove any stickers from PerfectClean surfaces.

The **enamelled surfaces** of the baking tray, universal tray and anti-splash insert (if applicable) have been treated with a special type of enamelling called **"PerfectClean"**.

This surface has very good anti-stick properties and is much easier to keep clean than conventional oven enamel, if cleaned regularly.

Food can be taken off it more easily, and soiling from baking and roasting is easier to remove.

The following notes on cleaning and care should ensure that the anti-stick and easy clean properties of PerfectClean last for many years.

PerfectClean surfaces can be treated as you would treat glass.

Food can be sliced or cut up on the PerfectClean surface in the same way as on a baking tray with conventional enamel.

Allow the oven and any accessories to cool down before cleaning. Danger of burning.

Normal soiling

Clean as soon as possible after each use with a dishcloth, soft sponge or a soft nylon brush, and a solution of hot water and a little washing-up liquid. The longer soiling is left, the harder it may become to remove.

Stubborn soiling

Stubborn soiling, e.g. from roasting, may need to be soaked first with a damp sponge to loosen it and if necessary a non-abrasive stainless steel spiral pad or a scraper suitable for glass can be used to remove it.

After cleaning, rinse thoroughly with clean water. The water must run off the surface easily. Any residual cleaning agents will hinder this effect.

Using oven sprays on very stubborn soiling

Some oven cleaners contain strong alkalines and / or abrasive materials. Because PerfectClean enamel is designed to be easily cleaned, the use of these cleaners is not recommended. However, if you still cannot get the surface clean, an oven cleaner can be used, but for a couple of minutes only.

Do not attempt to use on a hot oven or accessories. Allow the PerfectClean surfaces to cool down to room temperature before applying an oven spray.

Apply a spray oven cleaner to the soiled areas. Leave to take effect for **a couple of minutes only!**

If necessary use a soft sponge, soft nylon brush or a scraper suitable for glass surfaces to loosen the soiling.

Repeat the process if necessary.

After cleaning, rinse thoroughly with clean water and then dry thoroughly.

For optimum performance of PerfectClean enamel it is important to clean the oven and accessories after each use.

The surfaces will become harder to clean and the anti-stick properties will deteriorate if soiling is not removed after each use and allowed to build up. In extreme cases cleaning may become impossible.

The following cause lasting damage to the surface structure and reduce the anti-stick effect and must not be used on PerfectClean surfaces:

- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- cleaning agents for ceramic hobs,
- wire wool or metal scourers.
- abrasive sponges, e.g. pot scourers or sponges which have been previously used with abrasive cleaning agents,
- oven spray must not be used in a hot oven or left on for too long,
- PerfectClean enamelled items must not be washed in a dishwasher.

Note:

- Soiling such as spilt juices and cake mixtures are best removed whilst the oven or tray is still warm. Exercise caution, make sure the oven is not too hot - danger of burning.
- Spilt fruit juices may cause lasting discolouration to the surfaces and roasting can cause matt areas to appear. Clean these following the instructions given above and do not use force to remove them. This discolouration is permanent but will not affect the efficiency of the enamel.

Oven interior

The oven interior is coated with dark **pyrolytic enamel** which facilitates cleaning.

This is a particularly hard enamel with an extremely smooth surface and very good anti-stick properties.

Manual cleaning of the oven interior

Allow the oven to cool down before cleaning by hand.
Danger of burning!

The oven interior and the inside of the door should be cleaned after each use. If this is not done subsequent soiling from baking and roasting will become worse and make cleaning harder. In extreme cases, heavy soiling could even damage the surface.

There is a fibre-glass door seal around the oven cavity.

This seal is particularly sensitive and should not be cleaned unless absolutely necessary. Rubbing it can damage it.

Most cooking residues can be removed with a damp cloth and a mild solution of hot water and washing-up liquid.

Never use hard brushes, hard sponges, wire wool pads*, knives or any other abrasive materials or cleaning agents. They can damage the enamel.

If using an oven spray, the manufacturer's instructions must be followed.

* Non-abrasive stainless steel spiral pads can, however, be used.

To make cleaning easier

- remove the oven door,
- dismantle the door,
- take out the side runners,
- lower the top heating/grill element.

Instructions for doing so are given further on in this section.

Pyrolytic cleaning of the oven interior

A message will appear in the display after a certain length of time to remind you to run a pyrolytic cleaning programme. You can deactivate this, if wished (see "Settings - Pyrolytic").

Before starting a pyrolytic cleaning process please note the following:

Remove any coarse soiling from the oven before you start.

There is a fibre-glass door seal around the oven cavity.

This seal is particularly sensitive and should not be cleaned unless absolutely necessary. Rubbing can damage it.

Remove all accessories as well as the runners and any extra accessories, such as the FlexiClip runners, from the oven interior before starting the pyrolytic cleaning process. The high temperatures needed for pyrolysis will damage the accessories.

The oven door gets much hotter during pyrolytic operation than during normal use.

Make sure children cannot touch the oven whilst a pyrolytic programme is running. Danger of burning.

During the pyrolytic process the oven is heated to approx. 460 °C . Any residual soiling is burnt off by the high temperatures.

Depending on soiling levels you can choose between three cleaning programmes:

- Level 1 (Duration approx.2 hours 15 minutes)
- Level 2 (Duration approx.2 hours 25 minutes)
- Level 3 (Duration approx.2 hours 35 minutes)

For safety reasons the **oven door** is **automatically locked** at the beginning of the pyrolytic programme.

At the end of the programme it will not be unlocked until the temperature inside the oven has dropped to below 280 °C.

If the pyrolitic cleaning programme has been started by mistake or if the process is interrupted, the door lock will be released:

- immediately if the temperature is below 280 °C.
- not until the oven interior temperature is below 280 °C if the temperature inside the oven is higher than 280 °C.

You can delay the start of the pyrolytic process for example, to take advantage of cheaper night electricity tarifs.

Starting a pyrolytic process

- Take all accessories out of the oven.
- Turn the function selector to Pyrolytic .
- Use the ∧ or ∨ sensor to select Level 1, 2 or 3.
- Start the pyrolytic process required with the OK sensor.

You can either start the pyrolytic cleaning process immediately or later.

If you start the process immediately, the door will lock and the oven will start heating up.

Select the "Start later" option to **delay the start of the pyrolytic process** for example, to take advantage of cheaper night electricity tarifs.

You can change the time you want the pyrolytic process to start at, at any point up until the delay period has elapsed.

At the end of pyrolytic cleaning process

- "Prog. finished" will appear in the display.
- a buzzer will sound, if it is switched on (see "Settings - Volume - Buzzer tones").
- Turn the function selector to "0".

The buzzer will stop and the symbols in the display will go out.

If the function selector is not moved, the buzzer (if switched on) will sound every five minutes as a reminder that the programme has finished.

This **reminder** continues for up to 30 minutes.

After the pyrolytic process, any debris (e.g, ash), can easily be wiped away.

Remember to wait until the oven has cooled down before doing so! Danger of burning.

Try not to wipe over the fibre-glass seal when cleaning the oven cavity. It is particularly sensitive and should not be cleaned unless absolutely necessary. Rubbing it can damage it.

Most residues are easily wiped away with a damp cloth.

Depending on soiling levels in the oven there may be visible deposits on the door and below the trim under the oven cavity. This is best removed using a non-abrasive sponge or non-abrasive stainless steel spiral pad and a mild solution of warm water and washing-up liquid.

Deposits on the internal door panel can be removed using a suitable glass scraper.

Spilt fruit juices may cause lasting discolouration to the surfaces. This discolouration is permanent but will not affect the efficiency of the enamel. Do not attempt to remove these marks.

The pyrolytic process will be cancelled.

- if the oven is switched off.
- if another function is selected during the pyrolytic process.
- in the event of a power cut.


In the two instances above, switch the oven off.

If the oven interior temperature is below 280 °C, the door lock will be released after a short while. It can then be opened.

Start the pyrolytic cleaning process again if necessary.


To remove the oven door

The oven door is connected to the oven by hinges.

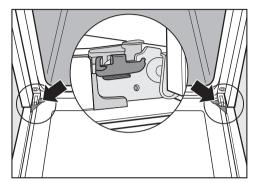

Before removing the door, the locking clamps on both hinges have to be released.

Open the door fully.

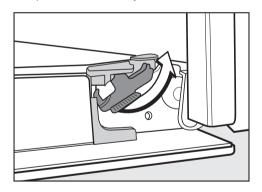

■ To release the locking clamps on the hinges turn them upwards as far as they will go until they are at an angle. See illustration.

■ Then lift the door upwards as far as it will go.

Do not attempt to take the door off the hinge guides when it is in a horizontal position. The guides will close, and damage the appliance. Danger of injury.



Hold the door securely at both sides and lift upwards off the hinge guides.

Do not lift the door off by the handle. The handle could break and damage the door.

Make sure that you lift the door off equally on both sides.

To dismantle the oven door

The oven door is made up of four panes of glass and has vents at the top and bottom.

When the oven is operating, air is circulated through the door to keep the outer pane cool.

If condensate has worked its way in between the glass panes, the door can be dismantled in order to clean in between the panes.


Do not use scouring agents, hard sponges or brushes or sharp metal tools to clean glass as these can scratch the surface. Scratches can cause the glass to break.

Do not use an oven spray. This will damage the surface of the aluminium surrounds.

Ensure that the glass panes are inserted the correct way round after cleaning as each side of the pane has a different coating. Those facing the oven interior reflect the heat.


To avoid the risk of breakage, it is advisable to place the panes on a table protected by a soft cloth (e.g. a towel). Always remove the oven door before dismantling it.

■ Place the door on a protective surface (e.g. on a table cloth) to prevent it getting scratched. The door handle should line up with the edge of the table. Make sure the glass lies flat and does not get broken during cleaning.

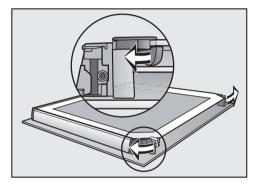


Flip the glass pane retainers outwards to open them.


You can now remove the inner and the two middle panes.

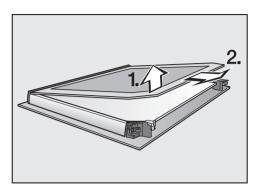

■ **Gently** lift the inner pane up and out of the cover strip.

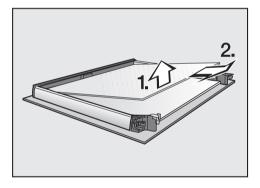


■ Now gently lift up the upper of the two middle panes and remove it.

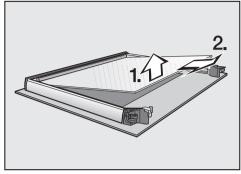

- Gently lift up the lower of the two middle panes and remove it.
- Clean the glass panes and other parts with a Miele E-cloth or a clean sponge and a solution of hot water with a little washing-up liquid. Wipe dry using a soft cloth.
- To refit the door:


The two middle panes are identical. To ensure that they are refitted correctly, one of the corners is more angled than the others.

When refitting the lower pane, the more angled corner must be inserted in the left hand retainer at the bottom.

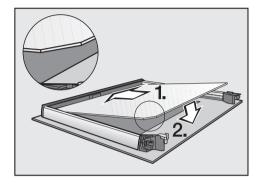


■ Replace the first of the middle panes. The more angled corner must be at the bottom left.


When refitting the upper pane, the more angled corner must be inserted at the top left.

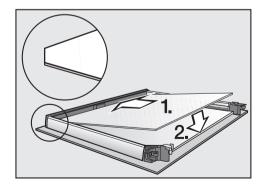

■ Replace the second of the middle panes with the more angled corner at the top left.

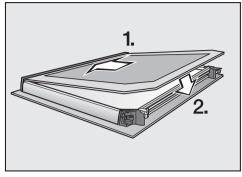


■ Push the inner pane into the plastic strip and insert it in the retainers.

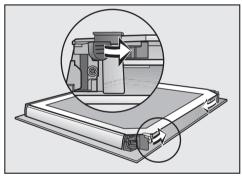

■ Flip the glass pane retainers inwards to close them.


To refit the door

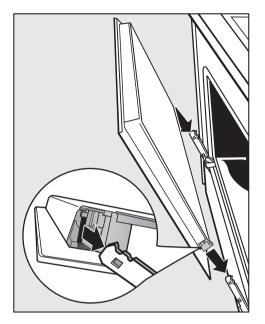

■ Hold the door securely at both sides and carefully fit it back onto the hinge guides.

Make sure that the door goes back on straight.

■ Open the door fully.

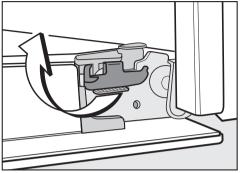


Flip both locking clamps back up as far as they will go into a horizontal position.

It is essential that the locking clamps are flipped down when the door is refitted after cleaning. Otherwise the hinges could work loose, resulting in damage to the door.

To remove the runners

Make sure the oven heating elements are switched off and cool. Danger of burning.

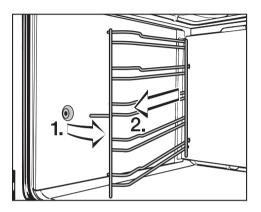


■ Pull the runners forwards out of the holder and remove.

Reassemble in the reverse order, carefully ensuring all parts are correctly in place.

To lower the top heat/grill element

Make sure the oven heating elements are switched off and cool. Danger of burning.

■ Remove the runners.

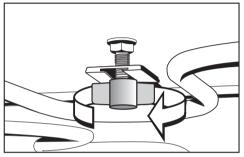

■ Unscrew the wing nut and lower the top heating element.

Do not use force to pull it down as this can cause the element to break.

Reassemble in the reverse order, carefully ensuring all parts are correctly in place.

With the aid of the following guide, minor problems can be easily corrected without contacting Miele.

Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations.

Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure current is not supplied until after maintenance or repair work has been carried out.

Problem	Possible cause and remedy
The oven does not heat up.	 Check if the system lock has been activated.
	 Check whether the demo mode has been activated (see "Settings - Showroom programme").
	 Check whether the mains fuse has tripped. If it has, contact a qualified electrician or Miele.
The halogen lamp	Light in the roof:
needs replacing.	■ Disconnect the appliance from the electricity supply. Switch off and unplug at the socket, or remove the fuse, or switch off at the isolator as appropriate.
	■ Unscrew the lamp cover and the seal.
	■ Change the halogen lamp. When purchasing a new lamp, take the old one with you to make sure you obtain the correct replacement (Osram 66275, 230 V, 25 W, G9, heat resistant to 300 °C).
	Screw the lamp cover and the seal back on again.

Problem	Possible cause and remedy
The halogen lamp needs replacing.	Light in the side wall: ■ Disconnect the appliance from the electricity supply. Switch off and unplug at the socket, or remove the fuse, or switch off at the isolator as appropriate.
	■ Remove the runners.
	■ Use the lever to release the lamp cover from its frame.
	■ Change the halogen lamp. When purchasing a new lamp, take the old one with you to make sure you obtain the correct replacement (Osram 66275, 230 V, 25 W, G9, heat resistant to 300 °C).
	Push the lamp cover back into its retainers, and replace the runners.
A noise can be heard after a cooking process.	This is not a fault. The cooling fan continues to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or on the oven housing unit. When the temperature has fallen sufficiently, the fan switches off automatically. The temperature will fall faster with the oven door open.
Cakes and biscuits are not cooked properly after following the times given in the chart.	 Check that the correct temperature has been set. Check whether there has been a change to the recipe. The addition of more liquid or more eggs makes a moister mix which would need longer to cook.

Problem	Possible cause and remedy
Browning is uneven.	There will always be a slight unevenness. If browning is very uneven, check with Fan plus .: - whether the temperature was set too high, - whether the correct shelf level was used. with Conventional heat - the colour and material of the baking tins being used. Light coloured, shiny, or thin walled tins are less suitable. - whether the correct shelf level was used.
A fault code appears in the display. F + number	 You can rectify the following fault codes yourself: F 23: The pyrolytic temperature of approx. 460 °C was not reached. This could have been caused by too much soiling in the oven to start with. Remove all coarse soiling before starting the pyrolytic cleaning programme again. If the fault message appears again please contact the Miele Service Department. F 32: The door has not locked for the pyrolytic cleaning process. Switch the oven off and start the pyrolytic cleaning process again. If the fault code appears again call the Miele Service Department. F 33: The door lock for the pyrolytic cleaning process will not open. Interrupt the pyrolytic cleaning programme by switching the oven off. If the door lock will still not open please contact the Miele Service Department.

Problem	Possible cause and remedy
A fault code appears in the display. F + number	 F 54: The food probe is faulty. The code will go out as soon as the food probe is removed from the oven. A replacement can be ordered from your Miele Dealer or the Miele Spare Parts Department.
	 F 55: Safety switch-off has been triggered. The oven has switched off automatically as it has been operating for an unusually long time. The length of time depends on the oven function selected. The oven will be ready for use again, after it has been switched off and then back on again.
	For all other fault codes please contact the Miele Service Department.

If it is not possible to remedy a fault by following the instructions given above, contact the Service Department. On no account open the appliance casing.

This appliance should only be repaired by a suitably qualified technician trained by Miele.

After sales service

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact

- your Miele Dealer

or

 the Miele Customer Contact Centre (see back cover for address).


Please note that telephone calls may be monitored and recorded to improve our service. When contacting Miele, please quote the model and serial number of your appliance.

These are shown on the data plate, visible on the front frame of the oven with the door fully open.

Optional accessories

The following accessories may come as standard with some models. They are also available to order at extra cost via the internet on www.miele-shop.com, your Miele Dealer or the Miele Spare Parts Department.

FlexiClip telescopic runners

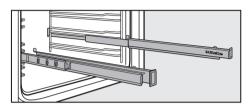

The FlexiClip telescopic runners can be used on any shelf level. Each shelf level can be drawn right out of the oven individually to give a good overview of cooking in progress.

You can fit a FlexiClip runners to all the shelf runners at the same time.

Baking tray, universal tray and rack

These items, supplied with your oven, are also available to order.

When ordering, please quote the model number of your oven.

Gourmet oven dish

The gourmet oven dish can be placed in the oven directly on the runners. It has non-tip safety notches like the universal tray to prevent it being pulled out too far.

It has an anti-stick coating.

It is available in two sizes:

 HUB 5000-M (internal dimensions approx. 38 x 22 x 8 cm)



 HUB 5000-XL (internal dimensions approx. 38 x 35 x 8 cm)



Optional accessories

Gourmet oven dish lid




When ordering a lid, please specify the gourmet oven dish it is to be used with.

Flan/Pizza dish



This circular pan is suitable for cooking pizzas, flat cakes made with yeast or whisked mixtures, sweet and savoury tarts, baked desserts, and can also be used for frozen cakes and pizzas.

Pizza stone

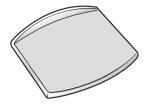

The pizza stone is ideal for items which need a well baked base such as pizza, quiche, bread, bread rolls and savoury snacks.

The baking stone is made from heat retaining fire brick and is glazed. Place it directly on the rack.

A paddle made of untreated wood is supplied with it for placing food on the pizza stone and taking it off.

Miele E-cloth

Removes grease and stains and leaves no smearing. Suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

Oven cleaner

Suitable for removing stubborn soiling. It is not necessary to pre-heat the oven beforehand.

Electrical connection

All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

The **voltage and connected load** are given on the data plate, visible below the oven interior, with the door open. Ensure that these match the household mains supply. Please quote these data, and the model and serial number when contacting Miele.

Connection of this appliance should be made via a fused connection unit or a suitable isolator, which complies with national and local safety regulations, and the on/off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a residual current device (RCD). Please contact a qualified electrician for advice.

When switched off there must be an allpole contact gap of 3 mm in the isolator switch (including switch, fuses and relays acc. to EN 60 335).

Important U.K.

The appliance is supplied for connection to a 230-240 V, 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral


Brown = live

WARNING THIS APPLIANCE MUST BE EARTHED


When replacing the cable supplied with another cable or changing the connection, only cable type H 05 VV-F or H 05 RR-F with a suitable cross-sectional area (CSA) may be used (available from the Miele Customer Contact Centre).

Appliance dimensions and unit cut-out

Installation in a base unit

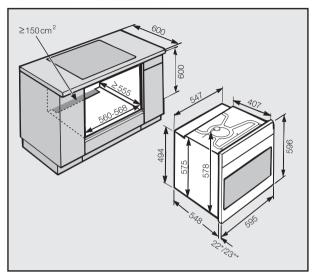


Installation in a tall unit

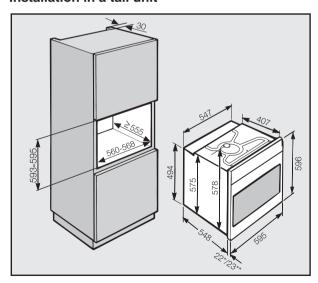

- * Appliances with glass front
- ** Appliances with metal front

Building-in diagrams

Front dimensions

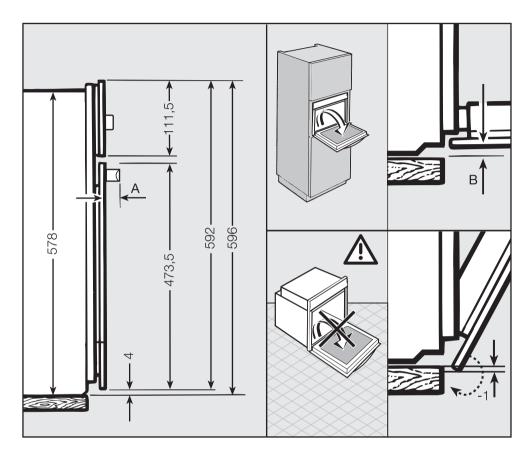

A H 5360: 53.2 H 5460: 47.5

B Appliances with glass front: 2.2 Appliances with metal front: 1.2

Installing the oven

The appliance must not be operated until it has been correctly installed in its housing unit.

Otherwise it poses an electric shock hazard.


To ensure adequate ventilation to the oven once installed:

- do not fit a rear panel into the housing unit.
- make sure that the shelf on which the appliance is placed does not touch the wall.
- do not fit insulation material inside the housing unit.

When installing the appliance do not lift it up by the door handle as this can damage the door.

Turn off the mains electricity supply to the isolator.

- Connect the mains cable from the oven to the isolator.
- Push the appliance into the oven housing unit and align it.

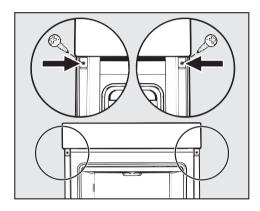

■ Open the oven door and using two screws secure it to the side walls of the housing unit through the holes in the oven trim.

United Kingdom

Miele Co. Ltd.

Fairacres, Marcham Road Abingdon, Oxon, OX14 1TW

Tel: (01235) 554455 Fax: (01235) 554477

Customer Contact Centre Tel: (08707) 554466

E-mail: info@miele.co.uk Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd. A.C.N. 005635398

1 Gilbert Park Drive, Knoxfield, VIC 3180

Tel: (03) 9764 7130 Fax: (03) 9764 7149

Internet: www.miele.com.au

China

Miele Shanghai

Suite 4105-06, Plaza 66 1266 Nanjing Road West

Jing An District

Shanghai 200040, PRC Tel: +86 21 6288 4200 Fax: +86 21 6288 4100

E-mail: mieleshanghai@cn.miele.com

Internet: www.miele.cn

Hong Kong

Miele (Hong Kong) Limited AIA Plaza, 24" Floor 18 Hysan Avenue Causeway Bay

Tel: +852-2610-1331 Fax: +852-2610-1013

E-mail: mielehk@miele.com.hk Internet: www.miele.hk

Ireland

Miele Ireland Ltd.

Broomhill Road, Tallaght, Dublin 24

Tel: (01) 461 0710 Fax: (01) 461 07 97 E-Mail: info@miele.ie Internet: www.miele.ie



New Zealand

Miele New Zealand Limited Unit L, 10-20 Sylvia Park Road Mt. Wellington, 1060, Auckland, NZ

Tel: 0800 264353 Fax: 0800 463453 Internet: www.miele.co.nz

South Africa

Miele (Pty) Ltd 63 Peter Place, Bryanston 2194 P.O. Box 69434, Bryanston 2021

Tel: +27 (0) 11 548-1900 Fax: +27 (0) 11 548-1935 E-mail: info@miele.co.za Internet: www.miele.co.za

Singapore

Miele Southeast Asia Miele Pte. Ltd. 163 Penang Road # 04 - 02/03 Winsland House II Singapore 238463

Tel: +65 6735 1191 Fax: +65 6735 1161

E-Mail: infosea@miele.com.sg Internet: www.miele.sg

United Arab Emirates

Miele Appliances Ltd. P.O. Box 11 47 82 Gold & Diamond Park Sheikh Zayed Road

Building 6 / Offices Nos. 6-214 to 6-220

M.-Nr. 07 247 440 / 01

Dubai

Tel: +971-4-341 84 44 Fax: +971-4-341 88 52 E-Mail: info@miele.ae Internet: www.miele.ae

Alteration rights reserved / 22 / 3008

(H 5360 BP; H 5460 BP)



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com