Panasonic

Proprietary Telephones

Quick Reference Guide

Model KX-T7720E/KX-T7730E/KX-T7750E

Important Information

When using the KX-T7700 series, keep the following conditions in mind.

- If there is any problem, unplug the extension line and connect a known working phone. If
 the known working phone operates properly, have the defective phone repaired by a
 specified Panasonic Factory Service Centre. If the known working phone does not
 operate properly, check the PABX System and the internal extension wiring.
- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps and motors.
- The unit should be kept free of dust, moisture and vibration, and should not be exposed to direct sunlight.
- Do not use benzine, thinner, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.
- Do not disassemble this unit. Dangerous electrical shock could result. The unit must only be disassembled and repaired by qualified service technicians.
- When a failure occurs which exposes any internal parts, disconnect the telephone line cord immediately and return the unit to a service centre.
- This unit is designed to be installed under controlled conditions of ambient temperature and a relative humidity not greater than 60%.
- Avoid installing the unit in damp or humid environments, such as bathrooms or swimming pools.
- Do not push the PAUSE button more than twice following the initial access digit (or digits). Failure to comply with this requirement may result in unsatisfactory operation.
- 999 or 112 can be dialled on the product after accessing the CO line for the purpose of making outgoing calls to the BT emergency (999) and (112) services.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

THIS HANDSET EARPIECE IS MAGNETISED AND MAY RETAIN SMALL FERROUS OBJECTS.

IMPORTANT NOTICE:


Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for use in an emergency.

Notes:

- In this manual, the suffix of each model number is omitted.
- For further information, refer to the Main Unit/PABX Manuals.


Outside (CO) Line button Off-hook On-hook Feature number of Talk * "Location of Controls" is shown on page 8.

Desired Function	Operation
	Making Calls
Calling	To an extension To an external party To an external party □ □ ► phone no. ► (((-))
Redial	PEDIAL P ((1/2)
One-Touch Dialling	To program PROGRAM (Check the type of your Main Unit.) AUTODIAL PROGRAM
	To dial assigned as a One-touch dialling button
Calling an operator	
Speed Dialling (Personal)	To set Check the type of your Main Unit.) Check the type of your Main Unit.) Check the type of your Main Unit.)
	To dial KX-TA624 Personal speed dial no. F(4)
Speed Dialling (System)	To dial AUTO DIAL STORE System speed dial no. F(1) System speed dial no. F(2) System speed dial no. F(3) System speed dial no. F(2) System speed dial no. F(3) System s

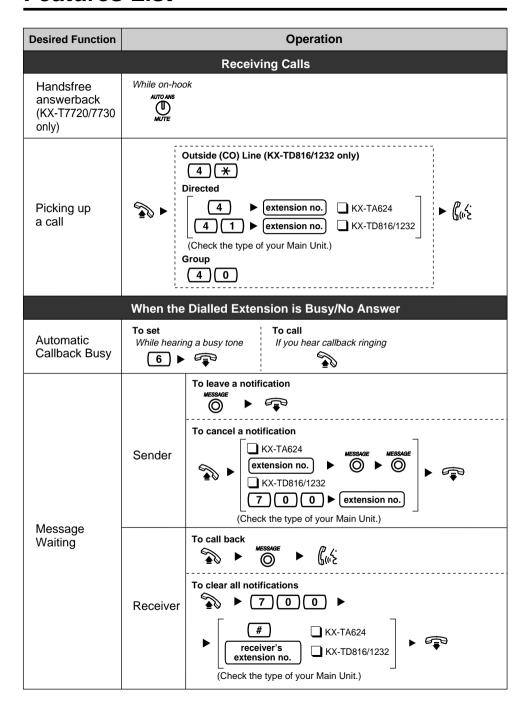

Desired Function		Operation	
	When the	Dialled Extension is Busy/No Answer	
	Sender	While hearing a busy tone 2	
Call Waiting	Receiver	KX-TA624 For outside calls 7 3 1 0 # Cancel For intercom calls 7 3 2 1 # Set 7 3 2 0 # Cancel KX-TD816/1232 7 3 1 0 Cancel (Check the type of your Main Unit.) To talk to the new party While hearing a tone HOLD CO	
		During a Conversation	
Holding a call	Holding HOLD	To retrieve a call at the holding extension NTERCOM NT	
	To retrieve an outside call from another extension Compared to the compared t		
Holding a call exclusively	Holding HOLD	To retrieve a call on exclusive hold NOTERCOM NOTERCO	
Transferring a call	TRANSFER ►	extension no. to an extension to an external party	

Desired Function	Operation
	Useful Features
Paging	To page All extensions Group 3 3 group no. All external speakers 3 4
	Through a telephone speaker 4 3 Through an external speaker (KX-TD816/1232 only) 4 2 external speaker no.
Three-party conference	third party's no. (C) (C) (C) (C) (C) (C) (D)
Setting Absent Message	To be message no. be # KX-TA624 To compare the type of your Main Unit.) The parameter (if required) be the type of your Main Unit.) The parameter (if required) be the type of your Main Unit.)
Log-In/Log-Out	KX-TA624 [7 3 6 0 # For Log-In

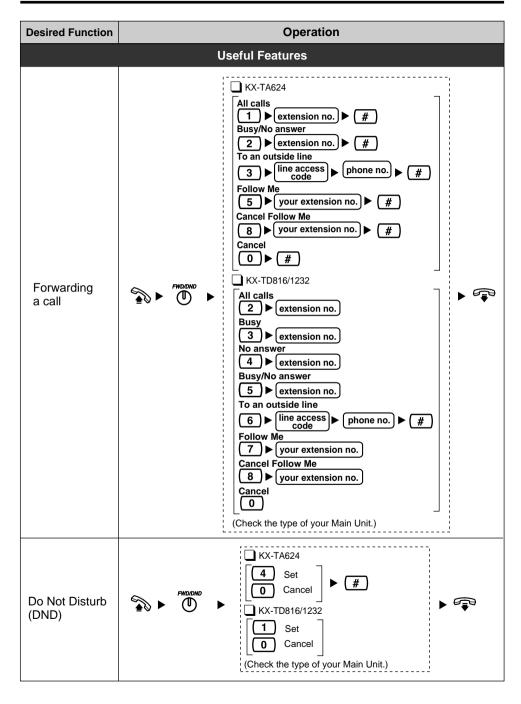


Desired Function	Operation			
Useful Features				
Locking your extension	KX-TA624			
Clearing the setting	7 9 # KX-TA624 7 9 0 KX-TD816/1232 (Check the type of your Main Unit.)			

^{*} Consult your dealer for more details.

Location of Controls

RINGER Volume Selector

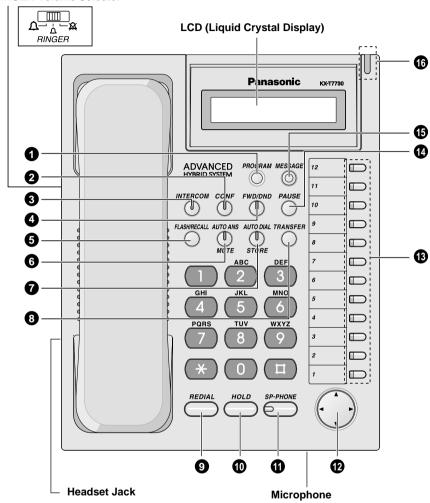

- * The microphone is not available for KX-T7750 users.
- st The display and headset jack are only available for KX-T7730 users.
- * Headset (not included)

Recommendable: KX-TCA87, KX-TCA89

Not available: KX-T7090

- PROGRAM: Used to enter and exit the programming mode. (The system programming mode is available only when the main unit is a KX-TA624.)
- CONF (Conference): Used to establish a multiple party conversation.
- 3 INTERCOM: Used to make or receive intercom calls.
- FWD/DND (Call Forwarding/Do Not Disturb): Used to perform Call Forwarding or Do Not Disturb.
- **5** FLASH/RECALL: Used to disconnect the current call and make another call without hanging up.
- 6 AUTO ANS (Auto Answer)
 (KX-T7720/7730): Used to receive an incoming call in the hands-free mode.

 MUTE (KX-T7720/7730): Used to mute the microphone during a conversation.

 VOICE CALL (KX-T7750): Used to

monitor an intercom call automatically.

- **AUTO DIAL/STORE:** Used for speed dialling or storing program changes.
- **8** TRANSFER: Used to transfer a call to another party.
- 9 REDIAL (ordinarily): Used to redial.
- **10 HOLD:** Used to place a call on hold.
- **SP-PHONE (KX-T7720/7730):** Used for the handsfree operation.

MONITOR (KX-T7750): Used for handsfree dialling. You can monitor the party's voice handsfree.

NAVIGATOR KEY (KX-T7730): Used to adjust the volume and the display contrast or select desired items for each function.

VOLUME KEY (KX-T7720/7750): Used to adjust the volume.

- Flexible Outside (CO) Line Button:
 Used to make or receive an outside call.
 Pressing this button seizes an idle outside
 line automatically. (Button assignment is
 required.) Also used as the desired
 function buttons. (Button assignment is
 required.)
- **PAUSE:** Used to insert a pause during dialling.
- MESSAGE: Used to leave a message waiting indication or call back the party who left the message waiting indication.
- **Message/Ringer Lamp:** The Message/ Ringer lamp informs you visually that you have a message or a call.
 - When you receive a call, the lamp flashes depending on the ringing pattern. When someone has left you a message, the lamp is lit continuously.
 - When the ringing pattern is set to Single (Slow flash), Double (Moderate flash), or Triple (Rapid flash) in your PABX, the lamp flashes. When the other ringing patterns are set in your PABX, the lamp may not flash. (e.g., S-Double, Call Waiting Tone1).

Initial Settings

◆ Speaker volume *

While in on-hook or during a conversation







Press SP-PHONE.

Press Up or Down.

◆ Handset/Headset volume *

While using a handset or headset



Press Up or Down.

◆ Ringer volume

While in on-hook or receiving a call



Slide the lever of the **RINGER** Volume Selector to the desired setting (**HIGH/LOW/OFF**).

◆ Display contrast *

KX-T7730


While in on-hook or receiving a call



Press Left or Right.


* The above settings may return to default settings if the telephone line cord is disconnected or the main unit's power is interrupted.

Connection

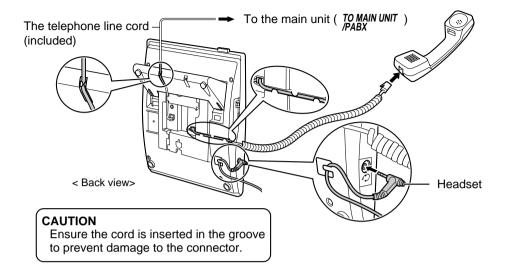


Wall Mounting

1 Pull down the handset hook until it locks, so the tab holds the handset.

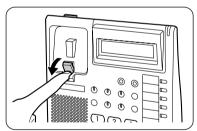


2 Remove the attached stand.

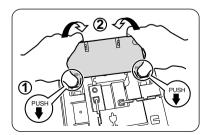


* The illustrations used in this page are a KX-T7730.

3 Mount the unit on the wall.

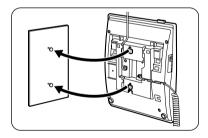

To temporarily place the handset down during a conversation,

hook it over the top edge of the phone as shown.

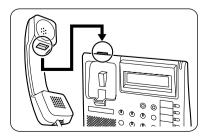

Other Information:

 This unit is capable of being used in conjunction with hearing aids fitted with inductive coil pick-ups. The handset should be held as for normal conversation. For operation the hearing aid should be set to its "T" position or as directed in the operating instructions for the hearing aid.



Included Accessories:

Handset	1
Telephone line cord	1
Handset cord	1

$C \in$

This product is intended to be connected to Panasonic KX series PABX only. This product complies with the essential requirements of the Directive 1999/5/EC Radio and telecommunications terminal equipment directive.

A copy of the manufacturers declaration of conformity to the essential requirements of the R&TTE directive is available at the following web address: http://doc.panasonic-tc.de

Panasonic Business Systems U.K.

Panasonic House, Willoughby Road, Bracknell, Berkshire RG12 8FP

© 2002 Kyushu Matsushita Electric Co., Ltd. All Rights Reserved.

Printed in the United Kingdom

PSQW1804ZA KU0302YK0 (F)

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com