

# Panasonic®

## Operating Instructions Wireless Remote Control System



**Model No. CZ-RWSU1U  
CZ-RWST1U  
CZ-RWSU2U  
CZ-RWSC1U  
CZ-RWSY1U  
CZ-RWSK1U**



Before operating the unit, read these operating instructions thoroughly and keep them for future reference.

85464609158012

Panasonic Corporation  
1006 Kadoma, Kadoma City, Osaka, Japan  
CV6233189680

# CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS .....	1
2. NAMES AND OPERATIONS .....	2
3. INSTALLING BATTERIES.....	7
4. SETTING THE CURRENT TIME .....	8
5. OPERATION .....	9
6. TIMER OPERATION .....	11
7. ADJUSTING THE WIND DIRECTION .....	13
8. OPERATING MULTIPLE IN/OUTDOOR UNITS SIMULTANEOUSLY .....	14
9. USING THE REMOTE CONTROLLER.....	15
10. FOR BEST RESULTS.....	15
11. ADDRESSES.....	16
12. EMERGENCY OPERATION .....	19
13. MISCELLANEOUS SETTINGS .....	21
14. BEFORE REQUESTING SERVICE.....	22
15. SPECIFICATIONS .....	23

# 1. IMPORTANT SAFETY INSTRUCTIONS

Before using the system, be sure to read these "IMPORTANT SAFETY INSTRUCTIONS". After reading this manual, save it in a convenient place.

## Warning

### Installation Precautions

- Do not install yourself. Installation should always be performed by your dealer or a professional service provider. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
- Use only specified air conditioners. Always use only air conditions specified by the dealer.

### Precautions for Use

- Do not touch switches with wet hands. Electric shock and damage to the system can result.
- Protect the remote controller from water. Damage to the system can result.
- Stop the system and turn the power off if you sense unusual smells or other irregularities. Continuing operation when the system is out of order can result in electric shock, fire, and damage to the system. Contact your dealer.
- Do not swallow the battery.

### Moving and Repair Precautions

- Do not repair. Never repair the system by yourself.
- Contact your dealer before moving the system. Contact your dealer or a professional service provider about moving and reinstalling the system.

Electric shock or fire may result if an inexperienced person performs any installation procedures incorrectly.

#### Note:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: To assure continued compliance, follow the attached installation instructions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## 2. NAMES AND OPERATIONS

### REMOTE CONTROLLER

One remote controller can control a group of up to eight indoor units.  
(See Page 14)

#### 1. Operation Display

Displays the operation status. (The figure shows all the statuses.)

- The auto-flap display may be different, depending on the installed unit. (See Page 13)

#### 2. Start/Stop button

Pressing this button once starts and pressing again stops the operation.

#### 3. Fan speed button

#### 4. Swing/Wind Direction button

#### 5. Timer setting button

Use for operating with a timer.

#### 6. Reset button

Use this button after changing the batteries.

#### 7. Cover

Press at the top center and then slide down.

#### 8. Transmitter

#### 9. Remote control sensor

Detects the temperature at the remote controller when detection has been switched to the remote controller by the sensor button.

#### 10. Temperature setting buttons

 raises the temperature setting.

 lowers the temperature setting.

#### 11. Filter button


##### CZ-RWSC1U

Press to turn off the filter lamp on the receiver.

#### 12. Mode Select button


Press to switch the operation mode.

#### 13. Ventilation button

Use this when connected to an aftermarket fan. Pressing this button starts and stops the fan. When the air conditioner is started or stopped, the fan starts or stops at the same time. () appears on the display of the remote controller when the fan is operating.)

#### 14. Address button

#### 15. Sensor button

Use this when switching to detect the temperature at the remote controller. At shipping the default setting is set to detect the temperature at the unit. At this time  is shown on the display.


#### 16. Clock button

Use this when setting the clock.

From this page on the names of remote control buttons will be abbreviated as the illustration of the "button".

E.g.: Start/Stop button → 

## REMOTE CONTROLLER

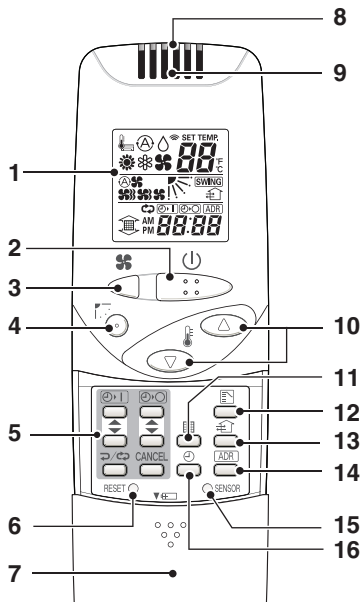

## 2. NAMES AND OPERATIONS (Cont.)

### RECEIVER

#### 1. Receiver

Receives the signal sent from the remote controller.

#### 2. Emergency operation button

##### Display lamps

When an error occurs, one of the lamps flashes. When a display lamp is blinking, refer to "14. BEFORE REQUESTING SERVICE".

#### 3. Operating lamp

This lamp is lit when the unit is operating.

#### 4. Timer lamp

This lamp is lit when the timer is set.

#### 5. Standby lamp

- When the heater is working, the lamp lights at the following times. When the thermostat has operated during defrosting at the time of the startup.
- The lamp flashes when an error occurs.

#### 6. Filter lamp

This lamp is for notifying you when the filter needs to be cleaned.

#### 7. Swing button

#### 8. Normal/Stop All switch

Use in the **Normal** position. It does not operate in the **Stop All** position.

#### Remote control, main / remote control, secondary, switch

In normal use this should be on remote control, main. It is also possible to use both

in conjunction with a wired remote controller (sold separately). (Consult with the dealer where the product was purchased about making the settings.)

#### Test/On switch

This is used during service. It is not for normal use.

#### Test Run/On switch

This is used during service. It is not for normal use.

#### 9. Address switch


Differentiate between incoming and outgoing signals.

#### Note


- If a heat pump model is being used, it will beep twice and the operating lamp will light up on the display; if the timer and standby lamps blink alternately, a conflict between the heating and cooling exists, so the unit cannot operate in the desired mode. (On models that do not have Auto function, even if Auto is selected, it works in the same way.)
- When the local operation is disabled by such as the centralized control, and if the Start, Stop, Mode or Temperature setting buttons are pressed, the unit will beep five times and the change will not be made.

RECEIVER


CZ-RWSU1U

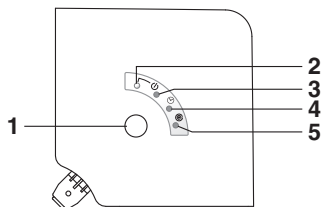


CZ-RWST1U

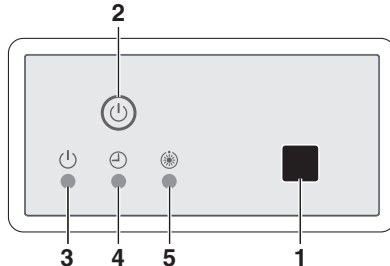

CZ-RWSC1U

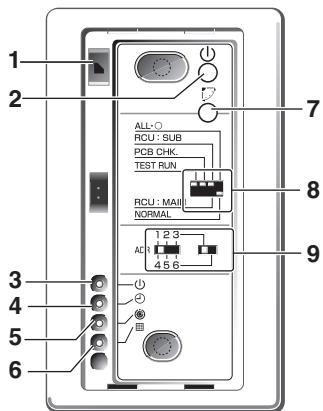


CZ-RWSY1U

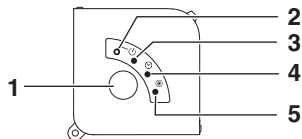


## 2. NAMES AND OPERATIONS (Cont.)

### RECEIVER

#### CZ-RWSU2U

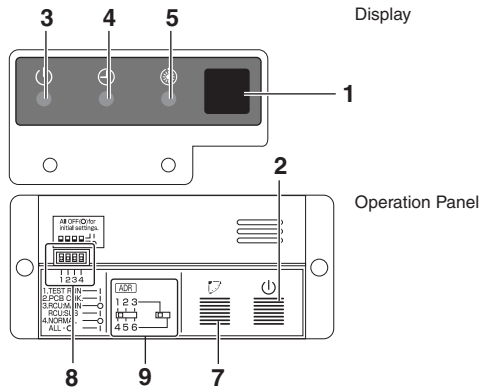

#### Indoor Unit (CZ-RWSK1U)

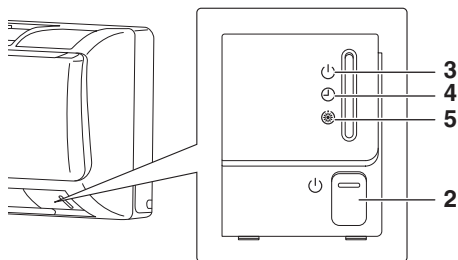



### 3. INSTALLING BATTERIES

#### 1. Remove the cover.


#### 2. Insert two AAA alkaline batteries.

Put the batteries in with the polarity [+/-] as shown in the figure.

#### 3. Gently insert one end of an unfolded paper clip (or a similar object that can fit) into the Reset hole and press the reset button inside the hole and then put the cover back on.

#### Note

- Change the batteries when the display of the remote controller gets weak or if it will not work unless close to the receiver. (Alkaline batteries generally last about one year.)
- When changing batteries, always use two fresh batteries of the same make.
- If the remote controller will not be used for a long period of time, remove the batteries.
- Please dispose of batteries appropriately.
- After changing the batteries, follow the procedures on the next page to reset the current time.

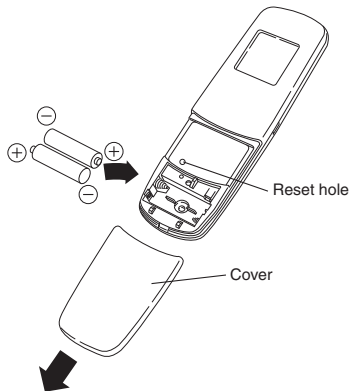

### HOW TO REMOVE BATTERIES

#### 1. Remove the cover.

#### 2. Press the battery toward the negative end and lift it out by its positive end. (As shown at right)


#### 3. Remove the other battery in the same way.

#### Note

- Dispose of the used batteries at the designated location in compliance with the applicable local ordinances.

### ⚠ Warning

- Do not swallow the battery.
- After removing the battery from remote controller, keep it away from the reach of children. The battery can cause death by suffocation if swallowed.
- When inserting the battery, make sure the polarities (+ and -) are correct.

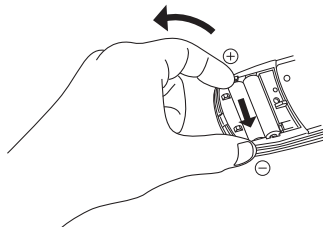

## 4. SETTING THE CURRENT TIME

After changing the batteries and pressing reset, be sure to reset the current time.

(When reset is pressed, the current time reverts to [0:00])

**1. Press  $\ominus$  for two seconds or more.**

Once the clock displays starts blinking, the clock can be set.

**2. Set the hour with  $\blacktriangle$  /  $\blacktriangledown$  of the  $\text{Ⓢ}$ .**

If you press and hold the button, the time changes quickly.

**3. Set the minutes with  $\blacktriangle$  /  $\blacktriangledown$  of the  $\text{Ⓢ}$ .**


If you press and hold the button, the time changes quickly.

**4. Pressing  $\ominus$  completes the time setting.**

- While you are setting the current time, the time display flashes but the colon does not.
- If the buttons are not pressed for three minutes while setting the current time, it is set to the displayed time.

**Note**

- When reset is pressed, the timer settings are deleted.

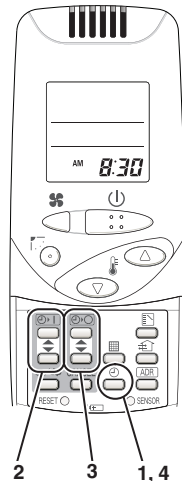










## 5. OPERATION

### Auto , Heat , Dry , Cool , Fan

Models that only provide the cooling function cannot operate in the auto or heating modes.





**Power:** Turn on the power of the indoor unit at least 14 hours before operation.

1. Press .
2. Press  and select from among Auto , Heat , Dry , Cool  and Fan .
3. Press  and select the desired speed.

If set to Auto , the fan speed switches automatically. (Auto does not work when in the Fan mode.)


4. Press one of the   buttons and set the desired temperature.

Temperature settings cannot be made when in the Fan mode.

	MAX	MIN
Auto 	80	62
Heat 	78	60
Dry  / Cool 	86	64



**Stop:** Press .

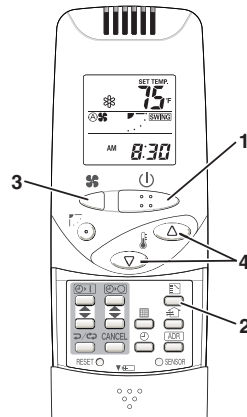When the unit is stopped with the remote controller, even though the compressor of the outdoor unit stops, the fan on the outdoor unit may continue to run for a while.



## 5. OPERATION (Cont.)

---

**If the unit is not heating very effectively with a Low fan speed , switch the fan speed to High  or  Medium.**

Depending on the indoor unit being used, it may indicate a function that it does not have. (The fan speed is set.)


**If you cannot turn the air conditioner off in the normal way.**

Disconnect the power to the indoor unit and contact the dealer where the product was purchased.

### <Auto Operation>

If all the indoor units are identical in a cooling system and are under control as one group, it heats or cools automatically via the differences between the set temperature and the room temperature.







### <Dry Operation>

- Depending on the indoor unit used, the remote controller may have a [Dry]  indicator on its display even though the unit does not have the Dry function. (Same as cooler operation)
- When the room temperature approaches the temperature setting, the unit continues to start up or stop automatically.
- When the drying mode stops operating, the indoor unit's fan blows a gentle breeze in order to keep the moisture from returning to the room at a minimum.
- Depending on the indoor unit used, and/or the temperature in the room, the fan speed may not be adjustable.
- Depending on the unit used, when the outside air temperature is 59 °F or less, the dry function will not operate.

## 6. TIMER OPERATION





- When setting the timer, make sure the current time on the remote controller is accurate.
- The timer's clock can only be set when the display of the remote controller is ON.
- After setting the timer, put the remote controller in a place where its signal will reach the receiver of the indoor unit. (When the time set for the timer is reached, a signal is sent from the remote controller to Start/Stop the unit.)

### Using the Timer

1. Press either  /  of the  or , and while the time is being displayed, if you press  /  again, a scheduled time can be set.



The time last set on the timer is displayed.

"--:--" indicates time to change the batteries.


2. Press either  /  of the  or  and set the timer to the desired time.

Every time you press  / , the time changes in 10 minute increments.

If you press and hold the button, the time changes quickly.

3. After setting the timer, if you press  / , the time you set changes to a steady display, indicating settings are complete.

After the timer setting is displayed for three seconds, the display reverts to the current time.

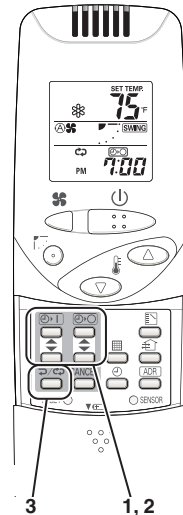





## 6. TIMER OPERATION (Cont.)

---



 



### Combining ON and OFF Timers

- Setting the ON and OFF timers, respectively.





### Checking the timer setting

- If you press either  /  for the  or the , the scheduled time is displayed for four seconds.
- When no timer setting has been made, it displays --:-- (Initial Setting)





### Changing a timer setting

- Press  /  for the  or the , and then when the timer setting is displayed, press  /  for the timer again.

### Canceling a timer setting

- If you press [CANCEL], the timer setting is canceled.
- If you wish to cancel the setting for either the  or the  timer, press  /  or the desired timer and when the scheduled time is displayed, press [CANCEL].

### Using the same timer setting every day


- If you press  for 2 or more seconds, "" is displayed and the **ON timer** or the **OFF timer** will operate the unit at the same time every day.
- If you press  again for two seconds or more, "" goes off and the timer operates just once.

## 7. ADJUSTING THE WIND DIRECTION



- Never try to manually move the flap (up-down wind direction plate) that is operated by the remote controller.
- When the unit stops, the flap (up-down wind direction plate) automatically faces downwards.
- When the unit is in heating standby, the flap (up-down wind direction plate) faces upward. Also, bear in mind that the flap starts swinging after the heating standby mode is released, but the display on the remote controller indicates Auto Flap during standby heating as well.

### CZ-RWSU1U/CZ-RWST1U/CZ-RWSU2U/ CZ-RWSY1U/Indoor Unit (CZ-RWSK1U)



#### Setting the Wind Direction

While the unit is operating, every time you press , the direction the flap faces changes.


#### Setting Flap to Swing

If you press  to set the flap (up-down wind direction plate) in its most downward facing position, and then press  again, **SWING** is displayed and the flap swings automatically up and down.

#### Stopping Flap Swing

If you press  again while the flap is swinging, you can stop the flap from swinging and set it in place as desired. Thereafter, if you press , you can set the wind direction starting from the most upward position.

- When the unit is in the Cool or Dry modes, the flap cannot stop facing downwards. If you try to stop the flap from swinging while it is facing downwards, it will continue moving until it is in the third position from the top.

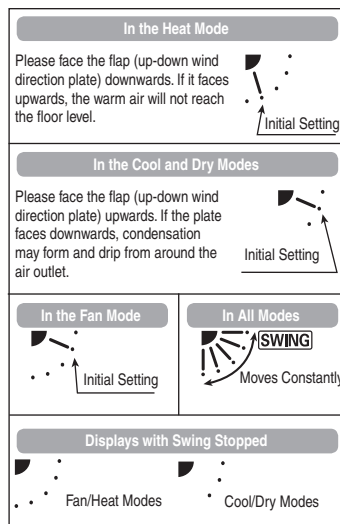

## 7. ADJUSTING THE WIND DIRECTION (Cont.)

### CZ-RWSC1U

The available functions differ depending on the indoor unit being used. The wind direction cannot be set via remote controller for any models other than those noted below. For more information, please refer to the users' manual that came with your indoor unit.

#### **Four-direction Ceiling Cassette Models, Bi-directional Ceiling Cassette Models, Unidirectional Cassette Models for High Ceilings, Ceiling Suspended Models, Wall Models**


Please refer to *Setting the Wind Direction* and *Stopping Flap Swing*.

## 8. OPERATING MULTIPLE IN/ OUTDOOR UNITS SIMULTANEOUSLY

(Group Control)

### **Group control works well for providing air conditioning to one, large room with more than one air conditioning units.**

- One remote controller can operate up to eight indoor units.
- All the indoor units have identical settings.
- Set temperature sensing to the indoor unit (Main Sensor). (See Pages 1 and 2)

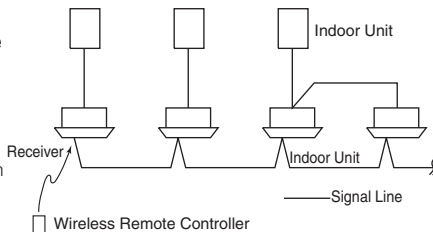


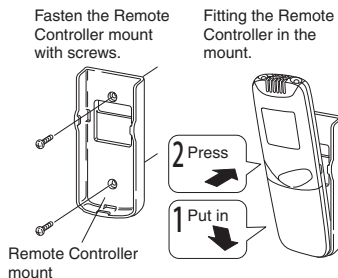


## 9. USING THE REMOTE CONTROLLER

- Point the transmitter of the remote controller at the receiver. When the signal is received correctly it will beep once. (It beeps twice only when the unit starts operating.)
- The signal can be received at a distance of about 19 ft. This distance should be used only as a guide. It depends on battery strength.
- Make sure nothing is between the remote controller and the receiver that could block the signal.
- Do not leave the remote controller in direct sunlight, where the wind from the air conditioner can blow directly on it, or near any other heat source.
- Take care not to drop, throw or wash the remote controller with water.
- The signal from the remote controller may not be received in rooms with rapid start fluorescent lighting, inverter lights, plasma displays, LCD televisions (monitor), etc. For more information, please contact the dealer where the product was purchased.

### Wall Mount Use

- Press  from the location you wish to mount the remote controller and make sure the signal is received correctly.
- Pull the remote controller forward to remove it.



## 10. FOR BEST RESULTS

### Don't get the remote controller too far away from the receiver.

This may cause a malfunction.

Be sure to keep the remote controller in the same room as the receiver.

### Point the remote controller at the receiver.

When the signal is received correctly it will beep one time.

### Avoid locating the remote controller where it is covered, such as behind a curtain.

Keep it out in the open.

## 11. ADDRESSES

**In both multi and single unit installations**, when more than one indoor unit is installed in the same room with a compatible remote controller, addresses can be set up to avoid crosstalk.

By setting the address switches on the receivers and matching them with the number of addresses on the remote controller, up to six indoor units can be controlled separately with the remote controller. (When using units in a flexible combination or operating multiple units simultaneously, as they are operated at the same time, they cannot be controlled individually.)

There are separate address settings, receiver addresses for the receivers\*<sub>1</sub> and transmitter addresses for the remote controller.

For more information, please contact the dealer where the product was purchased.

- The setting procedure is different for CZ-RWSY1U and Indoor Unit (CZ-RWSK1U). (See Page 18)
- These settings are saved in nonvolatile memory in the remote controller, so even when its batteries are changed, the settings do not have to be made again.

\*<sub>1</sub> CZ-RWST1U is of receivers (Inside the indoor unit); CZ-RWSU2U is of an operation panel. (Inside the indoor unit)

### Checking Addresses

When you press **[ADR]** on the remote controller, its current address is shown in the display. If this address corresponds to the address of a receiver\*<sub>2</sub>, the buzzer sounds. (If it is on ALL, the buzzer will always sound.)

If it is on ALL, it can be operated regardless of receiver addresses. Point the remote controller at the receiver you wish to operate and transmit.

\*<sub>2</sub> CZ-RWSU2U is a receiver (Indoor unit)

### Matching up Addresses

#### Setting Remote Control Addresses

- 1. If you press **[ADR]** and **↔** at the same time, “SET” will blink.**
- 2. While holding **[ADR]** down, every time you press **↔**, it cycles from ALL→1→2→3... 6→ALL.**

Set it to the receiver address switch of the indoor unit you wish to operate.

- 3. When you release **[ADR]**, the address that was displayed is set.**

When you do this, if it corresponds to the receiver's address setting, the buzzer sounds.

Address Display on the remote controller				• • • • •	
<b>CZ-RWSU1U</b>					
Position of receiver's (inside indoor unit) address switch	The position of the receiver's address switch does not matter.			• • • • •	For 1, 2 and 3, set the switch on the right and for 4, 5 and 6, to the left. 
<b>CZ-RWST1U</b>					
Position of receiver's (inside indoor unit) address switch	The position of the receiver's address switch does not matter.			• • • • •	For 1, 2 and 3, set the switch on the left and for 4, 5 and 6, to the right. 
<b>CZ-RWSU2U</b>					
Position of the operation panel's (inside indoor unit) address switch	The position of the receiver's address switch does not matter.			• • • • •	For 1, 2 and 3, set the switch on the left and for 4, 5 and 6, to the right. 
<b>CZ-RWSC1U</b>					
Position of the Receiver's Address Switch	The position of the receiver's address switch does not matter.			• • • • •	For 1, 2 and 3, set the switch on the left and for 4, 5 and 6, to the right. 

## 11. ADDRESSES (Cont.)

---

### Setting Addresses (CZ-RWSY1U/CZ-RWSK1U)

#### (Setting the address of the indoor unit)

- 1. First of all, set the address for the remote controller with Setting Remote Control Address (See Page 16).**
- 2. Press [Emergency Operation] ⏻ of the indoor unit for four seconds or more.**  
When you do this, the lamps of the display will blink one after another.
- 3. Press [ADR] on the remote controller.**
- 4. The buzzer will sound and the address of the indoor unit will change to the address displayed on the remote controller.**
- 5. If you press [Emergency Operation] ⏻ of the indoor unit once, the lamps on the indoor unit's display will turn off.**

#### Note

- Please do not hold the [Emergency Operation] ⏻ button of the indoor unit down while the indoor unit's display lamps are blinking one after another.
- Make sure to operate while the indoor unit is stopped.
- The address of indoor unit is set to "ALL" at the time of the shipment.

## 12. EMERGENCY OPERATION

Use [Emergency Operation]  in the following situations when there is an urgent need.

- When the remote controller's batteries have failed.
- When the remote controller is broken.
- When the remote controller is lost.

\*1 Figures: CZ-RWSU1U, CZ-RWSY1U and CZ-RWST1U are of receivers (inside indoor unit), CZ-RWSU2U is of the operation panel (inside indoor unit) and Indoor Unit (CZ-RWSK1U) is of its front panel.


### **CZ-RWSU1U/CZ-RWST1U/CZ-RWSY1U/Indoor Unit (CZ-RWSK1U)**

**Start: press [Emergency Operation]  of the receiver.**


If the indoor temperature is 75 °F or greater when the unit starts running, it will act as a cooler.

If the indoor temperature is less than 75 °F when the unit starts running, it will act as a heater.


CZ-RWSU1U

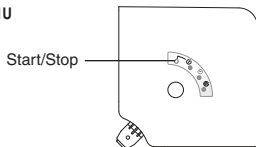


CZ-RWST1U

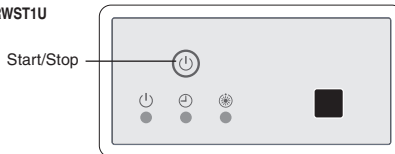

CZ-RWSY1U

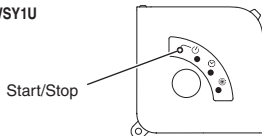

Indoor Unit (CZ-RWSK1U)

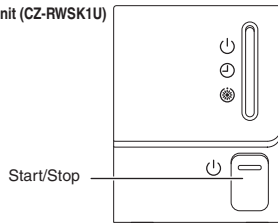

## 12. EMERGENCY OPERATION (Cont.)

**Stop:** press [Emergency Operation]  of the receiver again.

### Note

- The Test Run/On and Test/On switches are for use when the unit is installed and test run. It is not for normal use.
- If the [Normal/Stop ALL] switch is on **Stop ALL**, the unit cannot receive signals from the remote controller.


### CZ-RWSC1U/CZ-RWSU2U

**1. Press [Emergency Operation]  of the receiver.**


If the indoor temperature is 75 °F or greater when the unit starts running, it will act as a cooler.

If the indoor temperature is less than 75 °F when the unit starts running, it will act as a heater.

CZ-RWSC2U

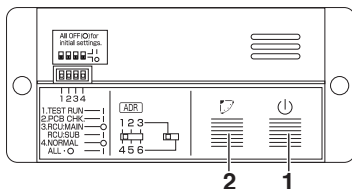

CZ-RWSC1U

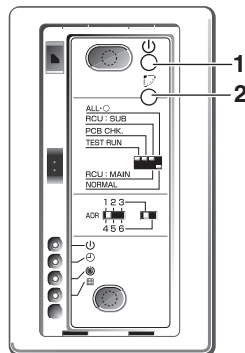

**2. If you press , the wind direction automatically oscillates up and down.**

**Stop:** press [Emergency Operation]  of the receiver again.

### Note

- The Test Run/On and Test/On switches are for use when the unit is installed and test run. It is not for normal use.
- If the [Normal/Stop ALL] switch is on **Stop ALL**, the unit cannot receive signals from the remote controller.

## 13. MISCELLANEOUS SETTINGS







 
 





 



 










A variety of changes can be made to settings, depending on the indoor unit being used.

### Wind Direction (flap) indicator, operation mode indicator, time display (24 hour, AM/PM), Heat Max Temp

- For information about the flap function, refer to the users' manual of the unit being used.
- (These settings are saved in nonvolatile memory in the remote controller, so even when its batteries are changed, the settings do not have to be made again.)
- First check the display of the remote controller when the unit is stopped and then make any desired settings.

#### How to Operate

- While holding down the buttons below, every time  is pressed the remote controller's display changes.
- Whatever is being displayed when you release  is set.

Setting Item	Operation Button	Setting Content	Remote Controller's Display
Remote controller flap display setting for when  is pressed	Press  while pressing 	Models with movable flaps	 
		Swing only models	
		Models w/o lamps	None
Remote controller operation mode display setting when  is pressed	Press  while pressing 	Heat Pump (with Auto)	    
		Heat Pump (without Auto)	   
		Dedicated air conditioner	  
Clock display setting	Press  while pressing 	24 Hour	
		AM/PM	
Max possible temperature setting in the Heat mode	Press  while pressing 	Maximum heating temperature range is 78 °F – 86 °F	

## 14. BEFORE REQUESTING SERVICE

Before requesting service, please check the followings.

Problem	Cause	Solution
The unit doesn't work even when <b>⏻</b> is pressed on the remote controller.	The power to the indoor unit is not ON.	Make sure the power to the indoor unit is ON.
	Is the Normal/Stop All switch in the Stop All position? (See Page 6)	Switch it to the Normal position and cancel operation.
	Are the remote controller's batteries dead?	Change the batteries.
	Is there a mismatch between the display lamp and cooling/heating or is it set to something other than Auto? (The operating lamp stays lit, while the timer lamp and the standby lamp blink alternately.)	Change the operating mode.
	Do the addresses match one another?	Check the addresses of the receiver* <sup>1</sup> and the remote controller. (See Page 15)
The air conditioner starts and stops on its own.	Has the timer been set to repeat?	Check the timer settings. (See Page 11)
" <b>EP</b> " is displayed on the remote controller when the unit is stopped.	An error has occurred in the non-volatile memory.	Please contact your sales outlet.
Although the unit is for air conditioning only, either Auto or Heat is indicated in the display.		Make settings to the remote controller's operation mode display. (See Page 21)
After putting the batteries in the remote control, even when it is operated, the display does not change.		Press the reset button on the remote controller. (See Page 7)
The timer cannot be set.		Make the settings when the remote controller is in Operation Display. (See Page 11)

If the problem persists even after you check the foregoing items, stop the unit, disconnect the power to the indoor unit and contact the dealer where the product was purchased with the model number and problem you are having. As it is dangerous, under no circumstances should you undertake repairs yourself.

Further, when the receiver's\*<sup>2</sup> lamps are blinking; please contact your retailer with that information.

\*<sup>1</sup> CZ-RWSU2U is an operation panel

\*<sup>2</sup> CZ-RWSU2U is a display



## 15. SPECIFICATIONS

### CZ-RWSU1U/CZ-RWST1U/CZ-RWSC1U/CZ-RWSY1U/CZ-RWSK1U

 
 
 
Wireless Remote Controller	Dimensions	7-11/64 in. (H) × 2-13/32 in. (W) × 47/64 in. (D)
	Power source	Two AAA alkaline batteries
	Clock Accuracy	±30 seconds per month (at 77 °F)

### CZ-RWSU1U/CZ-RWST1U/CZ-RWSC1U/CZ-RWSY1U

Receiver	Dimensions	CZ-RWSU1U	7-13/32 in. (H) × 7-13/32 in. (W) × 1-17/64 in. (D)
		CZ-RWST1U	2-9/16 in. (H) × 5-1/8 in. (W) × 55/64 in. (D)
		CZ-RWSC1U	4-23/32 in. (H) × 2-3/4 in. (W) × 33/64 in. (D)
		CZ-RWSY1U	4-1/4 in. (H) × 4-1/4 in. (W) × 25/32 in. (D)
	Power source	16 V DC (Supplied from the terminal strip of the indoor unit's remote control)	

### CZ-RWSU2U

Display	Dimensions	1-29/64 in. (H) × 2-3/4 in. (W) × 55/64 in. (D)
	Power source	5 V DC (supplied from the operation panel)
Operation Panel	Dimensions	2-11/64 in. (H) × 4-23/32 in. (W) × 5/8 in. (D)
	Power source	16 V DC (Supplied from the terminal strip of the indoor unit's remote control)



**DC0911-20112**

**Printed in Japan**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>