 


Remote Control Operation Guide


Model No. **EUR7722KM0**

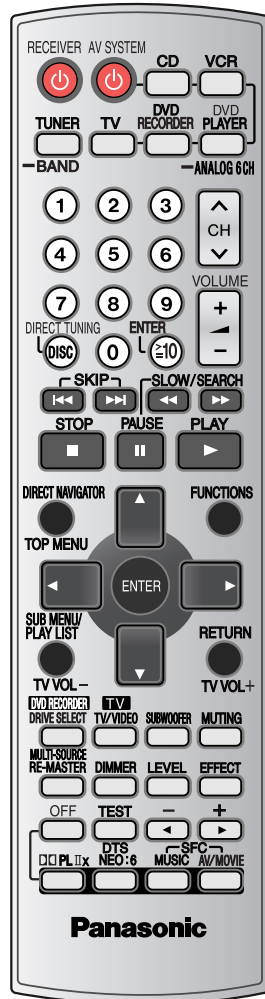

Welcome to the world of Home Theater.

This remote control is the key to your home theater experience.

RECEIVER




 

 


**First,
turn on the receiver.**

**Now, you can operate
other Home Theater
components.**

You may need to enter
a code to operate
some equipment.



CODES
➔ Page 6

 TV ➔ Page 2	 VCR ➔ Page 4
 DVD PLAYER ➔ Page 2	 CD PLAYER ➔ Page 4
 DVD RECORDER ➔ Page 3	 RECEIVER ➔ Page 5

Actual operations depend on your equipment and software.
Be sure to read the instructions for the receiver and your other components.



 
TV




DVD PLAYER

Watching TV




Switch on

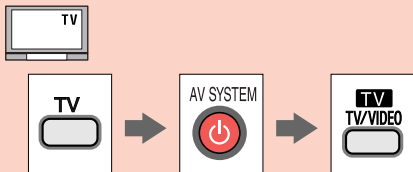

Switch off

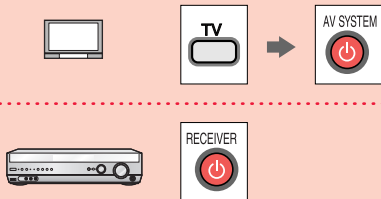 


Operating the TV

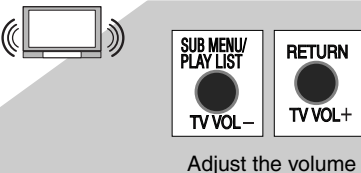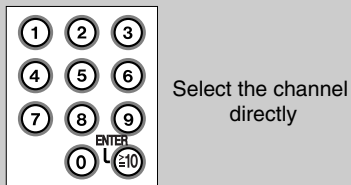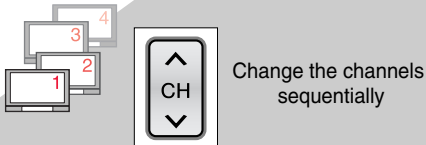   


Watching DVDs



 
Switch on

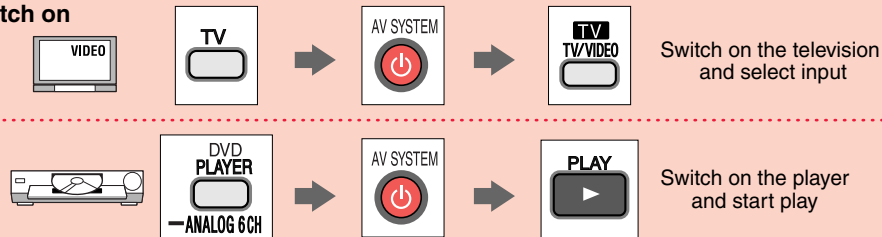

Switch off

 

Operating the DVD player

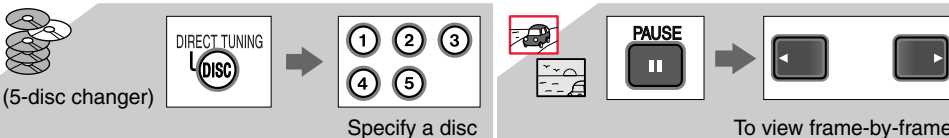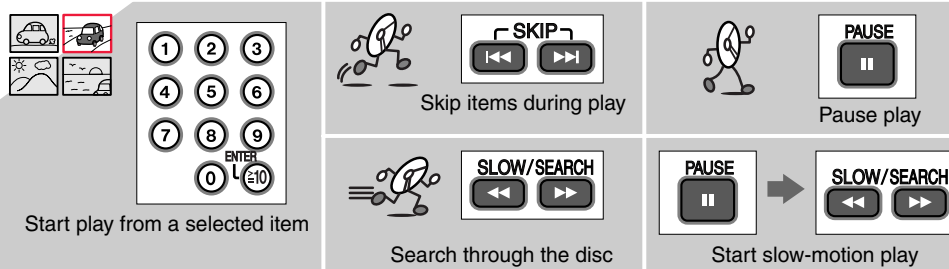  
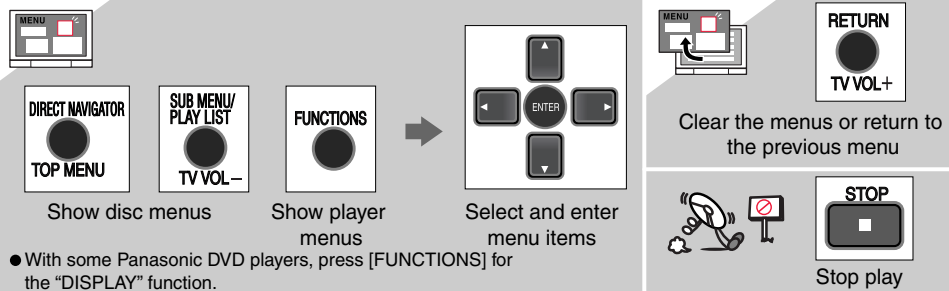 





DVD RECORDER

Watching DVDs

  Switch on



Switch off

 

Operating the DVD recorder

MENU (with TV icon): Clear the menus or return to the previous menu

RETURN (TV VOL+): Clear the menus or return to the previous menu

DIRECT NAVIGATOR (TOP MENU): Show disc menus

SUB MENU/PLAY LIST (TV VOL-): Show recorder menus

FUNCTIONS: Select and enter menu items

ENTER (with arrow keys): Select and enter menu items

STOP: Stop play

SKIP: Skip items during play

PAUSE: Pause play

SKIP (with TV icon): Skip items during play

PAUSE (with TV icon): Pause play

SLOW/SEARCH: Search through the disc

PAUSE (with TV icon) → **SLOW/SEARCH**: Start slow-motion play

ENTER (with TV icon) → **SKIP** (with TV icon): Start play from a selected item

PAUSE (with TV icon) → **SKIP** (with TV icon): To view frame-by-frame



Operating the DVD recorder



If it does not change

After performing the following operations, press this button again.

1. Press [DVD RECORDER].
2. While pressing [ENTER], press and hold [8] for approximately 2 seconds.

To return

In step 2 above, while pressing [ENTER], press and hold [9] for approximately 2 seconds.

The factory setting is [9].

When using a Panasonic DVD recorder

Change the unit's remote control code to match the remote control code of the DVD recorder.

Preparations: Check the remote control code of the DVD recorder.

For about one second press [ENTER] and the button ([1], [2] or [3]) which is the same number as the remote control code set by the DVD recorder.


The factory setting is [1].




VCR

Watching videotapes

Switch on

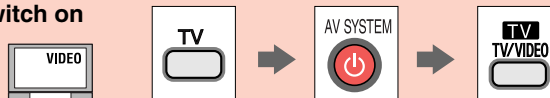


Switch on the television and select input

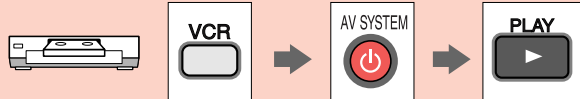


Switch on the player and start play

Switch off

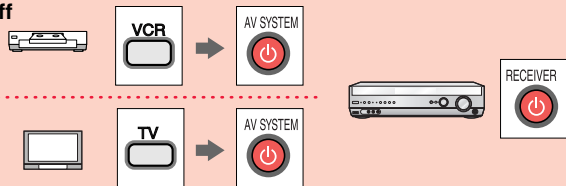


Operating the video deck

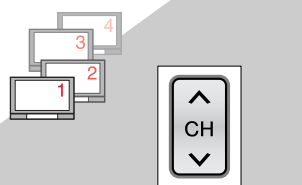

Change the channels sequentially



 Select the channel directly

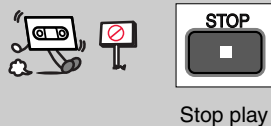

Stop play



Pause play



Rewind or fast-forward



CD PLAYER

Listening to CDs

Switch on

 


Switch on the player and start play


Switch off




Operating the CD player

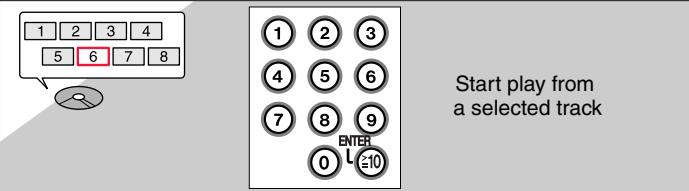

Start play from a selected track

 

Specify a disc [3- or 5-disc changer]

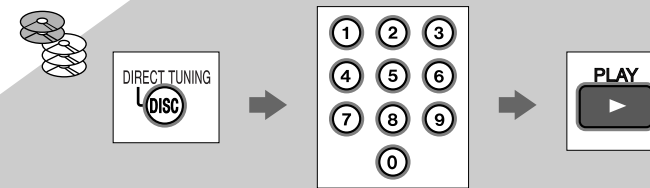 

Start play from a specified disc [MEGA CD changer] (holds more than 50 discs)



 
Stop play



Skip tracks during play



Pause play

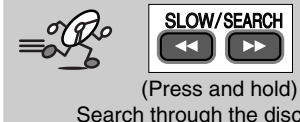

(Press and hold) Search through the disc



RECEIVER

Listening to the radio

 


Select FM or AM
(Press and hold)

Switch off




Operating the radio



Change the preset channels sequentially




 Select the preset channel directly

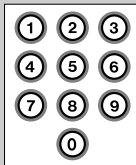

Select radio stations by frequency

 DOLBY PRO LOGIC IIx MODE

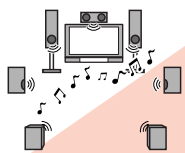

Select MOVIE (DOLBY EX), MUSIC or GAME when Dolby Pro Logic IIx mode or Dolby Pro Logic II mode is on



To cancel

 


When you select MUSIC



Change the sound effect

DTS NEO:6 MODE

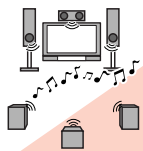

Select a DTS NEO:6 mode: CINEMA or MUSIC



To cancel

 


When you select MUSIC




Change the sound effect

SFC MODE

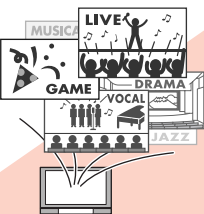

Select an SFC mode

 

To cancel



Select the speaker channel and adjust its output level



Change the sound effect



Adjusting speaker channel balance

Start a test signal



Select the speaker channel and adjust its output level



Stop the test signal



Other functions



To mute the volume



To adjust the volume



To select DVD ANALOG 6CH



(Press and hold)

To adjust subwoofer output level



Dim the display



For selecting a re-master mode



CODES

This remote control can operate Panasonic and Technics audio-visual equipment that has remote control sensors. You may need to change the remote control code.

It can also operate some other brands of televisions, video cassette players, and DVD players. Check the table for the brand and enter the code as follows.

Changing the codes

Press and hold the button corresponding to the equipment

Enter the first digit

Enter the second digit

The remote control outputs the on/off signal. If the code is correct, the equipment turns on or off. If it doesn't, try entering another code.

- Note that this remote control cannot operate some equipment and that it may not be able to perform some operations.
- Re-enter the codes after you change the batteries.

Code table

	TV	VCR	DVD player
Panasonic	01/02/26	01/02/09/33	01/40
Denon	-	-	01/17
Ferguson	-	-	02
Fisher	14	13/14/15/18/34	-
Funai	-	08/30	-
G.E.	02/03/07/09	02/03/11	-
GoldStar	07/15	27	-
Go-Video	-	-	12
Hitachi	05/07	09/10/11	11
JVC	12	19/25/31/38/39/40	09
Kenwood	-	-	15
LXI	03/06/07/10/14/15	10/13/14/15/18/27/30	-

	TV	VCR	DVD player
Magnavox	06/07/11/15/22	02/09/12	-
Mitsubishi	07/15/16/21	21/22/28/29	06
NEC	07/15	19/25/31/38	-
Nordmende	-	-	02
Philco	06/07	02/09/12/30	-
Philips	06	02/09/12	04/16
Pioneer	02/10/19	09	03
Polkaudio	-	-	16
Quasar	02	01/02/09/33	-
Raite	-	-	13
RCA	03/07/09/13/23/24/25	02/03/04/09/10/11/12/23/24/26	02
Saba	-	-	02

	TV	VCR	DVD player
Sampo	-	-	14
Samsung	-	-	10
Sanyo	14	14/18/34	-
Sharp	08/21	16/17	08
Shintom	-	32	-
Sony	04	05/06/07/35/36/37	05
Sylvania	06/07/15	02/09/12/30	-
Symphonic	17	30	-
Technics	-	-	01
Thomson	-	-	02
Toshiba	10/21	23/24	04
Yamaha	-	-	01
Zenith	18/20	20	07/12



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>