

Replacement Air Filter for the HotWire 8800 DSLAM Installation Instructions

Document Number 8800-A2-GN10-00

May 1997

What is an Air Filter?


The air filter prevents dust from entering the HotWire 8800 Digital Subscriber Line Access Multiplexer (DSLAM) chassis. Install an air filter when the 8800 chassis is in a dusty or unfiltered environment. Once the filter is installed, you should inspect and/or replace the air filter periodically, or whenever the fan alarm is active.

Installing the Replacement Air Filter

► Procedure

To install the replacement air filter:

1. Unfasten the screws on the cover plate and remove it.
2. Remove the old air filter by sliding it out.
3. Slide the replacement air filter into the air filter channel guides.
4. Replace the cover plate and fasten screws.

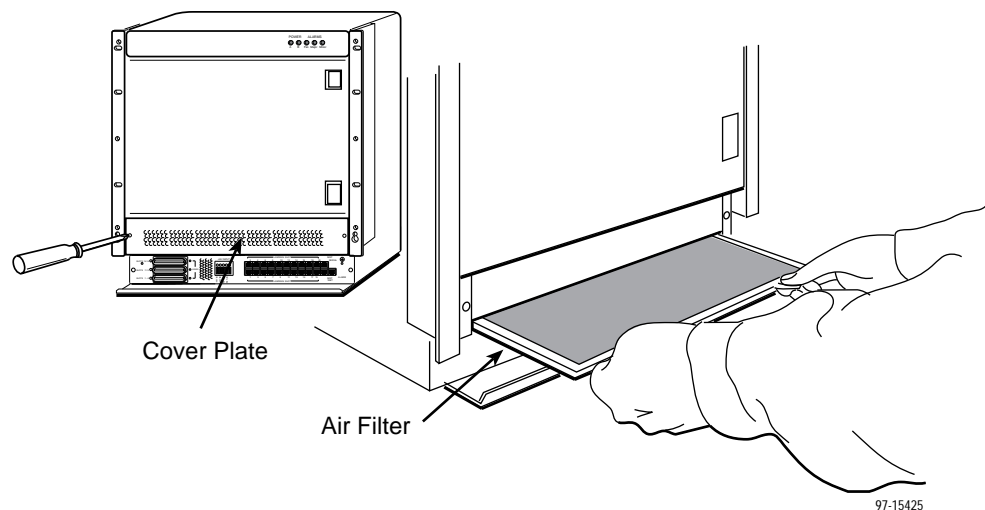

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>