



INSTRUCTION BOOKLET **GB**



MIXED FUEL COOKER

CSIM 509

Please read this instruction booklet before using the appliance

Important Safety Information



You **MUST** read these warnings carefully before installing or using the appliance. If you need assistance, contact our Customer Care Department on 08705 950950

Installation

- This cooker must be installed by qualified personnel, according to the manufacturer's instructions and to the relevant British Standards.
- This cooker is heavy. Take care when moving it.
- Any gas installation must be carried out by a registered CORGI installer.
- Remove all packaging before using the cooker.
- Ensure that the gas and electrical supply complies with the type stated on the rating plate, located near the gas supply pipe.
- Do not attempt to modify the cooker in any way.

Child Safety

- This cooker is designed to be operated by adults. Do not allow children to play near or with the cooker.
- The cooker gets hot when it is in use. Children should be kept away until it has cooled.
- Children can also injure themselves by pulling pans or pots off the cooker.

During Use

- This cooker is intended for domestic cooking only. It is not designed for commercial or industrial purposes.
- When in use a gas cooker will produce heat and moisture in the room in which it has been installed. Ensure there is a continuous air supply, keeping air vents in good condition or installing a cooker hood with a venting hose.
- When using the cooker for a long period time, the ventilation should be improved, by opening a window or increasing the extractor speed.
- Do not use this cooker if it is in contact with water. Do not operate the cooker with wet hands.
- Ensure the control knobs are in the 'OFF' position when not in use.
- Do not store flammable materials such as oven gloves, tea towels etc. in the drawer.
- When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooker.
- Unstable or misshapen pans should not be used on the hob burners as unstable pans can cause an accident by tipping or spillage.
- Never leave the cooker unattended when cooking with oil and fats.
- This cooker should be kept clean at all times. A build-up of fats or foodstuffs could result in a fire.
- Never use plastic dishes in the oven or on the hob burners. Never line any part of the oven with aluminium foil.

- Always ensure that the oven vent which is located at the centre back of the hob is left unobstructed to ensure ventilation of the oven cavity.
- Perishable food, plastic items and aerosols may be affected by heat and should not be stored above the cooker.
- The appliance is fitted with a lid: this is designed as a dust cover when closed, and as a splash-back when open. Do not use for any other purpose.
- After using the cooker, the lid **MUST NOT** be closed until the hob and oven are completely cold. Do not close the lid on a lit burner as this will cause damage to the burners and the lid. If the flame extinguishes, the gas will continue to flow leading to a build up of gas in the area of the cooker.

Service

- This cooker should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used.

Environmental Information

- After installation, please dispose of the packaging with due regard to safety and the environment.
- When disposing of an old appliance, make it unusable, by cutting off the cable.

Keep this instruction book for future reference and ensure it is passed on to any new owner.

Guide to Use the instructions

The following symbols will be found in the text to guide you throughout the Instructions:



Safety Instructions




Step by step instructions for an operation



Hints and Tips



Environmental Information

 This appliance is manufactured according to the following EEC directives:
73/23 EEC - 90/683 EEC - 93/68 EEC -
89/336 EEC - 90/396 EEC,
current edition.

Contents

For the User

| | |
|--|----|
| Important Safety Information | 2 |
| Description of the Cooker | 3 |
| Control Panel | 4 |
| Using the Hob | 5 |
| Before the First Use of the Cooker | 6 |
| Electric Oven | 6 |
| Hints and Tips | 7 |
| Using the Fan Oven & Defrosting function | 8 |
| Fan Cooking Chart | 9 |
| Defrosting Chart | 9 |
| Grilling | 10 |
| Maintenance and Cleaning | 11 |
| Something Not Working | 13 |
| Service and Spare Parts | 14 |
| Guarantee Conditions | 14 |


For the Installer

| | |
|------------------------------------|----|
| Instructions for the Installer | 17 |
| Important Safety Requirements | 18 |
| Installation | 19 |
| Electrical connections | 21 |
| Commissioning | 22 |
| Conversion from Natural to LPG Gas | 23 |

Oven Door Protection Device


All our appliances comply with the European safety standards. Nevertheless, in order to ensure the highest safety level, and avoid small children to be exposed to the heat when the appliance is operated, it is possible to fit a special protection device to the oven door. This device can be purchased in our Service Force Centres, specifying the relevant code (35791) and the Product No. shown on the rating plate.

Description of the Cooker

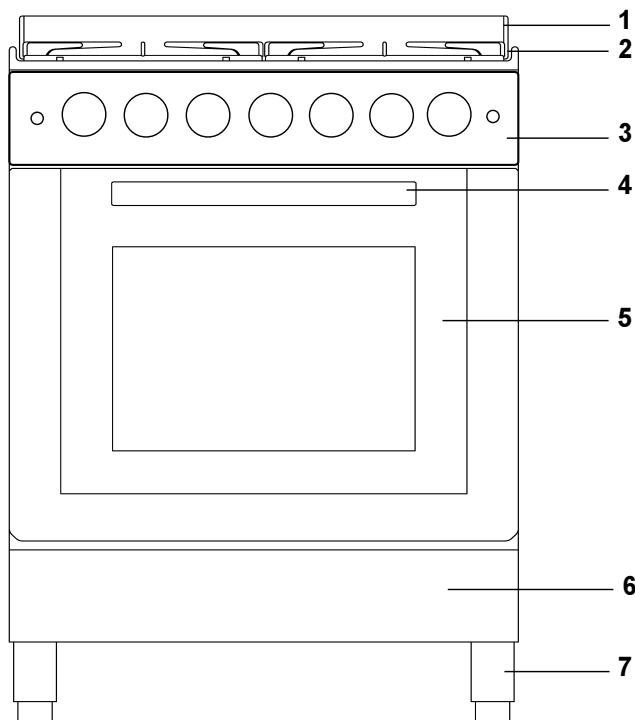


1. Splash back
2. Cooker hob
3. Control panel
4. Oven handle
5. Oven door
6. Storage drawer
7. Adjustable feet

Control Panel

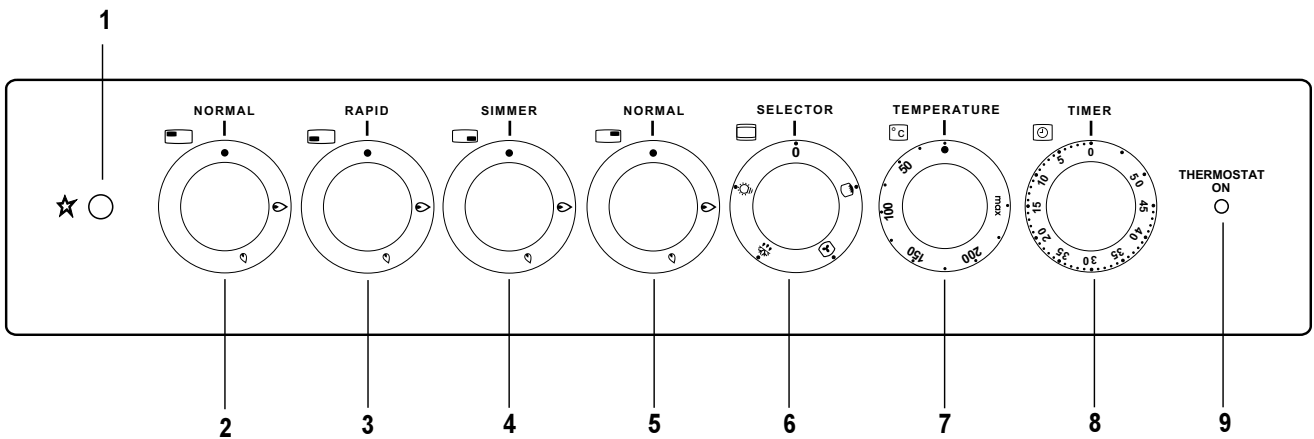


- | | |
|---|---------------------------------|
| 1. Electric Ignition push button | 6. Oven function control knob |
| 2. Back left burner control knob (semi-rapid) | 7. Oven Thermostat control knob |
| 3. Front left burner control knob (ultra-rapid) | 8. Minute minder |
| 4. Front right burner control knob (auxiliary) | 9. Oven Thermostat pilot light |
| 5. Back right burner control knob (semi-rapid) | |

The Oven Cavity

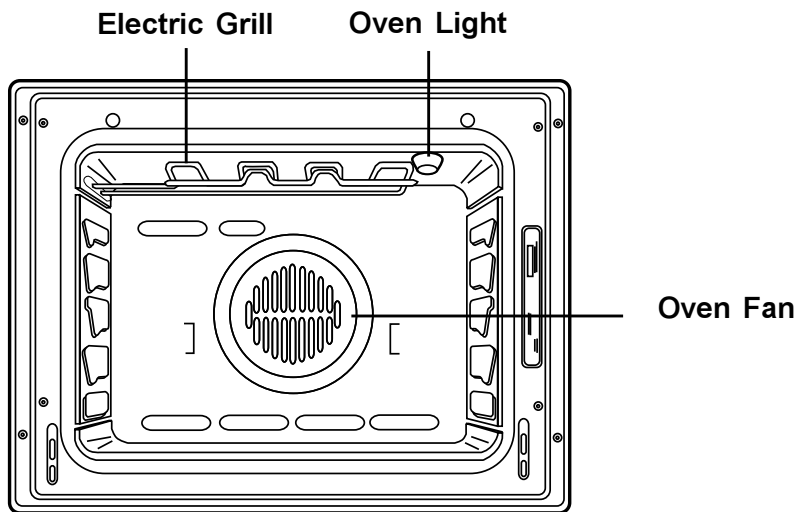

Accessories

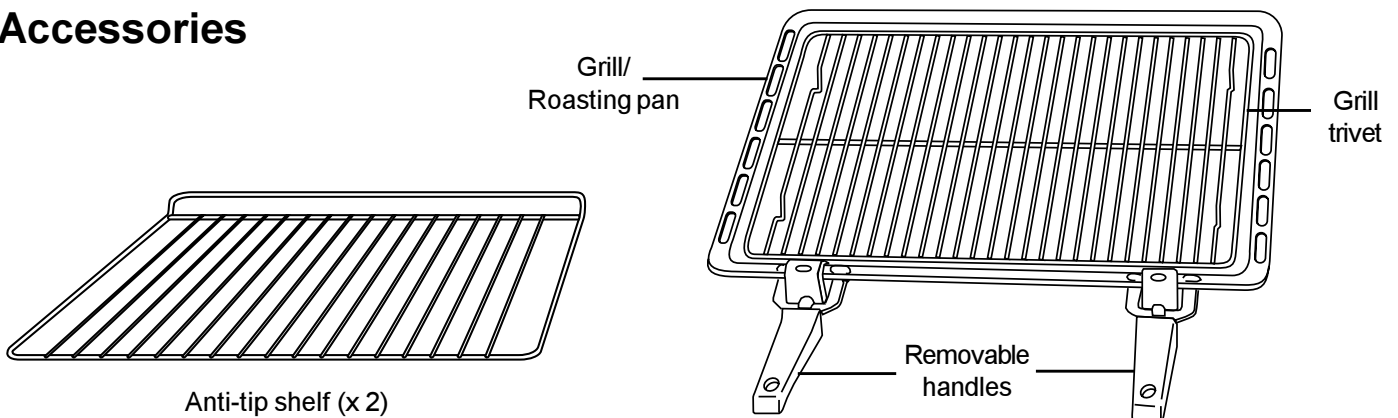


Using the Hob

Hob burners


 To light a burner:

- Push the electric ignition button which is marked with a little spark (☆).
- At the same time, push in and turn the relevant control knob anticlockwise to maximum position.
- Then adjust the flame as required.
- If the burner does not ignite, turn the control knob to zero, and try again.

 When switching on the mains, after installation or a power cut, it is quite normal for the spark generator to be activated automatically.


To ensure maximum burner efficiency, you should only use pots and pans with a flat bottom fitting the size of the burner used (see table).


| Burner | minimum diameter | maximum diameter |
|----------------------------|------------------|------------------|
| Ultra-rapid (triple crown) | 220 mm. | 260 mm. |
| Medium (semi-rapid) | 120 mm. | 220 mm. |
| Small (Auxiliary) | 80 mm. | 160 mm. |

 If you use a saucepan which is smaller than the recommended size, the flame will spread beyond the bottom of the vessel, causing the handle to overheat.


 **Take care when frying food in hot oil or fat, as the overheated splashes could easily ignite.**





As soon as a liquid starts boiling, turn down the flame so that it will barely keep the liquid simmering.

 If the control knobs become difficult to turn, please contact your local Service Force Centre.

 When using the auxiliary burner (with pans having a diameter equal or higher than 50mm), place the special grid on the pan support, as shown in the diagram.

Triple-crown burner

 **Always ignite the burner before putting the pans on.**
If after a few attempts the burner does not ignite, check that the burner cap and crown are correctly positioned (see diagram).

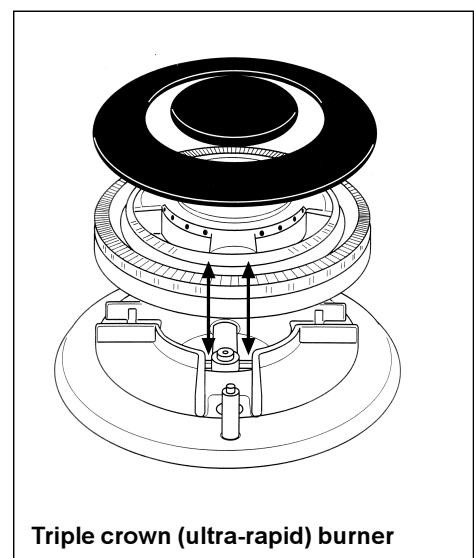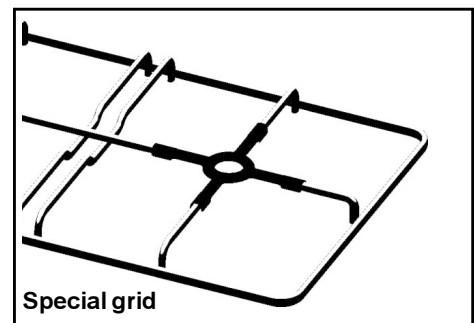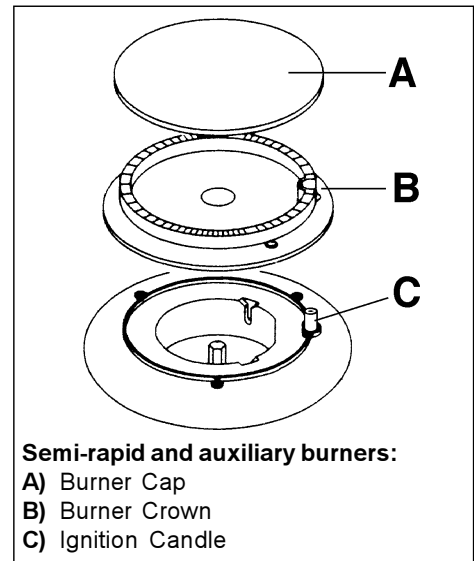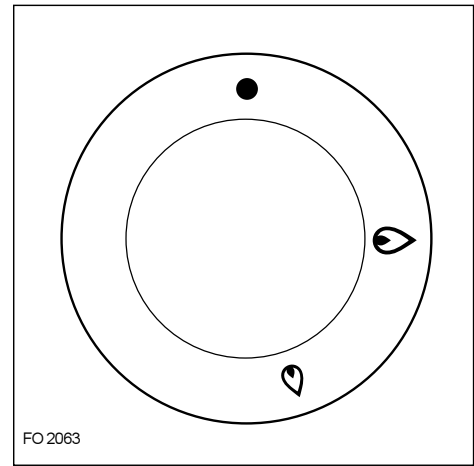

Before the First Use of the Cooker




Remove **all packaging**, both inside and outside the oven, before using the appliance.

Before first use, the oven should be heated without food. During this time, an unpleasant odour may be emitted. This is quite normal.

1. Switch the oven function control knob to fan cooking








2. Set the thermostat control knob to MAX.
3. Open a window for ventilation.
4. Allow the oven to run empty for approximately 45 minutes.

This procedure should be repeated with the grill  function for approximately 5-10 minutes.

Electric Oven


Oven Function Control Knob

-  Oven Light - The oven light will be on without any cooking function.
-  Defrost Setting - This setting is intended to assist in thawing of frozen food.
-  Fan Oven cooking - This allows you to roast or roast and bake simultaneously using any shelf, without flavour transference.
-  Grill - The heat comes from the top element only

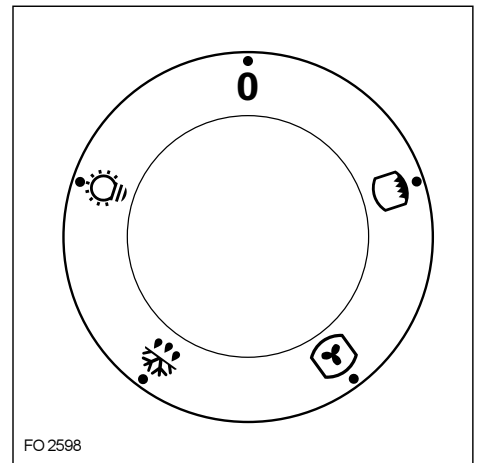

Thermostat Control Knob

Turn the thermostat control knob clockwise to select temperatures between 50°C and 250°C (MAX).

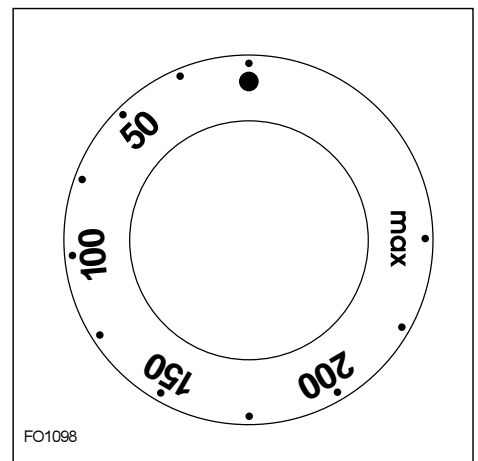

Thermostat Control Light


The thermostat control light will come on when the thermostat control knob is turned. The light will remain on until the correct temperature is reached. It will then cycle on and off to show the temperature is being maintained.

Minute minder

The minute minder will mark the end of a timed period with an acoustic alarm. The maximum timing is 60 minutes.

Turn the minute minder knob to the maximum time position, then turn it back to the required time.

The minute minder will not affect in any way the oven operation, if it is in use.

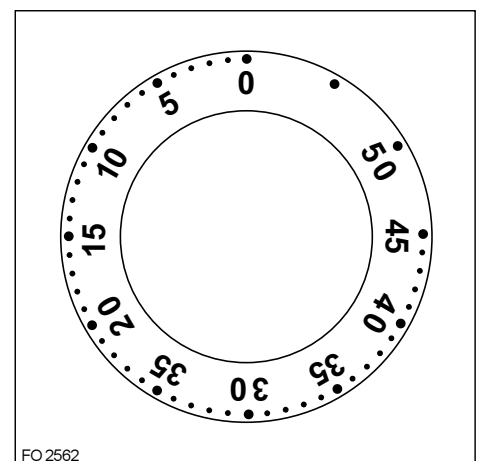

Using the Oven



Always cook with the oven door closed. Stand clear when opening the drop down oven door. Do not allow it to fall open - support the door using the door handle, until it is fully open.




The oven has four shelf levels, and is supplied with two shelves.

The shelf positions are counted from the bottom of the oven as shown in the diagram.

It is important that these shelves are correctly positioned as shown in the diagram.

Do not place cookware directly on the oven base.

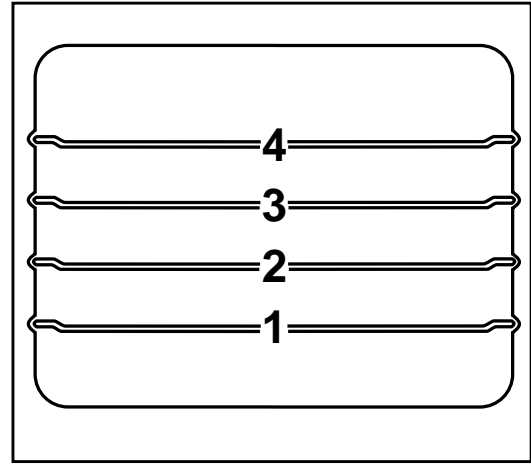

Hints and Tips

Condensation and steam

When food is heated it produces steam in the same way as a boiling kettle. The oven vents allow some of this steam to escape. However, **always stand back from the oven when opening the oven door** to allow any build up of steam or heat to release.

If the steam comes into contact with a cool surface on the outside of the oven, e.g. a trim, it will condense and produce water droplets. This is quite normal and is not a fault with the oven.

To prevent discolouration, regularly wipe away condensation and also soilage from surfaces.

Cookware

- Use any oven proof cookware which will withstand temperatures of 250°C.
- Baking trays, oven dishes, etc. should not be placed directly against the grid covering the fan at the back of the oven, or placed on the oven base.
- Do not use baking trays larger than 30 cm x 35 cm (12 in x 14 in) as they will restrict the circulation of heat and may affect performance.

The effects of dishes on cooking results

Dishes and tins vary in their thickness, conductivity, colour, etc. which affects the way they transmit heat to the food inside them.

- A** Aluminium, earthenware, oven glassware and bright shiny utensils reduce cooking and base browning.
- B** Enamelled cast iron, anodized aluminium, aluminium with non-stick interior and coloured exterior and dark, heavy utensils increase cooking and base browning.

Storage Drawer

The storage drawer is located underneath the oven cavity.



During cooking the storage drawer may become hot if the oven is on high for a long period of time, therefore flammable materials such as oven gloves, tea towels, plastic aprons etc. should not be stored in the drawer.

Oven accessories such as baking sheets, will also become hot, therefore care should be taken when removing these items from the drawer whilst the oven is in use or still hot.

Using the Fan Oven & Defrosting function

The air inside the oven is heated by the element around the fan situated behind the back panel. The fan circulates hot air to maintain an even temperature inside the oven. **The advantages of cooking with this function are:**

- **Faster Preheating**

As the fan oven quickly reaches temperature, it is not usually necessary to preheat the oven although you may find that you need to allow an extra 5-7 minutes on cooking times. For recipes which require higher temperatures, best results are achieved if the oven is preheated first, e.g. bread, pastries, scones, souffles, etc.

- **Lower Temperatures**


Fan oven cooking generally requires lower temperatures than conventional cooking. Follow the temperatures recommended in the chart at page 14. Remember to reduce temperatures by about 20-25°C for your own recipes which use conventional cooking.

- **Even Heating for Baking**

The fan oven has uniform heating on all runner positions. This means that batches of the same food can be cooked in the oven at the same time. However, the top shelf may brown slightly quicker than the lower one.

This is quite usual. There is no mixing of flavours between dishes.


How to Use the Fan Oven

1. Turn the oven function control knob to .
2. Turn the thermostat control to the required temperature.

THINGS TO NOTE

- The oven light will come on when the oven function control knob is set.
- The thermostat control light will remain on until the correct temperature is reached. It will then cycle on and off to show that temperature is being maintained.

How to Use Defrosting

1. Turn the oven function control knob to .
2. Ensure the thermostat control knob is in the OFF position.

The oven fan operates without heat and circulates the air, at room temperature, inside the oven. This increases the speed of defrosting. However, please note that the temperature of the kitchen will influence the speed of defrosting.

This function is particularly suitable for delicate food which could be damaged by heat, e.g. cream filled gateaux, iced cakes, pastries, bread and other yeast products.

Hints and Tips

Runner positions are not critical, but make sure the shelves are evenly spread.

When cooking more than one dish in the fan oven, place dishes centrally on the shelves rather than several dishes on one shelf.

When the oven is full, you may need to allow slightly longer cooking time.

A shelf may be placed on the floor of the oven. Place dishes on a shelf in this position rather than on the oven base, to allow air circulation around the food.

When the oven is full of the same food, e.g. equal trays of small cakes or equal size victoria sandwich cakes, then they will be cooked in the same time and removed from the oven together. When different sizes of trays or types of food, e.g. biscuits and cakes are cooked, they will not necessarily be ready together.

The fan oven can be used to heat foods through without thawing first, e.g. fruit tarts, mince pies, sausage rolls, and other small pastry items. Use a temperature of 190-200°C and allow 20-40 minutes (depending on the quantity of food in the oven).

The use of too high temperatures can cause uneven browning. Check with the recommendations for oven temperatures given in the cooking charts, but be prepared to adjust the temperature by 10°C if necessary. Remember to reduce temperatures by about 20-25°C for your own conventional recipes.

When roasting do use the trivet in the meat tin. Fat and meat juices will drain into the meat tin below and can be used to make gravy. The trivet also prevents splashes of fat from soiling the oven interior.

The meat tin **should not** be placed on a heated hotplate or burner as this may cause the enamel to crack.

About Defrosting:

- Cover food with a lid, aluminium foil or plastic film to prevent drying out during defrosting.
- ALWAYS COOK THOROUGHLY IMMEDIATELY AFTER THAWING.
- Frozen food should be placed in a single layer when ever possible and turned over half way through the defrosting process.
- Only joints of meat and poultry up to 2 kg. (4 lb.) are suitable for defrosting in this way.

Fan Cooking Chart

This chart is intended as a guide only. It may be necessary to increase or decrease the temperature to suit your individual requirements. Only experience will enable you to determine the correct setting for your personal requirements.

| Food | | Thermostat | Runner Position | Time |
|-----------------------------------|---------|------------|-----------------|-------------|
| Biscuits, cookies | 2 trays | 160-190 | 1-3 | 18-25 min. |
| Bread, yeast doughs | 2 trays | 170-200 | 1-3 | 35-45 min. |
| Cakes, Victoria sandwich | 2 trays | 160-170 | 1-3 | 20-28 min. |
| Choux pastry, eclairs | 2 trays | 170-200 | 1-3 | 30-35 min. |
| Fruit pies, plate tarts, crumbles | 2 trays | 170-200 | 1-3 | 50-65 min. |
| Meringues | 2 trays | 70-90 | 1-3 | 90-150 min. |
| Puff pastry, vol au vents | 2 trays | 200-230 | 1-3 | 20-35 min. |
| Scones | 2 trays | 200-210 | 1-3 | 8-12 min. |

Defrosting Chart

| Food | Defrosting time (Mins) | Standing time (Mins) | Notes |
|---------------------|------------------------|----------------------|--|
| Chicken 1000 g. | 100-140 | 20-30 | Place the chicken on an inverted saucer on a large plate. Defrost open and turn at half time or defrost covered with foil. Remove giblets as soon as possible. |
| Meat 1000 g. | 100-140 | 20-30 | Defrost open and turn at half time or cover with foil |
| Meat 500 g. | 90-120 | 20-30 | As above |
| Trout 150 g. | 23-35 | 10-15 | Defrost open |
| Strawberries 300 g. | 30-40 | 10-20 | Defrost open |
| Butter 250 g. | 30-40 | 10-15 | Defrost open |
| Cream 2 x 200 g. | 80-100 | 10-15 | Defrost open (cream is easy to whip even if parts of it are still slightly frozen) |
| Cake 1400 g. | 60 | 60 | Defrost open |

The times quoted in the chart should be used as a guide only, as the speed of defrosting will depend on the kitchen temperature. For example, the colder the ambient temperature, the longer the defrosting time.


Grilling



Grilling must be carried out with the oven door closed. The grill pan handles must be removed from the pan.



How to Use the Grill

1. Turn the oven control function knob to .
2. Turn the thermostat control knob on the required temperature.
3. Adjust the grid and grill pan runner position to allow for different thicknesses of food. Position the food close to the element for faster cooking and further away for more gentle cooking.

Preheat the grill on a full setting for a few minutes before sealing steaks or toasting. Adjust the heat setting and the shelf as necessary during cooking.

During cooking, the thermostat control light will operate in the same way as described for the fan oven function.




Hints and Tips

- Most foods should be placed on the grid in the grill pan to allow maximum circulation of air to lift the food out of the fats and juices. Food such as fish, liver and kidneys may be placed directly on the grill pan, if preferred
- Food should be thoroughly dried before grilling to minimise splashing. Brush lean meats and fish lightly with a little oil or melted butter to keep them moist during cooking
- Accompaniments such as tomatoes and mushrooms may be placed underneath the grid when grilling meats
- When toasting bread, we suggest that the top runner position is used.
- The food should be turned over during cooking, as required.

The grill element is controlled by the thermostat. During cooking, the grill cycles on and off to prevent overheating.

| Food | Conventional Grill Time (Min) |
|---|--|
| Bacon rashers | 2-3 each side |
| Beefburgers | 6-10 each side |
| Chicken joints | 10-15 each side |
| Chops: lamb pork | 7-10 each side 10-15 each side |
| Fish: whole trout/herring fillets plaice/cod | 8-12 each side 4-6 each side |
| Kebabs | 10-15 each side |
| Kidneys: lamb/pig | 4-6 each side |
| Liver: lamb/pig | 5-10 each side |
| Sausages | 10-15 turn as required |
| Steaks: rare medium well | 3-6 each side 6-8 each side 7-10 each side |
| Browning only | 3-5 |

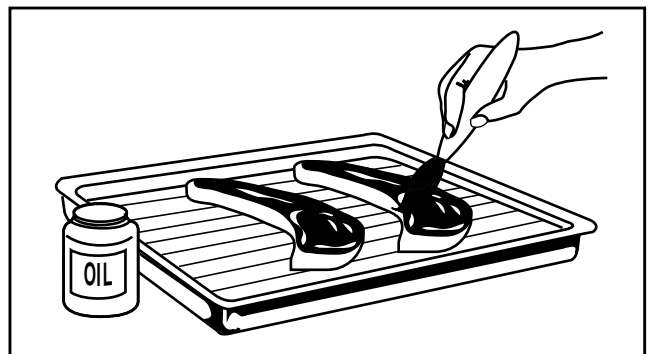

Maintenance and Cleaning



Before any maintenance or cleaning can be carried out, you must **DISCONNECT** the cooker from the electricity supply.

The Hob Top

The hob is best cleaned whilst it is still warm, as spillage can be removed more easily than if it is left to cool.

Regularly wipe over the hob top using a soft cloth well wrung out in warm water to which a little washing up liquid has been added. Avoid the use of the following:

- household detergent and bleaches;
- impregnated pads unsuitable for non-stick saucepans;
- steel wool pads;
- bath/sink stain removers.

Should the hob top become heavily soiled, it is recommended that a cleaning product such as Hob Brite or Bar Keepers Friend is used.

The Pan Support

The pan support is dishwasher proof. If washing it by hand, take care when drying it as the enamelling process occasionally leaves rough edges. If necessary, remove stubborn stains using a paste cleaner.

The Burners

The burner caps and crowns can be removed for cleaning.

Wash the burners caps and crowns using hot soapy water, and remove marks with a mild paste cleaner. A well moistened soap impregnated steel wool pad can be used with caution, if the marks are particularly difficult to remove.

After cleaning, be sure to wipe dry with a soft cloth.

Cleaning the Oven



The oven should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan.

Cleaning materials

Before using any cleaning materials on your oven, check that they are suitable and that their use is recommended by the manufacturer.

Cleaners that contain bleach should NOT be used as they may dull the surface finishes. Harsh abrasives should also be avoided.

Clean the outer and inner door glass using warm soapy water. Should the inner door glass become heavily soiled it is recommended that a cleaning product such as Hob Brite, or Bar Keepers Friend is used.



DO NOT clean the oven door while the glass panels are warm. If this precaution is not observed the glass panel may shatter.

External cleaning

Regularly wipe over the control panel, oven door and door seal using a soft cloth well wrung out in warm water to which a little washing up liquid has been added.



To prevent damaging or weakening the door glass panels avoid the use of the following:

- Household detergent and bleaches
- Impregnated pads unsuitable for non-stick saucepans
- Brillo/Ajax pads or steel wool pads
- Chemical oven pads or aerosols
- Rust removers
- Bath/Sink stain removers


If the door glass panel becomes chipped or has deep scratches, the glass will be weakened and must be replaced to prevent the possibility of the panel shattering. Contact your local Service Force Centre who will be pleased to advise further.


Oven Cavity

The enamelled oven cavity is best cleaned whilst the oven is still warm.

Wipe the oven over with a soft cloth soaked in warm soapy water after each use. From time to time it will be necessary to do a more thorough cleaning, using a proprietary oven cleaner.

If the soilage has become set, after the oven has cooled down, the following process will help to soften the splatters to help make cleaning easier.


1. Place the grill/ meat pan on the oven shelf positioned in the lowest runner.
2. Add a few drops of washing-up liquid to the pan and fill to about 12 mm. with boiling water from the kettle.
3. Close the oven door, turn the oven function knob on fan oven  and set the thermostat knob on 50°C.
4. After 15 minutes, turn off the thermostat and allow the fan oven to continue without heat for a further 5 minutes, when the temperature of the water will have cooled down.
5. Carefully remove the pan of water from the oven and use normal oven cleaners to clean away soil residues.
6. Leave a little of the soapy water to soak into any burned on spillage on the floor of the oven for a longer time if necessary.

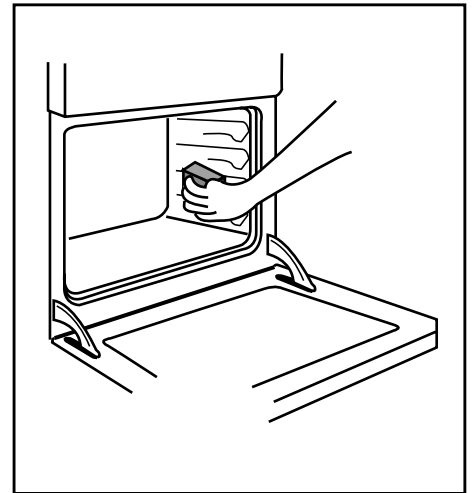

Oven Shelves

To clean the oven shelves, soak in warm soapy water and remove stubborn marks with a well wetted soap impregnated pad. Rinse well and dry with a soft cloth.

Oven lamp replacement


 **Disconnect the appliance.**

Unscrew the lamp and substitute it with another suitable for higher temperature (300°C) having the following characteristics:

Voltage: 230-240V (50Hz)

Power: 15W

Connection: E14

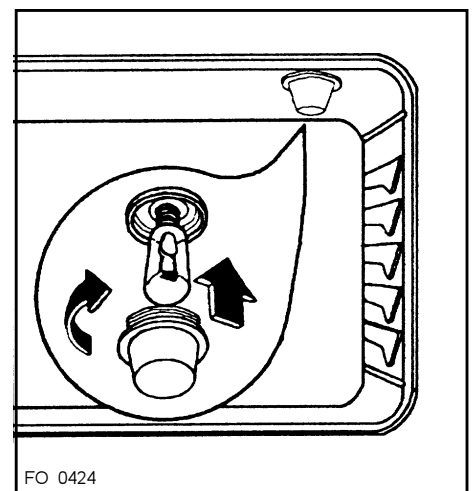

Something Not Working

If the appliance is not working correctly, please carry out the following checks, before contacting your local Service Force Centre.

IMPORTANT: If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

| SYMPTOM | SOLUTION |
|--|--|
| <ul style="list-style-type: none"> ■ There is no spark when lighting the gas | <ul style="list-style-type: none"> ◆ Check that the unit is plugged in and the electrical supply is switched on ◆ Check that the RCCB has not tripped (if fitted) ◆ Check the mains fuse has not blown ◆ Check the burner cap and crown have been replaced correctly, e.g. after cleaning. |
| <ul style="list-style-type: none"> ■ The gas ring burns unevenly | <ul style="list-style-type: none"> ◆ Check the main jet is not blocked and the burner crown is clear of food particles. ◆ Check the burner cap and crown have been replaced correctly, e.g. after cleaning. |
| <ul style="list-style-type: none"> ■ The oven does not come on | <ul style="list-style-type: none"> ◆ Check a cooking function / temperature have been selected. ◆ Check the socket switch or the switch from the mains supply to the oven is ON. |
| <ul style="list-style-type: none"> ■ The oven light does not come on | <ul style="list-style-type: none"> ◆ Check the light bulb, and replace it if necessary (see "Oven lamp replacement") |
| <ul style="list-style-type: none"> ■ It takes too long to finish the dishes, or they are cooked too fast. | <ul style="list-style-type: none"> ◆ The temperature may need adjusting |
| <ul style="list-style-type: none"> ■ Steam and condensation settle on the food and the oven cavity. | <ul style="list-style-type: none"> ◆ Refer to the contents of this booklet, especially to the chapter "Using the Oven". ◆ Leave dishes inside the oven no longer than 15-20 minutes after the cooking is completed. |

If after these checks, the appliance still does not work, contact your local Service Force Centre.

When you contact the Service Centre, they will need the following information:

1. Your name, address and post code.
2. Your telephone number
3. Clear and concise details of the fault
4. The model and the serial number (see rating label)
5. Date of purchase

Service and Spare Parts

SERVICE FORCE

If you require spare parts or an engineer contact your local Service Force Centre by telephoning:

08705 929 929

Your call will be routed to the Service Force Centre covering your post code area. The addresses of Service Force Centres are detailed on the following pages.

Customer Care

For general enquiries concerning your Parkinson Cowan appliance and for further information on Parkinson Cowan products, contact our Customer Care Department by letter or telephone as follows:

Customer Care Department

Parkinson Cowan
55-77 High Street
Slough
Berkshire SL1 1DZ
Tel : 08705 950 950*

*calls to this number may be recorded for training purposes

Guarantee Conditions

Parkinson Cowan Standard Guarantee conditions

We, Parkinson Cowan, undertake that if, within 12 months of the date of the purchase, this Parkinson Cowan appliance or any part thereof is proved to be defective by any reason only of faulty workmanship or materials, we will, at our option, repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- * The appliance has been correctly installed and used only on the gas and electricity supply stated on the rating plate.
- * The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- * The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- * All service work under this guarantee must be undertaken by a Parkinson Cowan Service Force Centre.
- * Any appliance or defective part replaced shall become the Company's property.
- * This guarantee is in addition to your statutory and other legal rights.

Home visits are made between **8.30am and 5.30pm** Monday to Friday. Visits may be available outside these hours, in which case a **premium** will be charged.

Exclusions

This guarantee does not cover:

- * Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- * Costs incurred for calls to put right an appliance which is improperly installed or calls to appliance outside the United Kingdom.
- * Appliances found to be in use within a commercial or similar environment, plus those which are the subject to rental agreements.
- * Products of Parkinson Cowan manufacture which are not marketed by Parkinson Cowan.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- * The guarantee starts from the date you first purchased your product.
- * The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products.
- * This guarantee relates to you and cannot be transferred to another user.
- * Your new home is within the European Community (EC) or European Free Trade Area.
- * The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household
The electrical supply complies with the specification given in the rating label.
- * The product is installed taking into account regulations in your new country.

Before you move, please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

| | | |
|---------|-----------|-----------------------|
| France | Senlis | +33 (0) 3 44 62 20 13 |
| Germany | Nürnberg | +49 (0) 800 234 7378 |
| Italy | Pordenone | +39 (0) 800117511 |
| Sweden | Stockholm | +46 (0) 20 78 77 50 |
| UK | Slough | + 44 (0) 1753 219898 |

To contact your local Service Force Centre telephone **08705 929 929**

| CHANNEL ISLANDS | | | | NORTHEAST | |
|-----------------|---|-------------------------|--|-------------------|---|
| GUERNSEY | Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands GY1 3AD | ISLE OF LEWIS | ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW | GATESHEAD | Unit 356a Dukesway Court Dukesway Gateshead NE11 0BH |
| JERSEY | Jersey Electricity Company Haut De L'orme Rue De Haut De L'orme Trinity Jersey Channel Islands JE3 5FG | KELSO | 2, 6 & 8 Woodmarket Kelso Borders TD5 7AX | GRIMSBY | 15 Hainton Avenue Grimsby N. E. Lincs DN32 9AS |
| SCOTLAND | | ORKNEY | 7 King Street Kirkwall Orkney KW15 1JF | HULL | Unit 1 Boulevard Industrial Estate Hull HU3 4AY |
| ABERDEEN | 54 Claremont Street Aberdeen AB10 6RA | PERTH | Scottish Hydro Electric Central Warehouse Inveralmond Perth PH1 3AF | LEEDS | 64-66 Cross Gates Road Cross Gates Leeds LS15 7YS |
| AUCHTERMUCHTY | 33a Burnside Auchtermuchty Fife KY14 7AJ | (OWN SALES) | | NEWTON AYCLIFFE | Unit 23 Northfield Way Aycliffe Industrial Park Newton Aycliffe DL5 6EJ |
| BLANTYRE | Unit 5 Block 2 Auchenraith Ind. Estate Rosendale Way Blantyre G72 0NJ | SHETLAND | 3-4 Carlton Place Lerwick Shetland ZE1 0PW | SHEFFIELD | Pennine House Roman Ridge Road Sheffield S9 1GB |
| DUMFRIES | 93 Irish Street Dumfries DG1 2 PQ | (OWN SALES) | | NORTH WEST | |
| DUNOON | 7 Hill Street Dunoon Argyll PA23 7AL | SHETLAND | Bolts Shetland 26 North Road Lerwick Shetland ZE1 0PE | BIRKENHEAD | 1 Kelvin Park Dock Road Birkenhead CH41 1LT |
| EDINBURGH | Unit 12 Dumbyden Ind. Estate 2 Dumbyden Road Edinburgh EH14 2AB | WHALSAY | Leask Electrical Harisdale Symbister, Whalsay Shetland ZE2 9AA | CARLISLE | Unit 7 James Street Workshops James Street Carlisle Cumbria CA2 5AH |
| GLASGOW | Unit 4 Wellington Road Bishopriggs Glasgow G64 2SA | NORTHERN IRELAND | | ISLE OF MAN | South Quay Ind. Estate Douglas Isle of Man IM1 5AT |
| INVERNESS | Unit 3BI Smithton Ind. Estate Smithton Inverness IV2 7WL | BELFAST | Owenmore House Kilwee Business Park Dunmurry Belfast BT17 0HD | BOLTON | Unit B Central Industrial Estate St Marks Street Bolton BL3 6NR |
| ISLE OF ARRAN | Arran Domestic The Douglas Centre Brodick Isle of Arran KA27 8AJ | WALES | | PRESTON | Unit 250 Dawson Place Bamber Bridge Preston Lancashire PR5 8AL |
| ISLE OF BARRA | J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY | CARDIFF | Unit 4 Guardian Industrial Estate Clydesmuir Road Cardiff CF2 2QS | STOCKPORT | Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR |
| ISLES OF BUTE | Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH | CLYWD | Unit 6-7 Coed Parc Abergele Road Rhuddlan Clwyd LL18 5UG | | |
| | | DYFED | Unit 9 St. Clears Business Park Tenby Road St. Clears Carmarthen SA33 4JW | | |
| | | OSWESTRY | Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP | | |

To contact your local Service Force Centre telephone **08705 929 929**

| MIDLANDS | | LONDON & EAST ANGLIA | | SOUTH EAST | |
|-------------------------|--|----------------------|---|-------------------|--|
| BIRMINGHAM | 66 Birch Road East Wyrley Trading Estate Witton Birmingham B6 7DB | BECKENHAM | 11a Gardner Ind. Estate Kent House Lane Beckenham Kent BR3 1QZ | ASHFORD | Unit 2 Bridge Road Business Centre Bridge Road Ashford Kent TN23 1BB |
| BOURNE | Pinfold Road Bourne PE10 9HT | CHELMSFORD | Hanbury Road Widford Ind. Estate Chelmsford Essex CM12 3AE | FLEET | Unit 1 Redfields Ind. Estate Church Crookham Fleet Hampshire GU13 0RD |
| BRIDGNORTH | 68 St. Mary's Street Bridgnorth Shropshire WV16 4DR | COLINDALE | Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ | HAYWARDS HEATH | 21-25 Bridge Road Haywards Heath Sussex RH16 1UA |
| GLOUCESTER | 101 Rycroft Street Gloucester GL1 4NB | ELTHAM | 194 Court Road Mottingham Eltham London SE9 4EW | TONBRIDGE | Unit 30 Deacon Trading Estate Morley Road Tonbridge TN9 1RA |
| HEREFORD | Units 3 & 4 Bank Buildings Cattle market Hereford HE4 9HX | ENFIELD | 284 Alma Road Enfield London EN3 7BB | SOUTH WEST | |
| HIGHAM FERRERS | 30 High Street Higham Ferrers Northants NN10 8PL | GRAVESEND | Unit B4 Imperial Business Estate West Mill Gravesend Kent DA11 0DL | BARNSTAPLE | Main Road Fremington Barnstaple North Devon EX31 2NT |
| ILKESTON | Unit 2 Furnace Road Ilkeston DE7 5EP | IPSWICH | Unit 6C Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD | BOURNEMOUTH | 63-65 Curzon Road Bournemouth Dorset BH1 4PW |
| LEICESTER | Unit 7 Oaks Industrial Estate Coventry Road Narborough Leicestershire LE9 5GF | LETCHWORTH | 16-17 Woodside Ind. Park Works Road Letchworth Herts SG6 1LA | BRIDGEWATER | 6 Herswell Business Park Salmon Parade Bridgwater Somerset TA6 5PY |
| LINCOLN | Unit 8 Clifton Street Stone Field Park Lincoln LN5 8LQ | LONDON | 2 - 4 Royal Lane Yiewsley West Drayton Middlesex UB7 8DL | BRISTOL | 11 Eldon Way Eldonwall Trading Estate Bristol BS4 3QQ |
| NEWCASTLE UNDER LYME | 18-21 Croft Road Brampton Ind. Estate Newcastle under Lyme Staffordshire ST5 0TW | MAIDENHEAD | Reform Road Maidenhead Berkshire SL6 8BY | EMSWORTH | 266 Main Road Southbourne Emsworth PO10 8JL |
| REDDITCH | 13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND | MOLESEY | 10 Island Farm Avenue West Molesey Surrey KT8 2UZ | ISLE OF WIGHT | Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB |
| TAMWORTH | Unit 3 Sterling Park Claymore Tamworth B77 5DQ | NEWBURY | 9 Pipers Court Berkshire Drive Thatcham Berkshire RG19 4ER | NEWTON ABBOT | Unit 2 Zealley Ind. Estate Kingsteignton Newton Abbot TQ12 3TD |
| WORCESTER | Units 1 & 2 Northbrooks Close Gregorys Mill Ind. Estate Worcester WR3 8BP | NORWICH | 2b Trafalgar Street Norwich NR1 3HN | REDRUTH | Unit 7D Pool Ind. Estate Druids Road Redruth Cornwall TR15 3RH |
| | | SUNBURY | Unit 1a The Summit Hanworth Road Sunbury on Thames TW16 5DB | | |

Instructions for the Installer

Technical Data

Appliance Class 2 sub class 1 and Class 1

Appliance category: II 2H3+

Appliance gas supply: Natural Gas G20 20mbar

Hob

| | |
|---------------------------------|---------|
| Rear left burner (semi-rapid) | 2,000 W |
| Front left burner (ultra-rapid) | 3,500 W |
| Rear right burner (semi-rapid) | 2,000 W |
| Front right burner (auxiliary) | 1,000 W |

Oven

| | |
|----------------------------|-----------|
| Top heating element | 1,045 W |
| Bottom heating element | 1,250 W |
| Grill Element | 1,880 W |
| Convection heating element | 2,090 W |
| Convection fan | 30 W |
| Oven light | 15 W |
| Total rating | 2,315 W |
| Supply voltage (50 Hz) | 230-240 V |

Dimensions

| | |
|------------------------|------------|
| Height | 900 mm |
| Depth | 600 mm |
| Width | 497 mm |
| Oven Capacity | 1.7 Cu. ft |
| Oven light | 15 W |
| Supply voltage (50 Hz) | 230-240 V |

| TYPE OF GAS | CHARACTERISTICS | BURNER | ULTRA-RAPID (large) | | SEMI-RAPID (medium) | | AUXILIARY (small) | |
|--------------------------|---|-------------------------------------|---------------------|---------|---------------------|---------|-------------------|---------|
| | | POSITION | MAX | MIN | MAX | MIN | MAX | MIN |
| NATURAL GAS 20 mbar | VALUE = 37.78 MJ/m ³ Ws - 50.7 MJ/ m ³ | NOMINAL THERMAL POWER kW | 3.5 | 1.2 | 2.0 | 0.45 | 1.0 | 0.33 |
| | | NOMINAL FLOW RATE m ³ /h | 0.333 | 0.114 | 0.190 | 0.043 | 0.095 | 0.031 |
| | | NOZZLE REFERENCE 1/100 mm | 136 | Adjust. | 96 | Adjust. | 70 | Adjust. |
| LPG GAS 28-30/37 mbar | VALUE = 49.92 MJ/Kg | NOMINAL THERMAL POWER kW | 3.5 | 1.2 | 2.0 | 0.45 | 1.0 | 0.33 |
| | | NOMINAL FLOW RATE g/h | 252 | 86.5 | 144 | 32 | 72 | 24 |
| | | NOZZLE REFERENCE 1/100 mm | 93 | 56 | 71 | 32 | 50 | 28 |

Important Safety Requirements

This appliance must be installed in accordance with the Gas Safety (Installation and Use) Regulations (current addition) and the I.E.E. Wiring Regulations. Detailed recommendations are contained in the following British Standard Codes of Practice - B.S. 6172, B.S. 5440: Part 2 and B.S. 6891: Current Editions.

Provision for Ventilation

The room containing the cooker should have an air supply in accordance with B.S. 5440: Part 2: Current Editions. The following requirements for ventilation must be met. The cooker should not be installed in a bed sitting room with a volume of less than 20m³, if it is installed in a room of volume less than 5m³ an air vent of effective area of 110cm² is required; if it is installed in a room of volume between 5m³ and 10m³, an air vent of effective area 50cm² is required, while if the volume exceeds 11m³ no air vent is required. However, if the room has a door which opens directly to the outside, no air vent is required even when the volume is between 5m³ and 11m³.

If there are other fuel burning appliances in the same room, B.S. 5440: Part. 2: Current Editions should be consulted to determine the requisite air vent requirements.

Location

The cooker may be located in a kitchen, a kitchen/diner or bedsitting room but not in a bathroom, shower room or garage.

For information regarding the fitting of flexible supply pipes, the highest temperature at the rear of this cooker which may come into contact with the supply pipe is 70°C above ambient.

When the appliance has been installed there must be enough space for the hotplate lid (when present) to open fully.

Positioning the Cooker

Caution:

Some soft or badly fitted floor coverings can be damaged when the cooker is moved across their surface for cleaning. It is advisable to ensure that the floor covering in the area below the cooker is either securely fixed so as not to ruck up when the cooker is moved or, if preferred, removed.

Installation

Positioning the Appliance (Fig. 1)

- **Note A:** The appliance is designed to be flush fitted with 2mm clearance at each side to allow for it to be pulled forward for cleaning etc.
- **Note B:** The hotplate side trims should be flush with the cabinets and must not be below. Adjustable levelling feet at the front and rear are provided on the base of the appliance. Adjustment is obtained by rotating in or out, the feet at the front or rear of the appliance from the underside of the appliance, with the drawer removed.
A spirit level should be placed on a cake tray on one of the shelves to confirm that the appliance is correctly levelled. The levelling feet fitted to the appliance will achieve a height to hotplate trims of 900mm-0 + 10.
- **Note C:** If the appliance is fitted next to a side wall or cabinets above height of the hotplate trims, then a gap of 115 mm is required.
Curtains must not be fitted immediately behind the cooker or within 115 mm of the sides of the cooker.
- **Note D:** Any wall cabinet or extractor must not be lower than 780mm above hotplate level.
- **Note E:** Wall cabinets may be fitted in line with the sides of the base units, providing that the lower edge of the wall cabinet is a minimum of 420mm above the worktop.

Feet Assembly

i Before installing the cooker, it is necessary to assemble the supplied feet.

1. Remove the hob pan supports, the burner caps and crowns and the oven accessories.
2. Carefully lean the cooker on its back (Fig. 2), paying attention not to cause any damage.
3. Adjust the feet height by unscrewing the bottom part of each foot, until you obtain the required height (height can be adjusted from 850 to 880 mm).
4. Insert the feet into the relevant holes indicated in fig. 2.
5. Lift the cooker in vertical position. Replace the crowns, the burner caps, the hob pan supports and the oven accessories.
6. If necessary, adjust the cooker horizontal levelling by turning the bottom part of the feet, until the appliance is completely stable.

Splash back Assembly

A splash back is supplied with the appliance. This is meant to be fitted on the rear edge of the cooker's hob. The splash back is found in the oven cavity.

1. Carefully clean the hob top.
2. Take the splash back out of the envelope and remove the protective film.
3. Insert the splash back into the proper hinges in the rear part of the hob (Fig. 3).

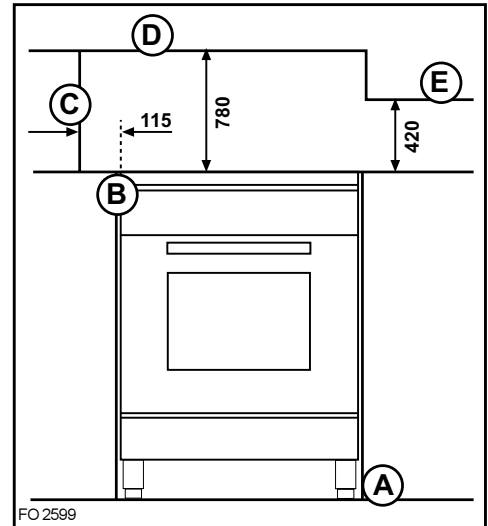


Fig. 1 FO 2599

The appliance must be installed in accordance to the type X (standard EN 60335-2-6).

Therefore the appliance can not be installed beside furniture higher than the cooker worktop.

This cooker must only be installed by qualified personnel, according to the manufacturer's instructions and to the relevant British Standards.

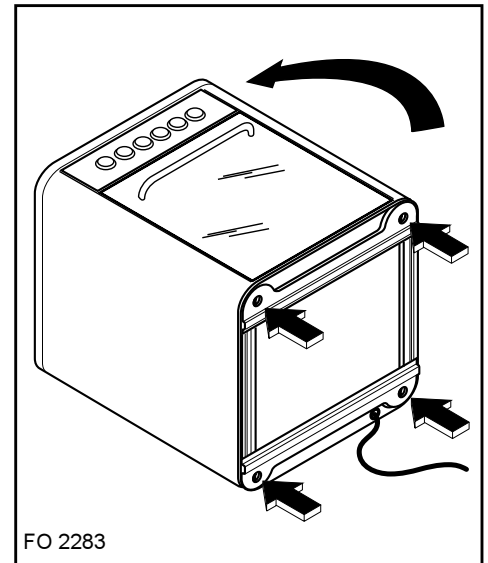


Fig. 2 FO 2283


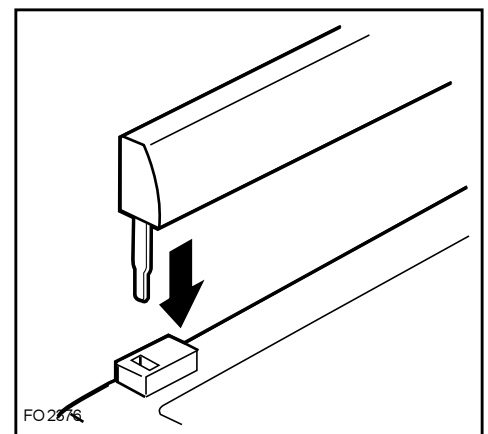


Fig. 3 FO 2676

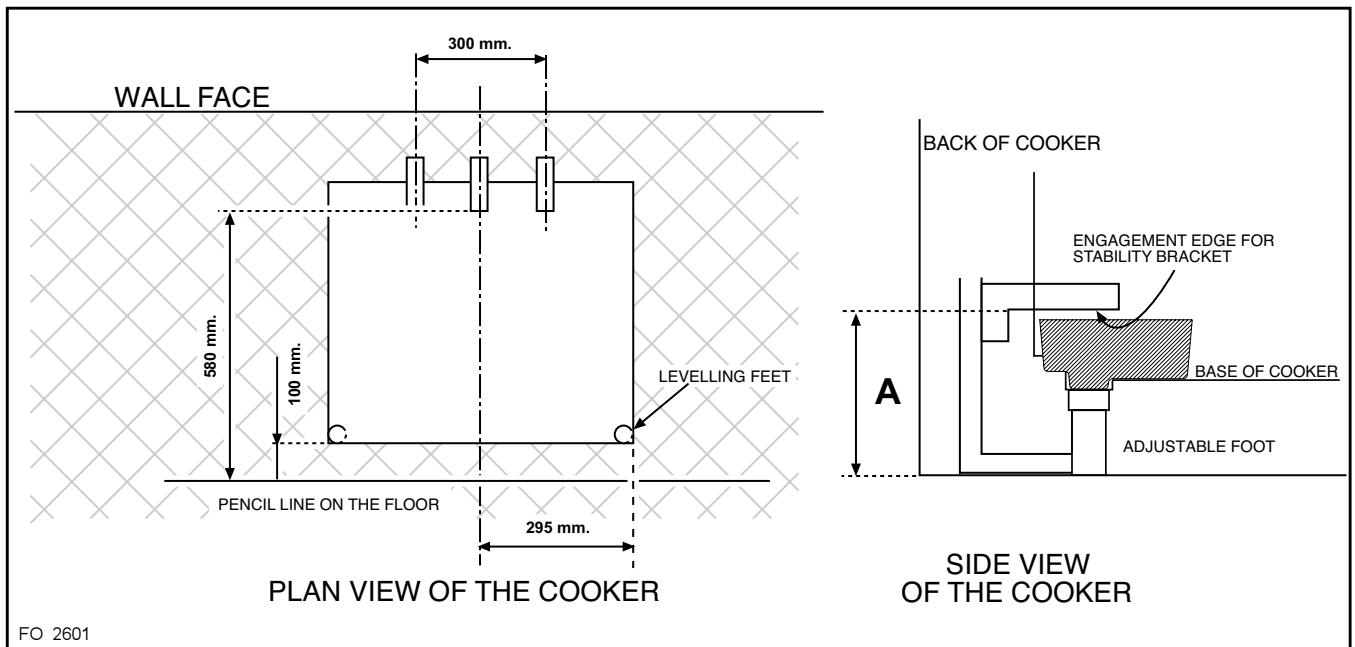

FO 2601

Fig. 2

Fitting the Stability Bracket (Not supplied)

If the cooker has to be installed with a flexible supply pipe, it is necessary that a stability device is fitted. (See "Important Safety Requirements").

If a stability bracket is to be fitted by the installer, these instructions should be read in conjunction with the leaflet packed with the stability bracket.

Place the cooker in its intended position and level cooker.

Mark off 295mm (11 1/2") from the right hand side of the cooker as shown, this is the centre line of the bracket fixing.

Draw a line 100mm (4") from the front edge of the levelling feet (see Fig. 2) and remove cooker from its position. Mark off 580mm (23") back from this line on the centre line of the bracket to locate the front edge of the lower bracket.

Fix lower bracket (with two fixing holes) to the floor, then measure height from floor level to engagement edge on back of cooker, dimension 'A' of Fig. 2.

Assemble upper bracket to lower bracket so that underside of bracket is dimension 'A' +3mm (1/8") above floor level. Re-position cooker and check that top bracket engages into cooker back to a depth of 75mm (3"), as shown in Fig. 2.

Should the stability bracket currently installed not allow the cooker to stand correctly, ask the installer to replace it with the correct type.

Connecting to Gas

This cooker is designed to be installed with an appliance flexible connection. Connection is made to the RC 1/2 (1/2" B.S.P.) threaded entry pipe located just below the hotplate level on the rear right-hand side of the cooker. Check for gas soundness after connecting the gas supply.


The gas bayonet connector must be fitted in the shaded area indicated in the diagram. Take into account that it must be possible to pull the cooker forward sufficiently. The hose must not get caught on the stability bracket.

Note:

For certain types of gas bayonet connection used, it may not be possible for the appliance to be pushed fully back to the wall stops.

Important:

Flexible tubing **MUST** comply with BS.669 Current Edition.

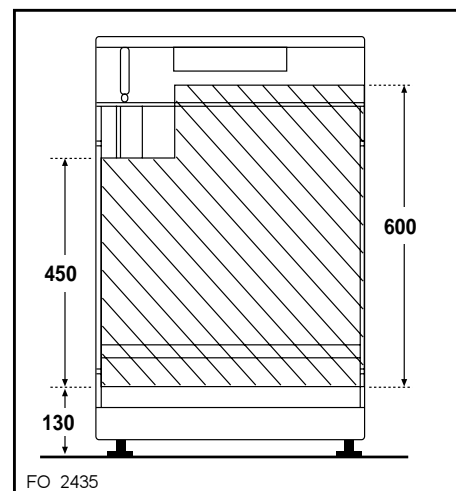

FO 2435

Fig. 3

Electrical connections



Any electrical work required to install this cooker should be carried out by a qualified electrician or competent person, in accordance with the current regulations.



THIS COOKER MUST BE EARTHED.

The manufacturer declines any liability should these safety measures not be observed.



This cooker is designed to be connected to a 230-240V 50Hz AC electrical supply.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the cooker rating plate. The rating plate is located on the oven frame.

The cooker is supplied with a 3 core flexible supply cord incorporating a 13amp plug fitted. In the event of having to change the fuse, a 13amp ASTA approved (BS 1362) fuse must be used.

Should the plug need to be replaced for any reason, the wires in the mains lead are coloured in accordance with the following code:

Green and Yellow - Earth
Blue - Neutral
Brown - Live

-  — Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter 'E' or the earth symbol  or coloured green and yellow.
- Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter 'N' or coloured black.
- Connect the brown (live) wire to the terminal in the plug which is marked with the letter 'L' or coloured red.

NOTE: The earth wire should be about 2 cm. longer than the live and neutral wires.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.



A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.


Permanent Connection

In the case of a permanent connection, it is necessary that you install a double pole switch between the cooker and the electricity supply (mains), with a minimum gap of 3 mm. between the switch contacts and of a type suitable for the required load in compliance with the current electric regulations.

The switch must not break the yellow and green earth cable at any point.



Ensure that the cooker supply cord does not come into contact with surfaces with temperatures higher than 50 deg. C.

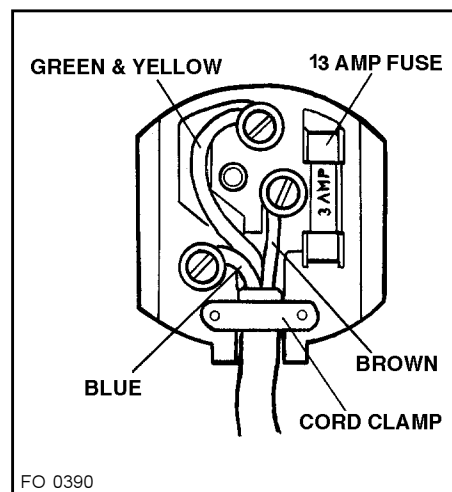

Commissioning

When the hob has been fully installed it will be necessary to check the minimum flame setting. To do this, follow the procedure below.

- Turn the gas tap to the MAX position and ignite.
- Set the gas tap to the MIN flame position then turn the control knob from MIN to MAX several times. If the flame is unstable or is extinguished follow the procedure below.

Procedure:




Re-ignite the burner and set to MIN.

Remove the control knob.

The adjustment screw is located down the centre of the gas tap control shaft or on the lower right hand side of the shaft (see diagram).

To adjust, use a thin bladed screwdriver and turn the adjustment screw until the flame is steady and does not extinguish, when the knob is turned from MIN to MAX. Repeat this procedure for all burners.

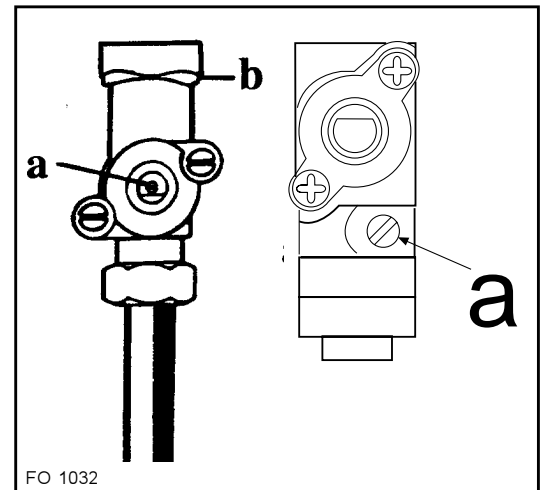

a) Minimum adjustment screw

b) Tap

Pressure Testing



Remove left hand pan support and front left burner cap and crown.

Fit manometer tube over the injector.

Turn on the burner gas supply and ignite another burner supply.

The pressure reading should be nominally 20mbar and must be between 17 mbar and 25mbar.

Turn off the burner supplies.

Conversion from Natural to LPG Gas

IMPORTANT

The replacement/conversion of the gas hob should only be undertaken by a CORGI registered engineer.

It is important to note that this model is designed for use with natural gas but can be converted for use with butane or propane gas providing the correct injectors are fitted. The gas rate is adjusted to suit.

Method

- Ensure that the gas taps are in the 'OFF' position
- Isolate the hob from the electricity supply
- Remove all pan supports, burner caps, rings, crowns and control knobs.
- With the aid of a 7mm box spanner the burner injectors can then be unscrewed and replaced by the appropriate LPG injectors.

TO ADJUST THE GAS RATE

With the aid of a thin bladed screwdriver undo the bypass screw about 1/4 of a turn (45°). Upon completion stick the replacement rating plate near the gas supply pipe.

CUSTOMER CARE

Parkinson Cowan

55-77 High Street
Slough
Berkshire, SL1 1DZ
Tel: 08705-950950

© Electrolux Household Appliances Limited 2001

 **From the Electrolux Group.** *The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>