



 
PEBS 900 SE

PARKSIDE

GB IE CY





BELT SANDER

Operation and Safety Notes



GB IE CY

    Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

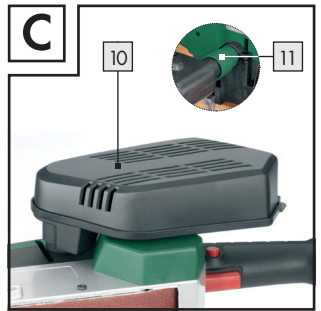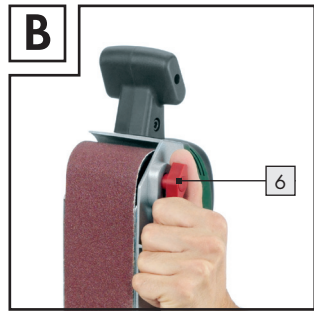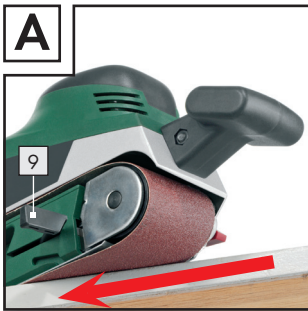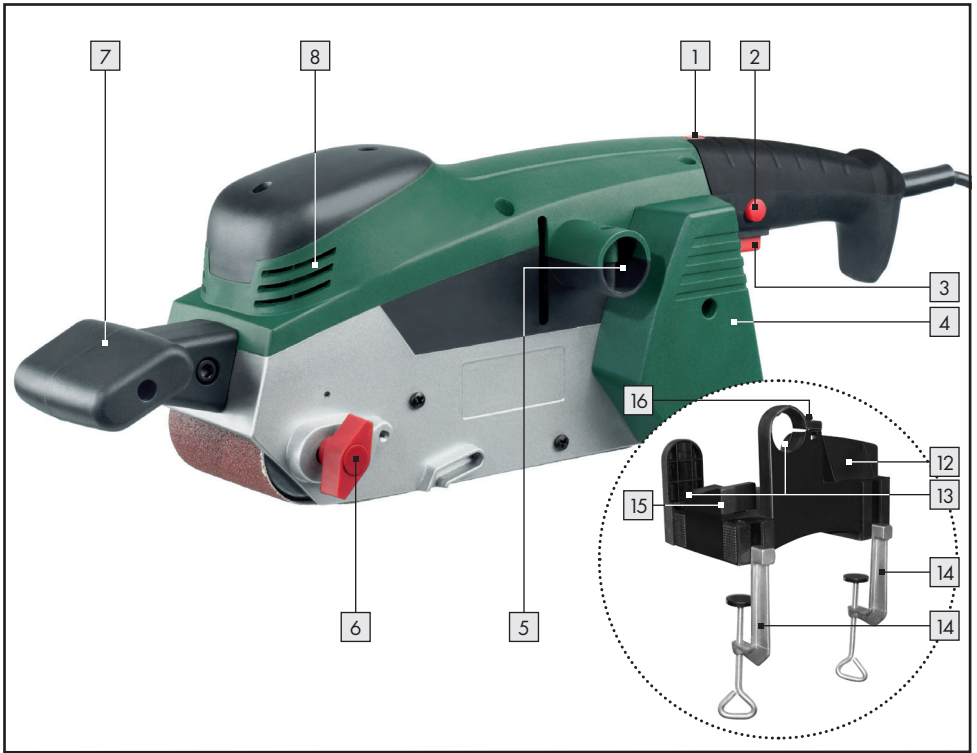

Introduction

Proper use.....	Page 6
Features and equipment	Page 6
Included items	Page 7
Technical information	Page 7

General safety advice for electrical power tools

1. Workplace safety	Page 7
2. Electrical safety	Page 8
3. Personal safety.....	Page 8
4. Careful handling and use of electrical power tools.....	Page 8
Safety advice for belt sanders.....	Page 9

Preparing for use

Tensioning / changing the sanding belt	Page 10
Advice on use.....	Page 10
Vacuum dust extraction.....	Page 10

Operation

Switching on and off.....	Page 11
Selecting the correct rotational speed and sanding belt.....	Page 11
Using the sander in a fixed mounting	Page 12
Tips and tricks.....	Page 12

Maintenance and cleaning.....Page 13











Service centre.....Page 13

Warranty.....Page 13

Disposal.....Page 13

Declaration of conformity / Producer.....Page 14

The following pictograms are used in these operating instructions / on the device:

	Read instruction manual!		Safety class II
	Observe caution and safety notes!		Wear hearing protection, dust protection mask, protective glasses and protective gloves.
	Caution – electric shock! Danger to life!		Keep children away from electrical power tools!
	Explosive material!		For indoor use only!
n₀	Rated idle running speed		Risk of loss of life by electric shock from damaged mains lead or mains plug!
V~	Voltage		Dispose packaging and appliance in an environmentally-friendly way!
W	Watts (Effective power)		

Belt sander PEBS 900 SE

● Introduction



Please make sure you familiarise yourself fully with the way the device works before you use it for the first time and that you understand how to handle electrical power tools correctly. To help you do this please read the accompanying operating instructions. Keep these instructions in a safe place. If you pass the device on to anyone else, please ensure that you also pass on all the documentation.

● Proper use

The belt sander is designed for dry sanding of large surfaces of wood, plastic, metal, plaster and painted surfaces. The device may only be used for dry sanding. Always use a sanding belt and grade of grit suitable for the particular surface you are sanding. The speed selected should also be appropriate for the material. The device is not intended for commercial use. Any other use or modification to the device shall be considered as improper use

and could give rise to considerable dangers. The manufacturer will not accept liability for loss or damage arising from improper use.

● Features and equipment

- 1 Belt speed adjuster wheel
- 2 Locking knob
- 3 ON/OFF switch
- 4 Toothed belt cover
- 5 Dust extraction spout
- 6 Belt adjuster screw
- 7 Auxiliary handle
- 8 Ventilation slots
- 9 Tensioning lever
- 10 Dust collection box
- 11 Extraction adapter

Fixed mounting kit:


- 12 Mounting frame
- 13 Clamp plates 2 x
- 14 Screw clamps 2 x
- 15 Spacer plates 2 x
- 16 Screw

● Included items

Check that all the items and accessories are present immediately after unpacking the device:

- 1 Belt sander PEBS 900 SE
- 1 Sanding belt
- 1 Dust collection box
- 1 Extraction adapter
(for external vacuum dust extraction)
- 1 Fixed mounting kit
- 1 Operating instructions

● Technical information

Belt sander:	Parkside PEBS 900 SE
Nominal voltage:	230 V ~ 50 Hz
Nom. power input:	900 W
No-load belt speed:	180 - 340 m / min
No-load speed:	n_0 345 - 645 min ⁻¹
Sanding belt	75 x 533 mm
Protection class:	II / 

Noise and vibration data:

Values determined in accordance with EN 60745. The sound pressure level (A-weighted) of the device is typically 86 dB (A). Uncertainty K = 3 dB. The sound level while working can exceed 100 dB (A).



Wear ear protection!

Total vibration, EN 60745:
Vibration emission value $a_{h,D} = 2,928 \text{ m/s}^2$
Uncertainty $K < 1.5 \text{ m/s}^2$

▲ WARNING! The vibration level given in these instructions has been measured in accordance with a standardised measurement procedure specified in EN 60745 and can be used to compare devices. Different uses of the device give rise to different vibration levels and in many cases they may exceed the values given in these instructions. It is easy to underestimate the vibration load if the electrical power tool is used regularly in particular circumstances.

Note: If you wish to make an accurate assessment of the vibration loads experienced during a particular period of working, you should also take into account the intervening periods of time when the device is switched off or is running but is not actually in use. This can result in a much lower vibration load over the whole of the period of working.

The PEBS 900 SE belt sander has full-wave electronics with additional control electronics, soft start with inrush current limiting.





General safety advice for electrical power tools

▲ WARNING! Read all the safety advice and instructions! Failure to observe the safety advice and instructions may result in electric shock, fire and/or serious injury.

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE! THE TERM "ELECTRICAL TOOL" USED IN THE SAFETY ADVICE REFERS TO ELECTRICAL TOOLS POWERED BY MAINS ELECTRICITY (BY MEANS OF A MAINS LEAD) AND ELECTRICAL TOOLS POWERED BY RECHARGEABLE BATTERIES (WITHOUT A MAINS LEAD).


1. Workplace safety

- a) **Keep your working area clean and well lit.** Untidy or poorly lit working areas can lead to accidents.
- b)  **Do not work with the device in potentially explosive environments in which there are inflammable liquids, gases or dusts.** Electrical power tools create sparks, which can ignite dusts or fumes.
- c)  **Keep children and other people away while you are operating the electrical tool.** Distractions can cause you to lose control of the device.

2. Electrical safety




To avoid danger to life from electric shock:

- a) **The mains plug on the device must match the mains socket. The plug must not be modified in any way. Do not use an adapter plug with devices fitted with a protective earth.** Unmodified plugs and matching sockets reduce the risk of electric shock.
- b) **Avoid touching earthed surfaces such as pipes, radiators, ovens and refrigerators with any part of your body.** There is an increased risk of electric shock if your body is earthed.
- c) **Keep the device away from rain or moisture.** Water entering an electrical device increases the risk of electric shock.
- d)  **Do not use the mains lead for any purpose for which it was not intended, e.g. to carry the device, to hang up the device or to pull the mains plug out of the mains socket. Keep the mains lead away from heat, oil, sharp edges or moving parts of the device.** Damaged or tangled mains leads increase the risk of electric shock.
- e) **When working outdoors with an electrical power tool always use extension cables that are also approved for use outdoors.** The use of an extension cable suitable for outdoor use reduces the risk of electric shock.
- f) **Use a residual current device (RCD) for protection if operating the electrical power tool in a moist environment is unavoidable.** The use of an RCD reduces the risk of electric shock.

3. Personal safety

- a) **Remain alert at all times, watch what you are doing and always proceed with caution. Do not use the device if you are tired or under the influence of**

drugs, alcohol or medication. One moment of carelessness when using the device can lead to serious injury.

- b)  **Wear personal protective equipment and always wear safety glasses.** The wearing of personal protective equipment such as dust masks, non-slip safety shoes, safety helmets or ear protectors, appropriate to the type of electrical power tool used and work undertaken, reduces the risk of injury.
- c) **Avoid unintentional operation of the device. Check that the electrical power tool is switched off before you connect it to the mains, pick it up or carry it.** Accidents can happen if you carry the device with your finger on the ON/OFF switch or with the device switched on.
- d) **Remove any setting tools or spanners before you switch the device on.** A tool or spanner left attached to a rotating part of a device can lead to injury.
- e) **Avoid placing your body in an unnatural position. Keep proper footing and balance at all times.** By doing this you will be in a better position to control the device in unforeseen circumstances.
- f) **Wear suitable clothing. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves clear of moving parts.** Loose clothing, jewellery or long hair can become trapped in moving parts.
- g) **If vacuum dust extraction and collection devices are fitted do not forget to check that they are properly connected and correctly used.** The use of these devices reduces the hazard presented by dust.


4. Careful handling and use of electrical power tools

- a) **Do not overload the device. Always use an electrical power tool that is intended for the task you are undertaking.** By using the right electrical power tool for the job you will work more safely and achieve a better result.

- b) **Do not use an electrical power tool if its switch is defective.** An electrical power tool that can no longer be switched on and off is dangerous and must be repaired.
- c) **Pull the mains plug from the socket before you make any adjustments to the device, change accessories or when the device is put away.** This precaution is intended to prevent you from unintentionally starting the device.
- d) **When not in use always ensure that electrical power tools are kept out of reach of children. Do not let anyone use the device if he or she is not familiar with it or has not read the instructions and advice.** Electrical power tools are dangerous when they are used by inexperienced people.
- e) **Look after the device carefully. Check that moving parts are working properly and move freely. Check for any parts that are broken or damaged enough to detrimentally affect the functioning of the device. Have damaged parts repaired before you use the device.** Many accidents have their origins in poorly maintained electrical power tools.
- f) **Keep cutting tools clean and sharp.** Carefully maintained cutting tools with sharp cutting edges are less likely to jam and are easier to control.
- g) **Use the electrical power tool, accessories, inserted tools etc. in accordance with these instructions and advice, and the stipulations drawn up for this particular type of device. In doing this, take into account the working conditions and the task in hand.** The use of electrical power tools for purposes other than those intended can lead to dangerous situations.



Safety advice for belt sanders

- **DANGER OF FIRE FROM FLYING SPARKS!** Sanding metal creates flying sparks. For this reason, always make sure that nobody is placed in any danger and that there are no inflammable materials near the working area.
 - When undertaking prolonged sanding of wood, and in particular when working on materials that give rise to dusts that are hazardous to health, the sander must be connected to a suitable external dust extraction device.
 - Ensure that there is adequate ventilation when working on plastic, paint, varnish etc.
 - The belt sander is designed for the dry sanding of large surfaces of wood, plastic, metal and plaster and painted surfaces. The device is to be used for dry sanding only.
 - Do not sand materials containing asbestos. Asbestos is a known carcinogen.
- ⚠ WARNING! POISONOUS DUSTS!**
- Sanding paints containing lead, some types of wood and metal for example may give rise to hazardous or poisonous dusts and represents a risk to the health of the person operating the device and to anyone near the work area.
-   Wear safety glasses and a dust protection mask!
- Securely support the workpiece. Use clamps or a vice to grip the workpiece firmly. This is much safer than holding it with your hand.
 - Never support yourself by placing your hands near or in front of the device or the workpiece surface. A slip can result in injury.
 - If a dangerous situation arises, pull the mains plug immediately out of the mains socket.
 - Always work with the mains lead leading away from the rear of the device.
 - Avoid contact with the moving sanding belt.
 - Do not work on moistened materials or damp surfaces.
 - Always switch on the device before placing it against the workpiece. After sanding, lift the device from the workpiece before switching it off.
 - When working always hold the device securely with both hands (see Fig. D). Always keep proper footing and balance.

- Switch the device off and allow it to come to a complete standstill before you put it down.
- When taking a break from your work, before carrying out any tasks on the device itself (e.g. changing the sanding belt) and when you are not using the device, always pull the mains plug out of the mains socket.

● Preparing for use

● Tensioning / changing the sanding belt

⚠ WARNING! RISK OF INJURY! Before you carry out any work on the belt sander always pull the plug out of the mains socket.

1. Then release the tensioner for the sanding belt by moving the tensioning lever **9** fully outwards (see fig. A). The tensioner is now open and the sanding belt can be removed.
2. Next insert a new sanding belt or change the belt for one suitable for a different material or one with a different grit size.
IMPORTANT: The direction of the arrows on the inside of the sanding belt must agree with that on sander housing.
3. Press the tensioning lever **9** back into its initial position.

Adjusting the sanding belt:

- Pick up the device, switch it on and turn it over. Adjust the belt tracking by turning the adjuster screw **6** until the edge of the sanding belt is flush with and runs parallel to the edge of the device (Fig. B.).
IMPORTANT: Always make sure that the sanding belt does not cut into the housing. Check the sanding belt regularly and if necessary re-adjust it using the adjuster screw **6**.

● Advice on use

Light sanding pressure is enough:

- Apply light sanding pressure only. The weight of the belt sander alone is adequate to pro-

duce good sanding results. By adopting this approach you will also prolong the life of your sanding belts and obtain a smoother work-piece surface.

Sanding and surfaces:

The sanding output and the quality of the surface finish obtained are determined by the belt speed and the grade of grit on the sanding belt (see the section on "Selecting the correct rotational speed and sanding belt").

Sanding procedure:

- With the sander switched on, bring it into contact with the workpiece and move it forward carefully. Work in parallel and overlapping widths. Always work in the direction of the grain to avoid undesirable transverse sanding marks. After sanding always lift the device from the workpiece before switching it off.

● Vacuum dust extraction

⚠ WARNING! DANGER OF FIRE! There is the danger of fire when working with electrical devices that have a dustbox or can be connected to a vacuum cleaner. Under certain conditions the wood dust in the dust collection box (or in the vacuum's dust bag) may self-ignite, e.g. as a result of flying sparks generated when abrading metals or metal objects left in wood. This can happen particularly if the wood dust is mixed with paint residue or other chemicals and the abraded particles are hot from prolonged abrasion. Therefore you must empty the device's dust collection box and the vacuum cleaner's dust bag before taking a break or stopping work and always avoid overheating of the abraded particles and the device.



Wear a dust mask!

Dust extraction using the dust collection box:

- Slide the dust collection box **10** on to the dust extraction spout **5** on the side of the device (Fig. C).

Emptying the dust collection box:

- Pull the dust collection box [10] off the dust extraction spout [5]. Open the dust collection box [10] and empty it.

Dust extraction using external vacuum extraction:

⚠ WARNING! If there is an explosive mixture of dust and air you must use a vacuum device especially intended for that purpose.

DANGER OF FIRE! Do not use vacuum dust extraction (dust collection box or vacuum cleaner) when sanding metals (flying sparks).

1. Push the extraction adapter [11] on to the dust extraction spout [5] on the side of the device (see Fig. C).
2. Slide the hose of a suitable dust extraction device approved for that purpose (e.g. a workshop vacuum cleaner) on to the extraction adapter [11].

● Operation

● Switching on and off

The PEBS 900 SE belt sander has full-wave electronics with additional control electronics, soft start with inrush current limiting.



When operating the belt sander you can select between intermittent or continuous operation mode. For short sanding tasks use the intermittent operation mode. For longer sanding tasks we recommend the continuous operation mode. Whilst working in your selected mode the device functions as follows:

To switch on intermittent operation mode:

- Press the ON/OFF switch [3].

To switch off intermittent operation mode:

- Release the ON/OFF switch [3].

To switch on continuous operation mode:

- Press the ON/OFF switch [3], and keep it pressed, then press the locking knob [2].

To switch off continuous operation mode:

- Press and then release the ON/OFF switch [3].

● Selecting the correct rotational speed and sanding belt

You can select the belt speed using the belt speed adjuster wheel [1] even whilst the sander is running. The optimum belt speed depends on the workpiece and the workpiece material. Always confirm the best speed by carrying out a small test. The following table lists some recommended values to help you determine the optimum speed.

Material / type of work	Softwood
Coarse finish (Grit grade)	60
Fine finish (Grit grade)	240
Preselected rotation speed	high (5-6)

Material / type of work	Hardwood
Coarse finish (Grit grade)	60
Fine finish (Grit grade)	180
Preselected rotation speed	high (5-6)

Material / type of work	Chipboard
Coarse finish (Grit grade)	60
Fine finish (Grit grade)	150
Preselected rotation speed	high (5-6)

Material / type of work	Removing paint / varnish
Coarse finish (Grit grade)	60
Fine finish (Grit grade)	--
Preselected rotation speed	high (5-6)

Material / type of work	Sanding varnish
Coarse finish (Grit grade)	150
Fine finish (Grit grade)	320
Preselected rotation speed	low (1-2)

Material / type of work	Rust removal
Coarse finish (Grit grade)	40
Fine finish (Grit grade)	120
Preselected rotation speed	medium / high (3-4)

Material / type of work	Plastic
Coarse finish (Grit grade)	120
Fine finish (Grit grade)	240
Preselected rotation speed	low / medium (2-3)

Material / type of work	Non-ferrous metals (e.g. aluminium)
Coarse finish (Grit grade)	80
Fine finish (Grit grade)	150
Preselected rotation speed	medium / high (3-4)

● Using the sander in a fixed mounting

The fixed mounting kit allows you to use the device for sanding vertically or horizontally by fastening it on to a flat stable surface (e.g. workbench).

Sanding horizontally (see Fig. E):

- Place the belt sander on to the mounting frame **12** and guide the dust extraction spout **5** through the opening of the mounting frame **12**. Tighten the screws **16**.
- Place the two clamp plates **13** on to the holes provided on the opposite side and screw the clamp plates tight with the provided screws.
- Insert the pins of the screw clamps **14** into the holes on one of the long sides of the mounting frame **12** (see Fig. E). Attach the mounting frame **12** by tightening the screw clamps **14**.

Sanding vertically (see Fig. F):

- Insert the pins of the screw clamps **14** into the holes on one of the short sides of the mounting frame **12**. Attach the mounting frame **12** to a flat, stable surface (e.g. workbench) by tightening the screw clamps **14**.
- Place the belt sander on to the mounting frame **12** and guide the dust extraction spout **5** through the opening of the mounting frame **12**. Tighten the screws **16**.
- Place the two clamp plates **13** on to the holes provided on the opposite side and screw the clamp plates tight with the provided screws.

● Tips and tricks

- Never use the same sanding belt to sand wood and metal.
- Worn or ripped sanding belts can damage the workpiece. Change sanding belts at the appropriate time.
- Keep the sanding belt properly tensioned so that it does not hang down too much and become unusable due to nicks, creases etc.

● Maintenance and cleaning

⚠ WARNING! RISK OF INJURY! Before you carry out any work on the belt sander always pull the mains plug out of the mains socket.

The belt sander is designed to be maintenance-free.

- Clean the device frequently. This should be done immediately after you have finished using it.
- Use a dry cloth to clean the device - never use petrol, solvents or cleaners that attack plastic.
- Always keep the ventilation slots clear.
- Remove any adhering dust with a narrow paint brush.

● Service centre

- **⚠ WARNING!** Have your device repaired only by qualified specialist personnel using original manufacturer parts only. This will ensure that your device remains safe to use.
- **⚠ WARNING!** If the plug or mains lead needs to be replaced, always have the replacement carried out by the manufacturer or its service centre. This will ensure that your device remains safe to use.

● Warranty

This appliance is guaranteed for 3 years from the date of purchase. It has been carefully produced and meticulously checked before delivery. Please keep your receipt as proof of purchase. Contact your service centre by telephone in case of questions pertaining to the warranty. Your goods can be transmitted free of cost only in this manner. This warranty applies only to the initial purchaser and is non-transferable.

The warranty covers only material or manufacturing faults, not normal wear or damage to fragile parts such as switches or rechargeable batteries.

The appliance is intended solely for private, not commercial, use.

If this product has been subjected to improper or inappropriate handling, abuse, or interventions not carried out by one of our authorised sales and service outlets, the warranty will be considered void. This warranty does not affect your statutory rights.

GB

DES UK LTD

Tel.: 0871 5000 700 (£ 0,10 / minute)

e-mail: support.uk@kompernass.com

IE

Kompernaß Service Ireland

Tel.: 1850 930 412 (0,082 €/Min.)

*** Standard call rates apply.**

Mobile operators may vary.

e-mail: support.ie@kompernass.com

● Disposal



The packaging is wholly composed of environmentally-friendly materials that can be disposed of at a local recycling centre.



Do not dispose of electrical power tools with the household rubbish!

In accordance with European Directive 2002 / 96 / EC (covering waste electrical and electronic equipment) and its transposition into national legislation, worn out electrical power tools must be collected separately and taken for environmentally compatible recycling.

Contact your local refuse disposal authority for more details of how to dispose of your worn out electrical devices.

● **Declaration of conformity /
Producer C€**

We, Kompernaß GmbH, Burgstr. 21,
D-44867 Bochum, Germany, hereby declare that
this product complies with the following EU directives:

**Machinery Directive
(98 / 37 / EC)**

**EU Low Voltage Directive
(2006 / 95 / EC):**

EN 60745-1, EN 60745-2-4

**Electromagnetic Compatibility
(2004 / 108 / EC):**

EN 50366, EN 55014-1, EN 61000-3-2,
EN 61000-3-3, EN 55014-2

Type / Description of product:

Parkside belt sander PEBS 900 SE

Bochum, 31.10.2009



Hans Kompernaß
- Managing Director -

We reserve the right to make technical modifications
in the course of further development.

IAN 37835

KOMPERNASS GMBH

Burgstraße 21

D-44867 Bochum

© by ORFGEN Marketing

Last Information Update: 10/2009

Ident.-No.: PEBS 900 SE102009-6



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>