USER MANUAL

MODEL 1170M SERIES

Ethernet Fiber Modems (1170M, 1171M, 1172M)







An ISO-9001 Certified Company Part# 07M1170M Doc# 077351U Rev. A Revised 4/14/03 SALES OFFICE (301) 975-1000 TECHNICAL SUPPORT (301) 975-1007

CONTENTS

1.0	Warranty Information	. 3
1.1	Radio and TV Interference	. 3
1.2	CE Notice	. 3
1.3	Service	4
2.0	General Information	. 5
2.1	Features	
2.2	Description	
3.0	Installation	8
3.1	Installing a Fiber Modem	8
3.2	End-to-end connection	11
4.0	Operation	12
4.1	LED indicators	
Α	Specifications	14
A.1	Interfaces/Connectors	
A.2	Interface Speed	
A.3	Transmission Mode	
A.4	Twisted-Pair/Copper Cable Type*	
A.5	Fiber Cable Type	
1.6	Fiber Wavelength	
A.7	Fiber Optic Link Budget	
	Transmit power	
	Receiver Sensitivity	
	Delay Time	
4 0	Typical Fiber Max. Distance	
A.8	Standards	
A.9	LED Status Indicators	
	Compliance	
	Power	
	Packaged Weight	
	Dimensions	
A. 14		10

1.0 WARRANTY INFORMATION

Patton Electronics warrants all Model 1170M Series components to be free from defects, and will—at our option—repair or replace the product should it fail within one year from the first date of shipment.

This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse, or unauthorized modification. If this product fails or does not perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall **Patton Electronics** be liable for any damages incurred by the use of this product. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. **Patton Electronics** specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

1.1 RADIO AND TV INTERFERENCE

The Model 1170M Series generates and uses radio frequency energy. and if not installed and used properly—that is, in strict accordance with the manufacturer's instructions—may cause interference to radio and television reception. The Model 1170M Series has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection from such interference in a commercial installation. However, there is no guarantee that interference will not occur in a particular installation. If a 1170M Series unit does cause interference to radio or television reception, which can be determined by disconnecting the cables, the user is encouraged to try to correct the interference by one or more of the following measures: moving the computing equipment away from the receiver, re-orienting the receiving antenna, and/or plugging the receiving equipment into a different AC outlet (such that the computing equipment and receiver are on different branches).

1.2 CE NOTICE

The CE symbol on your Patton Electronics equipment indicates that it is in compliance with the Electromagnetic Compatibility (EMC) directive

and the Low Voltage Directive (LVD) of the Union European (EU). A Certificate of Compliance is available by contacting Technical Support.



This device is not intended to be connected to the public telephone network.

1.3 SERVICE

All warranty and nonwarranty repairs must be returned freight prepaid and insured to Patton Electronics. All returns must have a Return Materials Authorization number on the outside of the shipping container. This number may be obtained from Patton Electronics Technical Services at:

• Tel: +1 (301) 975-1007

• Email: support@patton.com

• URL: http://www.patton.com

Note Packages received without an RMA number will not be accepted.

2.0 GENERAL INFORMATION

Thank you for your purchase of this Patton Electronics product. It has been thoroughly inspected and tested and is warranted for *one year* for parts and labor. If you have any questions about this product, please call Patton Electronics Technical Support at (301) 975-1007.

2.1 FEATURES

- Cost effective plug and play solution for extending your 10Base-T and 100Base-TX using 10Base-FL, 100Base-FX, and 100Base-SX fiber
- Supports 802.3 and 802.3u, 10Base-T, 10Base-FL, 100Base-TX, 100Base-FX, and 100Base-SX industry standards
- Extends network connections up to 2 km (1.24 miles) over multi-mode fiber media.
- · Low power consumption
- Auto-sensing full or half duplex Ethernet operation
- Twisted Pair MDI/MDI-X switch
- ST or SC connectors for connecting to multimode fiber media
- Ultra-miniature MicroPak Chassis
- LED indicators for Power, Fiber Link and Activity, and Twisted-pair Link and Activity
- External power supply adapter with AC and DC options

2.2 DESCRIPTION

There are three base models in the Patton Model 1170M Series of standards compliant Ethernet Fiber Modems (see Table 1) that convert and extend the reach of copper Ethernet over multi-mode fiber.

Table 1: Model 1170M configurations

d-Pair dard	Fiber Standard	Connector	Distance	Wavelength
se-TX	100Base-FX	ST	2 km	1300nm
se-TX	100Base-FX	SC	2 km	1300 nm

Twisted Model Stand 100Bas 1170M-ST 1170M-SC 100Bas 1171M-ST 10Base-T 10Base-FL ST 2 km 850nm 1171M-SC 10Base-T 10Base-FL SC 2 km 850nm 1172M-ST 10Base-FL/ ST 10Base-T/ 2 km 1300nm 100Base-FX 100Base-TX 10Base-T/ 10Base-FL/ SC 1172M-SC 2 km 1300nm 100Base-TX 100Base-FX

• The Model 1170M converts 100Base-TX to 100Base-FX and extends up to 1.24 miles (2.0 km).

Note The Model 1172M can be used to connect auto-sensing 10/100 and 100Base-TX/100Base-FX network devices only; it is not capable of connecting to 10Base-T/10Base-FL network devices.

 The Model 1171M converts 10Base-T to 10Base-FL and extends up to 1.24 miles (2.0 km).

The Model 1171M can be used to connect auto-sensing 10/100 and 10Base-T/10Base-FL network devices only; it is not capable of connecting to 100Base-TX/100Base-FX or SX network devices.

• The Model 1172M auto-negotiates and converts 10Base-T/100Base-TX to 10Base-FL/100Base-FX and extends up to 1.24 miles (2.0 km).

The Model 1172M can be used to connect auto-sensing 10/100. Note 10Base-T/10Base-FL. and 100Base-T/100Base-FX network devices. The Model 1172M cannot connect a 10Base network device on one side to a 100Base network device on the other.

> If a 10Base network device is on one side of the Model 1172M, there must be another 10Base or an auto-sensing 10/100 network device on the other. If a 100Base network device is on one side of the Model 1172M, there must be another 100Base or an auto-sensing 10/100 network device on the other.

The Model 1172M is the ideal product for customers who currently have 10Base-T networks and/or equipment and are planning to upgrade to 100Base-TX in the future. The Model 1172 provides a migration path

from 10Base-T/10Base-FL to 100Base-TX/100Base-FX, which eliminates the need to upgrade and lowers the overall cost of ownership.

All Patton 1170M Series models are packaged in an ultra-miniature MicroPak chassis and feature power, fiber link and activity, and twisted-pair link and activity LED indicators. The Model 1170M Series of Ethernet Fiber Modems can be ordered with ST or SC fiber optic connectors and with 120VAC, 220VAC, universal interface (UI), -48 VDC, -24 VDC, or -12 VDC power supply adapters. Power cord designations for 220 VAC and UI models must be specified at the time of purchase.

3.0 INSTALLATION

The following sections describe installing and configuring the Model 1170M Series of Ethernet Fiber Modems

3.1 INSTALLING A FIBER MODEM

Do the following to install the Model 1170M Series of Ethernet Fiber Modems:

1. The MDI/MDI-X switch enables you to connect the 1170M models to different types of network devices using a standard (straight-through) network patch cable.

To connect the 1170M models to a terminal, transceiver, or network interface card (NIC), set the switch to the MDI-X (lefthand) position (see Figure 1).

Otherwise, to connect to a hub or switch, set the switch to the MDI (right-hand) position (see Figure 1).

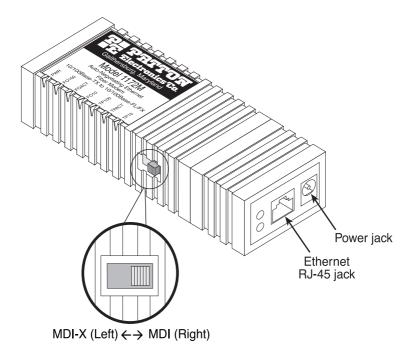


Figure 1. MDI/MDI-X switch, Ethernet RJ-45 jack, and power jack locations

2. The Fiber Modem comes equipped with a shielded RJ-45 Jack for Ethernet connections (see Figure 1 on page 8).

Connect the Ethernet RJ-45 jack to the appropriate 802.3 compliant network equipment via a standard network patch cable (not provided). The pinout diagrams in Figure 2 reflect the pinouts of the Ethernet RJ-45 jack when switched to MDI and MDI-X settings.

Note Twisted-pair connections from the Ethernet RJ-45 Jack to the network device should be 802.3 compliant (Category 5 STP or UTP recommended) and must not exceed 100 meters (328 feet). Do not use flat or satin cable.

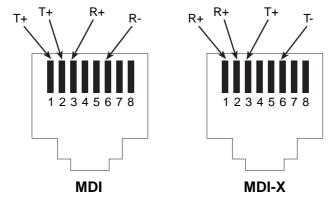


Figure 2. Shielded Ethernet RJ-45 Jack pin-outs with different MDI/MDI-X switch settings

3. Connect the dual fiber ST or SC connectors on the Fiber Modem (see Figure 3) directly to the 802.3 compliant multi-mode fiber cable equipped with male ST or SC connectors or via 802.3 compliant multi-mode fiber patch cord (not provided) and corresponding ST or SC fiber wall jacks.

Note Verify that the cable connecting the TX and RX of the 1170M Series unit is connected to the RX and TX respectively on the remote 1170M Series unit or network device. End-to-end multimode fiber connections between two Model 1170M Series Ethernet Fiber Modems or between one Model 1170M Series Fiber Modem and other network devices must not exceed 2 km (1.24 miles), 298.7 m (980 ft) in 100Base-SX mode (Model 1172M only).

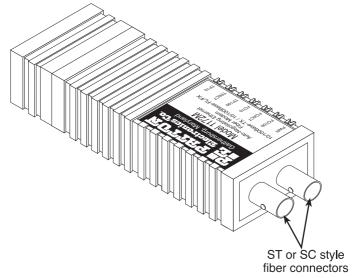


Figure 3. Fiber connector locations

- 4. Connect the DC power output side of the power supply adapter to the power jack (see Figure 1 on page 8) on the 1170M Series unit.
- Connect the AC power side/cord of the power supply adapter to the appropriate AC power source.

The Ethernet Fiber Modem will power up and LED indicators will illuminate once connected to the power source.

3.2 END-TO-END CONNECTION

Figure 4 shows an end-to-end connection between a personal computer/ terminal and Ethernet hub using two Patton Model 1170M Series Ethernet Fiber Modems and a multi-mode fiber connection.

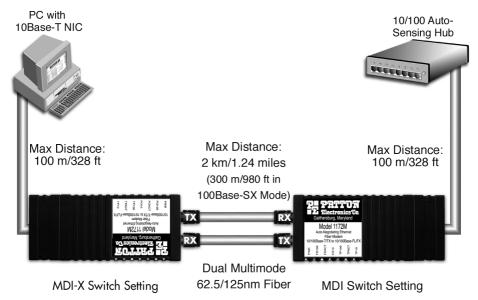


Figure 4. End-to-end multi-mode fiber connection

4.0 OPERATION

Once you have installed the Model 1170M Series unit and have connected the External Power Supply Adapter to the appropriate power source, the unit will power up automatically and is ready to operate.

4.1 LED INDICATORS

Once powered up, LED indicators located on the side of the Model 1170M Series unit will illuminate to indicate the operating status of the unit.

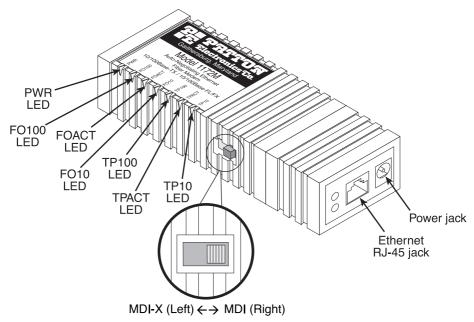


Figure 5. Location of 1170M Series LED indicators (Move fiber connectors to the opposite end of the modem)

The LED indicators reflect the following operating status:

Table 2: LED indicator descriptions

Number	Name	Description
1	PWR	Illuminates green to shown that power is applied to unit.
2	FO100	Illuminates green to show that a 100 Mbps signal is present on the fiber optic side of the unit. (Not used on Model 1171M.)
3	FOACT	Blinks yellow to show activity on the fiber optic side of the unit.
4	FO10	Illuminates green to show that a 10 Mbps signal is present on the fiber optic side of the unit. (Not used on Model 1170M.)
5	TP100	Illuminates green to show that a 100 Mbps signal is present on the twisted-pair/copper side of the unit. (Not used on Model 1171M.)
6	TPACT	Blinks yellow to show activity on the twisted-pair/copper side of the unit.
7	TP10	Illuminates green to show that a 10 Mbps signal is present on the twisted-pair/copper side of the unit. (Not used on Model 1170M.)

APPENDIX A

SPECIFICATIONS

A.1 INTERFACES/CONNECTORS

• Twisted-Pair/Copper Ethernet: Shielded RJ-45 Jack

• Fiber Optic Ethernet: Dual ST or SC Connectors

A.2 INTERFACE SPEED

• 1170M: 100 Mbps

1171M: 10 Mbps

• 1172M: Auto-Negotiating 10 or 100 Mbps

A.3 TRANSMISSION MODE

Full or Half-Duplex Operating Modes (Auto-sensing)

A.4 TWISTED-PAIR/COPPER CABLE TYPE*

Category 5 or better recommended

A.5 FIBER CABLE TYPE*

Recommended: 62.5/125 µm multi-mode fiber

Optional:

- 100/140 µm multi-mode fiber
- 85/125 μm multi-mode fiber
- 50/125 µm multi-mode fiber

1.6 FIBER WAVELENGTH

1170M & 1172M: 1300nm

• 1171M: 850nm

^{*} Physical characteristics of the twisted-pair/copper and fiber optic cable must meet or exceed IEEE 802.3 specifications.

A.7 FIBER OPTIC LINK BUDGET

Transmit power

- 1170M: -16.8 dBm (typical)
- 1171M: -12 dBm (typical)
- 1172M: -16.8 dBm (typical)

Receiver Sensitivity

- 1170M: -33.5 dBm (typical)
- 1171M: -28 dBm (typical)
- 1172M: -33.5 dBm (typical)

Delay Time

- 1170M: 5µs per km (typical)
- 1171M: 5µs per km (typical)
- 1172M: 5µs per km (typical)

Typical Fiber Max. Distance

- 1170M—1.24 mile (2 km)
- 1171M—1.24 mile (2 km)
- 1172M—1.24 mile (2 km)

A.8 STANDARDS

IEEE802.3 and IEEE 802.3u (10Base-T, 10Base-FL, 100Base-TX, and 100Base-FX)

A.9 LED STATUS INDICATORS

Power, Twisted-Pair/Copper Link and Activity, Fiber Optic Link and Activity

A.10 COMPLIANCE

- Safety & EMC: Patton Internal Safety & EMC Testing, FCC Part 15 Class A
- Telecom—CE Mark per EMC directive 89/336/EEC and Low Voltage Directive 73/23/EEC

A.11 POWER

- External 120 VAC, 60 Hz AC Power Supply (5 VDC output)
- External 220 VAC, 50 Hz AC Power Supply (5 VDC output)
- External UI AC Power Supply (100–240 VAC, 50–60Hz input, 5 VDC output)
- -45 VDC
- -24 VDC
- -12 VDC

A.12 PACKAGED WEIGHT

Less than 1 lb. (0.45 kg) with power supply

A.13 DIMENSIONS

3.0L x 1.8W x 0.8H in. (7.6L x 4.4W x 1.9H cm)

A.14 ENVIRONMENT

Model 1170M and 1172M

- Temperature: 32–95°F (0–35°C)
- Humidity: up to 90% non-condensing

Model 1171M

- Temperature: 32–113°F (0–45°C)
- Humidity: up to 90% non-condensing

Copyright © 2003
Patton Electronics Company
All Rights Reserved.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com