


USER MANUAL

Model 1000RP Series AC and DC Rack Mount Power Supplies

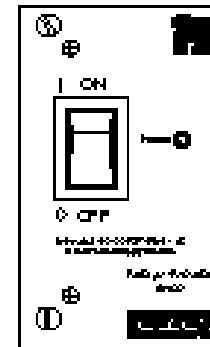

PA PATTON
Electronics Co.

Part# 07M1000RP-B
Doc# 078011UB
Revised 3/19/96

SALES OFFICE
(301) 975-1000
TECHNICAL SUPPORT
(301) 975-1007

1.0 WARRANTY INFORMATION

Patton Electronics warrants all Model 1000RP Series components to be free from defects, and will—at our option—repair or replace the products should they fail within one year from the first date of shipment. This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse or unauthorized modification. If these products fail or do not perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall **Patton Electronics** be liable for any damages incurred by the use of these products. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. **Patton Electronics** specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

1.1 RADIO AND TV INTERFERENCE

The Model 1000RP Series units generate and use radio frequency energy, and if not installed and used properly—that is, in strict accordance with the manufacturer's instructions—may cause interference to radio and television reception. They have been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection from such interference in a commercial installation. However, there is no guarantee that interference will not occur in a particular installation. If these products do cause interference to radio or television reception, which can be determined by turning off the unit, the user is encouraged to try to correct the interference by one or more of the following measures: moving the computing equipment away from the receiver, re-orienting the receiving antenna and/or plugging the receiving equipment into a different AC outlet (such that the computing equipment and receiver are on different branches).

1.2 SERVICE

All warranty and non-warranty repairs must be returned freight prepaid and insured to Patton Electronics. All returns must have a Return Materials Authorization number on the outside of the shipping container. This number may be obtained from Patton Electronics Technical Service at **(301) 975-1007**. *Packages received without an RMA number will not be accepted.* Patton's technical staff is also available to answer any questions that might arise concerning the installation or use of your products. Technical Service hours: **8AM to 5PM EST, Monday through Friday.**

2.0 GENERAL INFORMATION

Thank you for your purchase of these Patton Electronics products. They have been thoroughly inspected and tested and are warranted for One Year parts and labor. If any questions or problems arise during installation or use of these products, please do not hesitate to contact Patton Electronics Technical Support at (301) 975-1007.

2.1 FEATURES

- Low Profile "Mid-Plane Architecture" Design
- Easily Replaceable Front and Rear Modules
- Front Panel Power Switch and LED Indicator(s)
- Compatible with all Patton Rack Cards
- Compatible with Patton Rack Chassis and Cluster Boxes
- One Power Supply Services up to 16 Rack Cards
- AC Models Available in Domestic/International 120/230V AC and European (EN60950 Compliant) 120/230V AC Versions
- DC Models Available with 48V, 24V and 12V DC Power Input

2.2 DESCRIPTION

The **Patton Model 1000RP Series** power supply modules fit in any Patton rack chassis or Cluster Box, and supply up to sixteen Patton rack cards with necessary operating power. Like all Patton rack cards, the Model 1000RP Series uses a mid-plane architecture: Each module incorporates a front power supply module (with power switch and LEDs) and rear power entry module (with power source interface).

The Model 1000RP Series is compatible with all Patton Rack Cards, and is available with an AC or a DC input. There are two different AC versions available: The first version is CSA and UL (or equivalent) certified. The second version adds elements that allow it to comply with the EN 60950 Safety of Information Technology Equipment standard. Both AC power supplies accept 120 or 220-240V AC.

The 48V DC power module accepts an input voltage of 40-60V DC. The 24V DC power module accepts an input voltage of 18-36V DC. The 12V DC power module accepts an input voltage of 10-20V DC. All DC modules use cage clamp terminal blocks that make wire connection easy. An extra port on the terminal block allows the user to daisy chain multiple units together. An alarm relay opens when power is attached and closes when power is disconnected.

3.0 INSTALLATION

Patton's Model 1000RP Series power supply modules are easy to install and require no configuration. This section describes the functions of the Model 1000R16P rack chassis, tells how to install front and rear power supply cards into the chassis and how to make the power interface connections.

3.1 THE MODEL 1000R16P RACK CHASSIS

The Model 1000R16P Rack Chassis (Figure 1, below) features sixteen function card slots and one power supply card slot. (**Note:** refer to function card user manuals for proper installation of function cards) Measuring only 3.5" high, the Model 1000R16P is designed to occupy only 2U in a 19" rack. Sturdy front handles allow the Model 1000R16P to be extracted and transported conveniently.

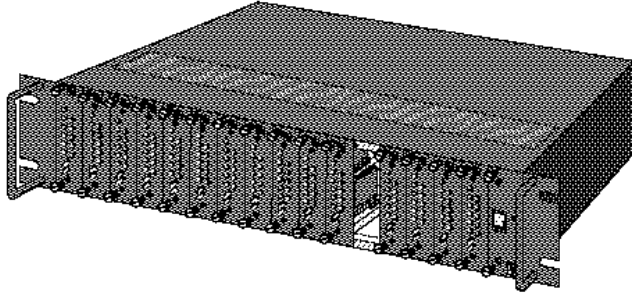


Figure 1. Model 1000R16P Rack Chassis with Power Supply

3.2 INSTALLING POWER SUPPLY MODULES

All power supply modules (AC or DC) are comprised of two cards: the front power supply card and the rear power entry card. These two cards meet inside the rack chassis and plug into each other by means of a multipin connector. (The same holds true for all Patton Cluster Boxes as well.) Use the following steps as a guideline for installing each power supply module into the Model 1000R16P rack chassis:

Rear (Power Entry) Card Installation

1. Attach the ground wire using the star washer and the #6-32 nut. Use a wrench to tighten the nut securely.
2. Slide the power entry card into the back of the chassis along the metal guide rails provided.
3. Secure the rear card using the #4-40 metal screws provided.

Caution: To avoid shock hazard, do not connect AC or DC power cable(s) until power supply module is fully assembled.

Front (Power Supply) Card Installation

1. Make sure the power switch is in the OFF position.
2. Slide the power supply card into the front of the chassis. It should meet the rear card when it's almost all the way into the chassis.
3. Push the front card *gently* into the multipin connector on the rear card.
4. Secure the front card using the thumb screws.

3.3 REAR CARD POWER CONNECTION - AC VERSIONS

The Model 1000RPEM and 1000RPEM-V rear cards are equipped with a shrouded male IEC-320 AC power interface. This interface accepts a domestic US power cord (supplied) or any number of international power cords (see **Appendix B**).

3.4 REAR CARD POWER CONNECTION - DC VERSION

The Model 1000RPEM-DC rear card comes equipped with a cage clamp terminal block. The following instructions will tell you how to install the rear card.

Caution: Connect the equipment to a SELV DC supply source that is electrically isolated from the AC power sources. The DC power source should also be reliably connected to earth ground.

1. Strip back the insulation on each of the wires .25".

(continued)

4.0 OPERATION

- Use a small flat blade screwdriver to open the cage clamp as shown in Figure 2 (below.). Insert the stripped portion of the wire into the opening and remove the screwdriver. The cage clamp will clamp the wire producing a reliable connection. Make sure all strands of wire are captured and that there is no exposed wire.

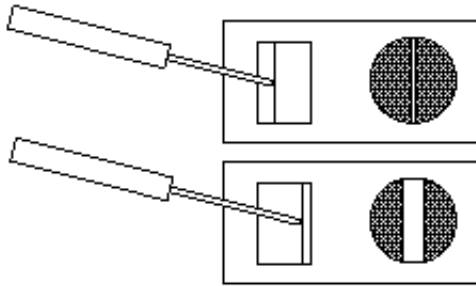


Figure 2. Connecting bare wires to the Model 1000RPEM-DC power entry card.

- Connect the earth ground wire to the frame ground terminal.
- Connect the +VDC power wire to the +DC In terminal. Connect the -VDC power wire to the -DC In terminal. The power supply card is protected against accidental reversal of polarity. If the DC-Input LED does not light, check the polarity of the input wiring.
- Connect the Alarm contacts as needed by your application.

Once the Model 1000RP Series power supply module is properly installed, you are ready to operate the unit. Figure 3 (below) shows the location of the power switch and LED indicators on the AC and DC power supply module front cards.

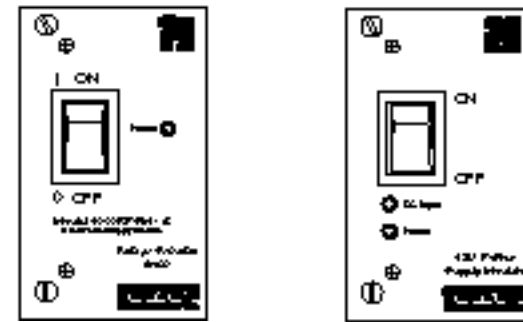


Figure 3 The power switch and front panel LEDs on the AC and DC front card.

4.1 FRONT PANEL SWITCH

The power supply on/off switch is located on the front panel. The power supply may be switched off at any time without harming the installed cards (**Note:** The switch should be in the OFF position before installing or removing either the front or the rear power supply card).

4.2 LED STATUS MONITOR(S)

The AC modules in the Model 1000RP Series incorporate a single "Power" LED, which lights when the power switch is turned on and the unit is connected to an AC power source.

The DC Modules in the Model 1000RP Series feature two front panel LEDs that indicate the condition of the power line. The "Power" LED will only light when the power switch is turned on and low voltage AC power is available to the function cards installed in the rack. The "DC Input" LED will light whenever a power source is present (with correct polarity), regardless of whether or not the power switch is turned on.

5.0 SERVICE PROCEDURES

This section describes the procedures for Power Line Voltage Settings and Fuse Replacement for **Patton Models 1000RPSM-2, 1000RPEM, 1000RPSM-V and 1000RPEM-V**. **Note:** These procedures apply generally to all products listed above, which (products) will henceforth be referred to as "the unit".

WARNING! To avoid electric shock, always remove AC power cord before servicing front or rear card of power supply module.



5.1 PROCEDURE FOR POWER LINE VOLTAGE SETTING: MODELS 1000RPSM-2 AND 1000RPSM-V

WARNING! When you change the voltage setting, you **must** also replace the fuse according to the instructions in Section 5.2

Although the Models 1000RPSM-2 and 1000RPSM-V are shipped from the factory with a customer-specified power supply configuration, you may change the configuration yourself. Here are the steps to switch the configuration of the power supply between 120 and 220 - 240 volts AC:

1. Switch the unit OFF.
2. Remove the power plug from the AC wall outlet.
3. Remove the power plug out of the rear of the unit.
4. Switch the unit ON and verify that the front panel "Power" LED is not lit. Switch the unit OFF.
5. Remove the front power supply card and locate the two position switch near the back of the card. Slide the switch to the desired voltage (Note: The actual values on the switch may be "110/220", "115/230", or a similar indication).
6. Replace the existing fuse with one of the correct value (see **Section 5.2** for fuse replacement procedure and **Appendix B** for the appropriate fuse).
7. Replace the front card.
8. Replace the power supply cord, if necessary (see **Appendix B** for the appropriate power cord).

5.2 PROCEDURE FOR FUSE REPLACEMENT: MODELS 1000RPEM AND 1000RPEM-V

Steps 1 - 5 in the instructions below apply to both models. Steps 6 - 10 are different for the Model 1000RPEM than for the Model 1000RPEM-V.

(Steps #1- 5 for both models)

1. Switch the front card OFF.
2. Remove the power plug from the AC wall outlet.
3. Remove the power plug out of the rear of the unit.
4. Switch the unit ON and verify that the front panel "Power" LED is not lit. Switch the unit OFF.
5. DETERMINE THAT THE LINE VOLTAGE IS WITHIN THE PROPER VOLTAGE RANGE SPECIFIED FOR THE UNIT. (A RANGE OF 100 TO 130 VAC IS PERMISSIBLE FOR THE 120 VOLT SETTING. A RANGE OF 200 TO 240 VAC IS PERMISSIBLE FOR THE 220 VOLT SETTING.) IMPROPER VOLTAGE SETTING WILL RESULT IN DAMAGE, IMPROPER FUNCTIONING, OR BOTH. Improper voltage setting is also the leading cause for a blown fuse. If the voltage setting switch was incorrectly set, see **Section 5.1** for the instructions for proper setting of the power line voltage selector switch and continue from there.

(Steps #6 - 9 for Model 1000RPEM)

6. Using a small screwdriver, pop the compartment open: It will slide open like a drawer. Depending upon the exact part used, the drawer may slide completely out of the fuse holder or it may stop part way out. Note that there are *two* fuses in the drawer: The front fuse is the spare, the rear fuse is the "active" fuse.

WARNING! Replace the fuse only with one that has the correct voltage and current rating for the voltage setting of the unit (the proper fuse ratings will be marked on the rear panel of the unit*). Replacing the fuse with one having an incorrect rating can result in a fire!

7. If the active fuse appears to be blown, remove it from the clips and replace it with the spare from the front compartment. Note the size and rating of the blown fuse before discarding (*120V = **TO.4**; 240V = **TO.2**).

(continued)

8. Replace the spare fuse with one of the appropriate size and rating and close the drawer.
9. Re-install the power cord.

(Step #6- 9 for Model 1000RPEM-V)

6. Using a small screwdriver, push in lightly and turn counter clockwise to open the compartment. The top will pop open with the fuse attached.

WARNING! Replace the fuse only with one that has the correct voltage and current rating for the voltage setting of the unit (the proper fuse ratings will be marked on the rear panel of the unit*). Replacing the fuse with one having an incorrect rating can result in a fire!

7. If the active fuse appears to be blown, remove it from the front container. Note the size and rating of the blown fuse before discarding (*120V = **TO.4**; 240V = **TO.2**).
8. Replace the spare fuse with one of the appropriate size and rating and close the compartment.
9. Re-install the power cord.

**APPENDIX A
SPECIFICATIONS**

1000RPSM-2 and 1000RPSM-V (AC Front Cards):

Power Supply: 120V AC or 220-24V AC, switchable

Input Voltage: "120V AC" setting: 100-130V AC; "220V AC" setting: 200-240V AC

Maximum Input Current: "120V AC" setting: 400mA; "220V AC" setting: 200mA

Isolation Voltage: Model 1000RPSM-2: 1.5 kV AC;
Model 1000RPSM-V: 5 kV AC

Output Voltage: 10V AC @ 2.4 A

Output Power: 24VA

Switches: Power on/off

LED Indicator: Power

1000RPEM and 1000RPEM-V (AC Rear Cards):

Connection: IEC-320 Shrouded Male

Fuse: 120V AC: 5x20mm, 400mA, Time-Delay; 240V AC: 5x20mm, 200mA, Time-Delay

(APPENDIX A - Continued)

1000RPSM-48A/24A/12A (DC Front Card):

Power Supply: 48V DC (-48A version); 24V DC (-24A version); 12V DC (-12A version)

Input Voltage: 40-60V DC (-48A version); 18-36V DC (-24A version); 10-20V DC (-12A version)

Input Protection: Surge protection via Silicon Avalanche Diode, triggered at 75V DC (-48A version); 39V DC (-24A version); 22V DC (-12A version)

Maximum Input Current: 1A @ 40V DC (-48A version); 2A @ 18V DC (-24A version); 4A @ 10V DC (-12A version)

Isolation Voltage: 500V RMS, input to output (all models)

Output Voltage: 12V AC @ 2A

Output Power: 24W

Switches: Power on/off

LED Indicators: Power, DC Input

1000RPEM-DC (DC Rear Card):

Connection: Cage-clamp terminal block with:

- +DC In
- DC In
- Frame Ground
- Alarm
- Alarm C
- +DC Out
- DC Out

Wire: 26-14 solid or stranded cable

Alarm: Opens when power is attached and closes when power is disconnected

**APPENDIX B
FACTORY REPLACEMENT PARTS
AND ACCESSORIES**

<u>Patton Model #</u>	<u>Description</u>
0821R4.....	Fuse 5x20mm, 400mA, Time-Delay <i>Little Fuse P/N 218.400</i> Use for 120V applications
0821R2.....	Fuse 5x20mm, 200mA, Time-Delay <i>Little Fuse P/N 218.200</i> Use for 240V applications
0805US	American Power Cord
0805EUR.....	European Power Cord CEE 7
0805EURP	Europlug Power Cord CEE 7/16
0805UK	United Kingdom Power Cord
0805AUS	Australia/New Zealand Power Cord
0805DEN.....	Denmark Power Cord
0805FR.....	France/Belgium Power Cord
0805IN.....	India Power Cord
0805IS.....	Israel Power Cord
0805JAP.....	Japan Power Cord
0805SW.....	Switzerland Power Cord

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>