#### INSTRUCTIONS: For the following model Mountain Buggy® strollers:









Urban Single - U1204

Urban Double - U2204

Urban Triple - U3204







Terrain Single - T1204





Breeze Single - B1204

## 



We take safety seriously. Compliance with safety standards for baby strollers is NOT compulsory in all countries.

All Mountain Buggy® models, including when a Carrycot and Carseat Clip are attached, have passed the Australian/New Zealand Safety Standard AS/NZS 2088, and the British Standard BS 7409. Models sold in North America have also passed American Standard ASTM F833



Designed and made in New Zealand for Mountain Buggy® Ltd. Manufactured by Tritec Manufacturing Ltd, an ISO9002 credited supplier.

#### IMPORTANT KEEP FOR FUTURE REFERENCE

Read these instructions carefully before use and keep for future reference. Your child's safety may be affected if you do not follow these instructions.

## Safety Instructions

MARNING: Avoid serious injury from falling or sliding out. Use the harness at all times. Always use the crotch strap in combination with the waist belt.

WARNING: A CHILD'S SAFETY IS YOUR RESPONSIBILITY.

WARNING: FOLLOW THE MANU-FACTURER'S INSTRUCTIONS.

WARNING: DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER/ PRAM.

WARNING: MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THIS STROLLER/ PRAM, OTHERWISE THEY MAY BE INJURED.

WARNING: CARE MUST BE TAKEN WHEN FOLDING AND UNFOLDING THE STROLLER TO PREVENT FINGER ENTRAPMENT.

Ensure freedom of movement of locking devices.

For all models, the seat is suitable for newborn up to 4 years old (3 years for the Breeze) or maximum of 35kg/77lb. For use with a newborn (0-6mths) the seat should be reclined fully. It is recommended that a newborn headrest or similar is used for babies 0-3 months.

Other newborn options include:

 Mountain Buggy® Carrycot (available for all models except Breeze)
 Mountain Buggy® Carseat Clip (available for all single models, except Breeze)

Overloading, incorrect folding and the use of non-approved accessories may damage or break this stroller.

Please note it is unsafe to use accessories other than those approved by the manufacturer or distributor.

This stroller is designed for one child in each seat.

WARNING: Any load attached to the handle affects the stability of the stroller.

To prevent the stroller from becoming unstable, do not place parcels or accessory items anywhere except in storage basket and pockets provided.

Maximum seat loading for all model strollers (including Double & Triple models) is 35kg/77lb.

Maximum seat height capacity is 100cm.

Maximum loading for the storage basket is 5kgs/11lb.

Maximum loading for the pocket is 300gms/10.5oz (i.e. small items such as keys, wallets only).

Excessive weight may cause a hazardous unstable condition to exist.

Do not use near an open fire or exposed flame.

Cover the stroller if it is exposed to sunlight through glass, for example in a car to avoid over heating.

Remove plastic wrapping and discard to avoid a child suffocating.

#### FRONT WHEEL ASSEMBLY

#### ALL MODELS

- 1. Holding both knobs at the same time, unscrew and pull out front axle.
- 2. Insert front wheel(s). FRONT WHEELS HAVE NO BRAKE COG.
- 3. Re-insert axle and finger tighten both knobs.

#### URBAN SINGLE, DOUBLE & TRIPLE





INSERT AXLE

TIGHTEN KNOBS

#### TERRAIN & BREEZE SINGLE





INSERT AXLE

TERRAIN DOUBLE



INSERT AXLE. Also insert spacer between front wheels.



 
TIGHTEN KNOBS

#### REAR WHEEL ASSEMBLY

#### ALL MODELS




Check that brake cog is on the inside next to stroller frame.



Slide wheels onto each end of the axle.



 




Finished assembly. Push down on brake lever to apply brakes. Check brake lever inserts into brake cog on both sides. DO NOT use stroller if brakes are not functioning.

#### **ERECTING THE STROLLER**



 



Place pressure on heel rest to ensure sliding locks are fully engaged.

# WARNING: Ensure that all locking devices are engaged before use.

#### SWIVELLING FRONT WHEELS

#### URBAN

Locking the front wheel swivel(s) is recommended for use on uneven ground. There is still a small amount of left and right movement when in the locked position.







TO UNLOCK: Turn knob 1/4 of a turn so 'Unlocked' symbol is at the top.

#### WARNING: TIGHTEN ALL KNOBS AND REGULARLY CHECK THEY REMAIN FIRM.

#### **FOLDING THE STROLLER**

URBAN

NOTE: On Urban model strollers, ensure front wheels are unlocked and rotated forward before folding.



 


X wrong

**/** CORRECT

#### ALL MODELS







Pull up sliding lock on both sides of heel rest.



Lift at heel rest so the handle bar end goes down.



Fully folded. For an even flatter fold, remove wheels (see wheel removal).

NOTE: Sliding lock on the left side has a secondary safety catch.

WARNING: MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS WHEN FOLDING OR ERECTING THE STROLLER.

#### REMOVING REAR WHEELS



De-press quick release clip and slide wheel off axle.

#### **BRAKE**





lever completely down.

To release brake, lift brake lever completely up.

WARNING: PUT ON THE BRAKE WHENEVER YOU PARK THE STROLLER/PRAM. ENSURE THE BRAKE IS ON WHEN LOADING AND UNLOADING CHILDREN.

### SAFETY WRIST STRAP



Care should be taken if the stroller is used on stairs, escalators, down hills

or in strong winds. Hold the safety wrist strap firmly in all these situations.

Regularly check that the wrist strap is securely attached to the stroller handlebar and stitching is secure and strong.

#### **SAFETY HARNESS**



To fasten waist strap push both buckle ends A & B into the crotch buckle C



Clip shoulder straps D'& E to waist strap buckles







Adjust sliding Move sliding buckles To release, press buckles so the up as far as possible sides of centre harness straps are to reduce the amount buckle. a firm fit. of strap hanging loose, eliminating the

risk of chocking. A separate safety harness conforming to British Standard BS6684 may be attached to the two "D" rings located at the insertion of the waist harness.

#### SEAT ANGLE

#### ALL MODELS

Seat back can be reclined to any point between upright and fully reclined position.



To adjust: Pull on buckles to slide straps through buckles and recline seat. Pull straps through buckles to raise



Shows upright through to fully reclined seat angle.

NOTE: The stroller would become unstable if a child was to move up the seat. For this reason the seat retains a slight angle to prevent the stroller from tipping back.

#### SEAT ANGLE TERRAIN ZIP HAMMOCK OPTION



The Zip Hammock has two seat back positions. Seat back is upright when zips are up, and reclined when zips are down.

### ADJUSTING SHOULDER STRAP HEIGHT



Shoulder straps should be adjusted so they are located just below or level with a child's shoulders. The older the child, the further up the seat these straps will go.



To locate buckle when adjusting straps, slip your hand up the inside back of the seat (or inside the pocket on the Zip Hammock model).





REMOVING

With a hand inside the back of Re-thread short side of buckle the front.

INSERTING

the seat rotate the rectangular through the most suitable insertion shaped buckle and push short slot for your child. Once buckle is side through the insertion through, turn so it is flat against slot, while pulling strap at seat back, and check it is secure by pulling on strap.

#### POSITION OF CHILD IN SEAT





Make sure baby is positioned down as far as possible in seat.

6

#### **REMOVING SEAT**

#### ALL MODELS

1 Unfasten seat from frame along side tubes.



#### URBAN

2 Unfasten strap underneath seat at point A. Unfasten frame straps at point B.

#### TERRAIN

2 Push seat forward, then slide fabric up seat support wire.

3 Remove seat support wire from stroller frame at C and D.



### REFITTING SEAT

#### ALL MODELS

Follow removing seat instructions above, in reverse order.



CORRECT



Note: Fasten seat onto frame making sure fabric wraps

 
over and around the top of the side tubes.

#### REMOVING SUNHOOD

#### ALL MODELS



■ Pull support wire out of sunhood joint, while pushing against frame. Note:This operation is child proof and therefore requires a degree of force.



**2** Repeat step 1 on other side.

3 Unfasten the sunhood fabric from the stroller frame and seat near the handle bar.

#### REFITTING SUNHOOD



Place sunhood in position and push one side of wire into plastic joint. Repeat on other side by pulling wire away from frame at the top. Fasten sunhood fabric to stroller frame and seat, near handle bar.

# STORM COVER AND SUN COVER ACCESSORIES

These accessories fasten at the top, around the side tubes. They fit over the sunhood and under the footplate. The lower elastic loops fasten onto the lug below the footplate.





WARNING: Do not leave Storm Cover on stroller in warm conditions. Check baby's comfort frequently when using Storm Cover.

7

## Care and Maintenance

### WARNING: This stroller requires regular maintenance by the user.

#### FABRIC CARE AND CLEANING


This outdoor fabric should be cleaned regularly. Brush off any excessive dirt and rinse with warm water. Fabric can be removed and washed by hand using a mild natural soap solution in luke warm water (no more than 38°C / 100°F). Rinse thoroughly to remove soap. DO NOT use detergents! Allow to air dry. DO NOT tumble dry.

#### WHEEL ALIGNMENT

#### TERRAIN ONLY

It may be necessary to periodically adjust wheel alignment if stroller steers to one side. The Terrain stroller has angle struts on the rear axle for this purpose.

- Loosen all four nuts A, B, C & D holding strut in
- Slightly tighten outside nut on the opposite side to the direction it is steering (eg if steering to left tighten nut D).
- 3 Test the stroller wheel alignment by pushing it on a smooth flat surface.
- Re-test the stroller steering after every turn of the nut until the stroller will run in a straight line.
- 5 When the correct steering is achieved, turn the outside nut on the opposite side so it just touches the side of the tube.
- 6 Tighten the inside nuts.

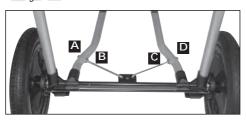

#### HANDLEBAR GRIP

Take care to protect the handlebar grip from abrasion or sharp objects. Contact your authorised dealer or distributor for replacement grips and instructions. A wetsuit glue can be used to repair cuts.

#### TYRES/TIRES & TUBES

If a puncture occurs, the inner tube can be repaired with a bicycle repair kit, or replaced. If the tread becomes completely worn the tyre/tire should be replaced. Replacement tyres/tires, inner tubes and repair kits are available from your authorised dealer or most cycle stores.

<u>Inflating the tyres/tires:</u> Inflate to a pressure of 15psi. (105 KPa) Do not exceed 20psi (140 KPa). The valves are the same as a bicycle, or car tyre/tire valve.

#### WARNING: Over inflation may damage wheel.

#### STROLLER FRAME

The main frame is aluminium/aluminum and corrosion resistant. The Urban front assembly and some components are steel and will corrode if exposed to environments such as, salt water, salt spray or beach

If stroller is used in these environments, wash steel parts in warm soapy water, dry thoroughly and protect by spraying with light aerosol can oil eg WD40 or CRC.

The brake cam may require lubrication if it becomes difficult to operate.

lubricate this surf

#### **STORAGE**

Store inside in a dry place.

Make sure the stroller is dry before storing.



Wrist strap can be used to hold stroller together in its fully folded position. Loop wrist strap around velcro on edge of sunhood. rear axle then fasten.




Sunhood can be fastened back by applying velcro on sunhood window flap to the

WARNING: It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer or distributor.

# Parts of Stroller Frame

Note: Diagram is Urban Single model

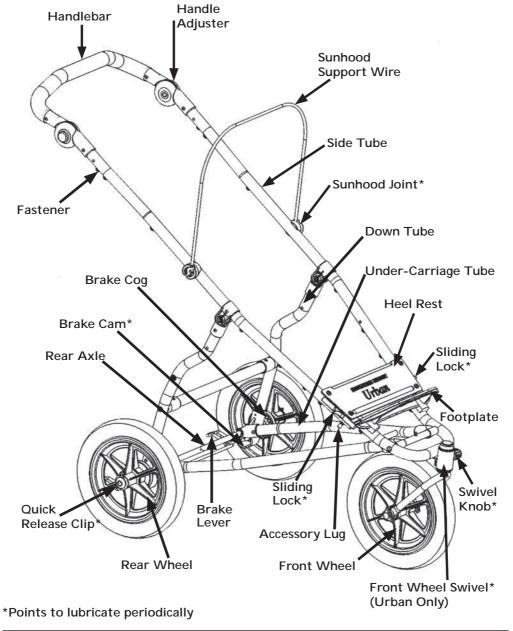

9

## Accessories



Sleeping Bag Stroller liner for summer. Zip top on for warm bag in winter that can't be kicked off!



KiddyBoard<sup>TM</sup>

The safest and only recommended option for an extra child.



Bumper Bar
Hold on for the ride.
Detachable.



Carrycot
The best option for newborns.



Universal Carseat Clip \*\*Fits most infant car seats.



Storm Cover



Sun Cover
70%+ UV Sun protection.
Reduces glare.



Travel Bag
Protection for the stroller
when travelling



Handlebar Extension Provides an extra 10cm of height. Tucks away when folded.



Hand Brake
Helps slow a moving stroller.
Handy when jogging.
(Terrain models only.)



Pump
For inflation of tyres
(up to 20psi/140kPa max).

		4										
Accessories  Model	Storm Cover	Sun Cover	Universal Carseat Clip	Evenflo Carseat Clip	Travel Bag	Handlebar Extension	Hand Brake	Sleeping Bag	Pump	KiddyBoard™	Bumper Bar	Carrycot
Urban Single	/	1	1	1	1			/	1	/	/	1
Urban Double	/	1			1			1	1	/		1
Urban Triple	/	1			/			/	/	<b>\</b>		<b>/</b>
Terrain Single	/	1	1	<b>/</b>	/	/	<b>/</b>	<b>\</b>	<b>/</b>	<b>\</b>		<b>/</b>
Terrain Double	/	1			1	1	1	1	1	1		1
Breeze	1	1			1			1		1		

<sup>\*\*</sup> Several Carseat Clips designed for specific model car seats are available to fit Single, Double and Triple model strollers. (These are not available in all countries, check with your authorised dealer or go to www.mountainbuggy.com).

# Warranty Conditions

This warranty covers: Defects in workmanship and materials for one year from date of purchase. The distributor undertakes to repair or at their option, replace any part, which is found to be defective within warranty period.

#### This warranty does not cover:

- · Pick up, delivery or service calls.
- Temporary replacement while stroller is being repaired or assessed.
- · Damage to tyres/tires, tubes and handlebar grips.
- Instruction or assistance with wheel assembly or setup of stroller.
- Corrosion or fabric damage, if stroller has been used or stored in extreme environmental conditions. e.g. high humidity, salt spray.
- Deterioration due to lack of maintenance and cleaning as specified in manufacturer's instructions.
- Normal wear and tear or damage to product caused by accident, misuse or act of nature.

- Repairs when product has been dismantled, repaired, modified or serviced by other than an authorized agent.
- Repairs when stroller has not been used for normal use and in accordance with manufacturer's instructions.

If the product fails within the warranty period: Return it to the Authorized Dealer where purchased from. They will arrange for assessment and appropriate action during normal business hours. If you are unsure where to take stroller contact distributor in your country for instructions.

Repairs and replacement parts: If stroller requires repair contact your authorised dealer or distributor, to obtain information and spare parts. If you are in a different country than where you purchased the product, please contact the distributor for the country where you purchased, as extra charges may apply.

Please make sure product is clean. Unacceptably dirty products will not be handled.



#### **International Distributors**

Send the Warranty Registration Card to the distributor for the country of purchase.

(If there is no distributor please send it to New Zealand.)

NEW ZEALAND & HEAD OFFICE Freepost 191-029 (within New Zealand) P. O. Box 38-781, Wellington Mail Centre, New Zealand Phr. (04) 568 1590 or 0800 428 449 Fax: (04) 569 6239 email: enquiries@mountainbuggy.com www.mountainbuggy.com

AUSTRALIA Mountain Buggy Australia 223A East Boundary Road East Bentleigh, Victoria 3165, Australia Ph: (03) 9570 2833 Fax: (03) 9570 1362 email: info@mountainbuggy.com.au www.mountainbuggy.com.au

U.K. & IRELAND

Mountain Buggy (UK) Ltd

Mill Farm, Fairmile, Ottery St Mary
Devon EX11 1LS, England
Ph: +++44 01 404 815 555 or 07000 4 BUGGY (07000 428 449)
Fax: ++44 01 404 815 444
email: info@mountainbuggy.co.uk

www.mountainbuggy.co.uk

EUROPE: One Tree Hill Postbus 4, 3130 AA Vlaardingen, The Netherlands Ph: ++31(0) 182 551895 Fax: ++31(0) 182 551457 email: info@onetreehill.nl www.onetreehill.nl JAPAN: Office U Corporation 2-22-8, Higashi Kawaguchi, Kawaguchi City, Saitama Prefecture, Japan 333-0801 Ph: (048) 294 7211 Mobi: (090) 3137 1234 Fax: (048) 297 7207 www.mountainbuggy.com

SINGAPORE & HONG KONG: Mountain Buggy Asia P.O. Box 603, 144 Upper Bukit Timah Rd #04-16-17, Beauty World Centre, Singapore 588177 Ph: (09) 416 8617 Fax: (09) 416 8617 Email: mtnbuggy@singnet.com.sg www.mountainbuggy.com

USA: Sycamore Kids Inc. 4562 Denrose Ct. Suite 2 Fort Collins, CO 80524 USA Toll Free Phone/Fax: 866 524 8805 email: support@mountainbuggyusa.com www.mountainbuggyusa.com

CANADA:
Mountain Buggy Canada Inc
4298 Capilano Road, North Vancouver, B.C. V7R 4J7, Canada
Toll Free Phone: 1866 MTNBUGGY (1866 686 28449)
email: info@mountainbuggy.ca
www.mountainbuggy.ca

SOUTH AFRICA: Sulfolk Trading CC PO. Box 46911, Glossderry 7702, South Africa Ph: ++27 11 485 3458 Fax: ++27 11 485 5273 emall: isack@lafrica.com www.mountainbuggy.com

Warranty Registration

Congratulations on purchasing a Mountain Buggy<sup>®</sup>. To register for your 12 month warranty, please return this registration form to your distributor (see previous page).

Please take a few moments to review the additional questions about your purchase. We would appreciate your replies so that we can continue to improve our product.

Phone:	Email:	
This information will remain	confidential to Mountain Buggy® only. not wish to receive future marketing m	
Model Number (und	er footplate):	
Serial Number (unde	er footplate):	
Date of Purchase: _		
Purchased From:		
Which accessories  ☐ Sleeping Bag ☐ KiddyBoard™	have you purchased for your Carseat Clip Storm Cover	Mountain Buggy®?  Handlebar Extension
Bumper Bar	Sun Cover	Hand Brake
Carrycot	Travel Bag	Pump
Magazine (Name	out about Mountain Buggy®?  Show/Event	(Name)
	rplain)nd when you hear the words	
Other (please ex	e you purchased your Mounta Farming lifestyle Hiking	Mountain Buggy®? in Buggy® for?
Other (please ex What comes to mi What activities hav Exercising Shopping Urban use	e you purchased your Mounta  Farming lifestyle  Hiking  Other (please explain)	Mountain Buggy®? in Buggy® for?
Other (please ex What comes to mi What activities hav Exercising Shopping Urban use The family member Mother	e you purchased your Mounta Farming lifestyle Hiking	Mountain Buggy®?  in Buggy® for?  g a Mountain Buggy®  Grandparents
What activities hav Exercising Shopping Urban use The family member Mother Other (please ex	e you purchased your Mounta Farming lifestyle Hiking Other (please explain) Father Both Parents xplain) e the following factors in your elmportant 3=Not Very Important lifer Safe Gene	Mountain Buggy®?  in Buggy® for?  g a Mountain Buggy®  Grandparents  purchase? t 4= Not Important Made
Other (please ex What comes to mi What activities hav Exercising Shopping Urban use The family member Mother Other (please ex How important wer 1=Very Important 2: Strength of Strolk Weight of Strolk Ease of Use Ease of Folding Accessories Ava	e you purchased your Mounta Farming lifestyle Hiking Other (please explain) Father Both Parents xplain) e the following factors in your elmportant 3=Not Very Important lifer Safe Gene	Mountain Buggy®?  in Buggy® for?  g a Mountain Buggy®  Grandparents  purchase?  It 4= Not Important //ade  ty eral Appearance utation of Brand/Product Road Capability

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com