


You can read the recommendations in the user guide, the technical guide or the installation guide for MR COFFEE JWX31. You'll find the answers to all your questions on the MR COFFEE JWX31 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.



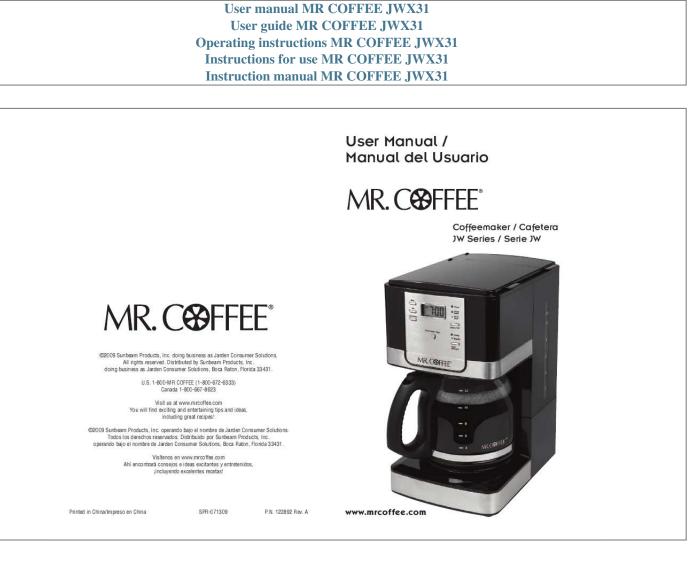

Manual abstract:

Pause 'n Serve Can't wait for the coffee to finish brewing? The Pause 'n Serve feature allows you up to 30 seconds to pour a cup of coffee while the coffeemaker is still brewing. Carefully remove the decanter and the Pause 'n Serve feature will be automatically activated, temporarily stopping the flow of coffee into the decanter. Non-Stick Warming Plate (not on thermal models) This feature allows you to keep your coffee hot after brewing. Brew Strength Selector Adjusts the brewing time to create a more full-flavored coffee. â Water Filtration System Great tasting coffee begins with great water! Improves the taste of your coffee by removing 97% of the chlorine from the water you use for brewing. Two-Hour Auto Shut-Off Keeps your coffee hot for two hours, then automatically shuts off. â Programmable Controls: Clock The clock serves as a handy kitchen clock and allows you to set the Delay Brew feature and functions as the FRESH BREWTM TIMER feature. Fresh BrewTM Timer feature Lets you know how long your coffee has been waiting for you. Delay Brew Would you like to wake up to a fresh pot of coffee? The timer allows you to preset when you would like the coffeemaker to automatically begin brewing your coffee, up to 24 hours in advance. Special Cleaning Cycle Enables you to easily maintain and clean mineral deposits from your coffeemaker.

NOTE: If you have selected any of the operating functions, the coffeemaker will act upon the last operation selected if the power is restored within 10 seconds after a power outage. Plug the power cord into a standard electrical outlet. NOTE: Pressing any button before setting the clock will cause the clock to start keeping time from 12:00 a. m. You must set the clock if you want to use the Delay Brew feature.

Make sure your first cup of coffee is as good as can be by cleaning your MR. COFFEE® Coffeemaker before its first use. Replace all the parts and close the lid. Then, run a brew cycle with water only, without adding coffee and coffee filter. 3.

When brewing is complete, turn your coffeemaker off, discard the water in the decanter and rinse the decanter, decanter lid, and filter basket. Your coffeemaker is now ready to use. While the display is in the clock mode, simply press the SET DELAY button (Figure 3) and, while the DELAY BREW yellow light is flashing, set the brew time by pressing the HOUR and MINUTE buttons (Figure 4). the AM or PM indicator is at the left of the clock display. Within a few seconds the display will change to the current time. The display will show the time you have programmed the coffee to brew. If you press the SET DELAY button again or wait a few seconds, the display will switch back. For best results, use a level tablespoon for ground coffee measurement. Make sure you use medium grind coffee for a perfect brew. Water Filtration System This carbon-based water filter improves the taste of your coffee by removing up to 97% of the chlorine from the water you may use to brew your coffee.

First, look for the MR. COFFEE® Filtration Friendly symbol on the bottom of your filter basket. If you do not see this symbol, please call 1-800-672-6333. To use the water filtration system in your MR. cOFFEE® Coffeemaker, please follow these steps: 1. Align the red indicator on the frame to the letter that corresponds with the month that you are using the disk for the first time. This serves to remind you to change the disk every month (approx. 30 brewing cycles). NOTE: For optimum results, use the water filtration system with a permanent filter. 2.

Rinse the water filter in fresh water before first use. When you are done brewing your coffee, rinse the water filter with fresh water. Do not put your water filter in the dishwasher. To replace the water filter disks, twist the gray disk cover from your water filtration system. remove the used disk.

Insert the new disk into the frame and twist the cover back into place. Of brewed coffee Use more or less coffee to suit your taste. For your convenience, you can lift out the removable filter basket. NOTE: If using paper filters, it is important that the sides of the filter fit flush against the side of the filter basket.



Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com