


OPERATING INSTRUCTIONS FOR

MR. COFFEE®

PRX30/33 SERIES COFFEEMAKERS

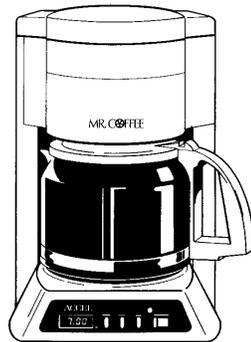

PRX30 (White)
PRX33 (Black)

For better tasting tea and coffee, use
8-12 cup Mr. Coffee® brand filters.



Mr. Coffee Replacement
Decanter Model PD12 (White)
PD13 (Black)



FOR HOUSEHOLD USE ONLY
FOR QUESTIONS OR SERVICE, CALL

1-800-MR COFFEE

1-800-672-6333 (U.S.A. & Canada) 1-216-464-4000 (Mexico)
Monday through Friday,
8:30 am to 5:00 pm Eastern Standard Time

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. **Read all instructions before using the machine.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or machine in water or other liquid.
4. Close adult supervision is necessary when this appliance is used by or near children.
5. Unplug from outlet when coffeemaker or clock are not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return this appliance only to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Mr. Coffee may cause hazards or injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Use on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.
14. **Decanter Use and Care**
Breakage may occur if the following instructions are not followed:
Use only decanters specifically designed for Mr. Coffee Pause 'N Serve models.
 - a. This decanter is designed for use with your Mr. Coffee coffeemaker and therefore must never be used on a rangetop or in any oven, including a microwave.
 - b. Do not set a hot decanter on a wet or cold surface.
 - c. Do not use a cracked decanter or a decanter with a loose or weakened handle.
 - d. Do not clean the decanter with cleansers, steel wool pads, or other abrasive materials.
 - e. Discard decanter immediately if it is ever boiled dry.
 - f. Avoid sharp blows, scratches, or rough handling.
15. **WARNING: To reduce the risk of fire or electric shock, do not remove any service covers. No user serviceable parts inside. Repair should be done by authorized personnel only. Opening the bottom service cover will void the warranty.**

SAVE THESE INSTRUCTIONS

SPECIAL CORD SET INSTRUCTIONS

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
 2. An extension cord may be purchased and used if care is exercised in its use.
 3. If an extension cord is used, the marked electrical rating of the extension cord must be at least 10 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.
- * **This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.**

If Service Is Required, Do Not Return to Your Store

For Service, call 1-800-MR COFFEE (1-800-672-6333)(U.S.A. & Canada)
1-216-464-4000 (Mexico)
8:30 am to 5:00 pm Eastern Standard Time, Monday through Friday

**To assist us in serving you, please have the model number
(PRX30, PRX33) and date of purchase available.**

All repairs must be made by Mr. Coffee or an *authorized* Mr. Coffee Service Center. Please call us for assistance or for the location of the nearest authorized Mr. Coffee Service Center.

Please do not return this appliance to your store.

We welcome your questions, comments or suggestions.

Please include your complete name, address and telephone number.

**Consumer Affairs Department
MR. COFFEE
24700 Miles Road
Bedford Heights, Ohio 44146-1399**

A Division of Health o meter, Inc.

Introduction

Congratulations! You are the owner of a Mr. Coffee® PRX30/33 Series 12 Cup Coffeemaker.


A decanter-activated Pause 'N Serve drip-stop valve allows you up to 30 seconds to sneak a cup while the coffee is still brewing.

The PRX30 and PRX33 models feature a Programmable Timer and four-hour Automatic Shut-Off.

Please read **all** of the instructions in this booklet carefully before you begin to use this appliance. Proper care and maintenance will ensure the long life of this appliance and its trouble-free operation. Save these instructions and refer to them often for cleaning and care tips.


Table of Contents	Page
Important Safeguards	2
Cord Set Instructions	3
If Service is Required.....	3
Introduction	4
Diagram of Parts	4
Setting the Clock and Timer.....	5
Brewing Coffee	6
Automatic Pause 'N Serve	7
Automatic Shut-Off.....	7
Cleaning Instructions	7
Decanter Cleaning	7
To Adjust Warming Plate Temperature.....	8
Limited Warranty.....	8

Diagram Of Parts

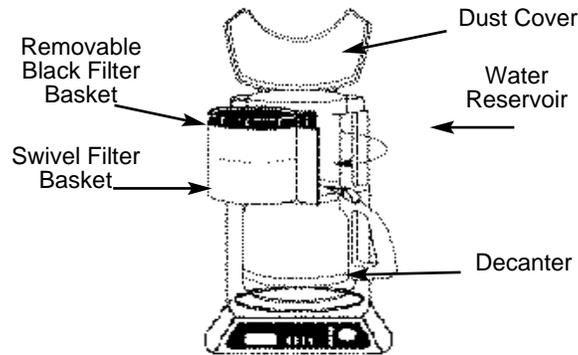

PRX30 (White)
PRX33 (Black)

Setting the Clock and Timer

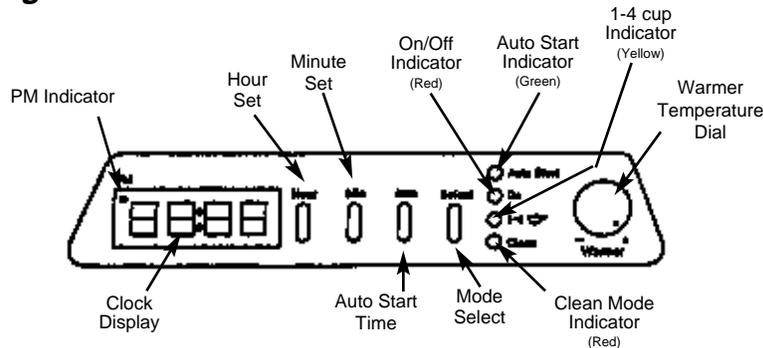

To Set the Clock

1. Press and hold the HOUR button until the correct hour is reached. The PM INDICATOR light in the upper left corner of the clock display will illuminate to indicate PM time.
2. Press and hold the MINUTE button until the correct time is shown.

Note: It is not necessary to set the clock in order to brew coffee. If the HOUR or MINUTE buttons are not pressed, the clock will display 12:00 and will not change. You must set the correct time in order for the clock to begin operation, or to brew at a pre-set time.

To Pre-Set the Brewing Time

1. Press and hold the AUTO button until the AUTO START light begins to flash.
2. Release the AUTO button. The AUTO START indicator light will continue to flash letting you know the AUTO START time is being set.
3. Press the HOUR button and then the MINUTE button until the desired time appears in the clock display. This is the time you want your coffeemaker to begin brewing automatically.
4. Press and release the AUTO button. The AUTO START indicator will go out. The clock display will return to the current time.

To Brew Automatically at the Pre-Set Time

1. Follow steps #1 through #5 in the "Brewing Coffee" section of these instructions.
2. Press the SELECT button until the AUTO START light is illuminated, then release. The AUTO START light will remain lit. The coffeemaker will automatically start brewing at the pre-set time.

To Check the Auto Start Time

Press and hold the AUTO button until the AUTO START light flashes. The pre-set time will appear in the clock display. After seven seconds the clock display will return to the current time.

To Brew Four Cups or Less (Small Batch Mode)

If you are only brewing four cups or less, press and hold the SELECT button until the AUTO START light and the 1-4 CUP lights are both illuminated. This mode extends the brewing cycle by approximately 30% to ensure optimal saturation of the coffee

IMPORTANT

Clean Your Mr. Coffee Coffeemaker Before Using the First Time!

Wash decanter, lid and removable filter basket in mild detergent and water. Rinse each thoroughly. Follow steps 4 through 6 below (with water only) to clean the inside of your coffeemaker.

Brewing Coffee

If the clock display is flashing, see page 5 to set the clock.

1. Open the swivel basket to your left. Insert a Mr. Coffee® brand paper filter into the black inner filter basket.
2. Add desired amount of coffee according to the coffee measurement chart found below. Shake lightly to level coffee.
3. Be sure the paper filter is properly centered before closing the filter basket.
4. Fill the decanter with tap water to desired capacity as marked on the side of the decanter. (1 cup equals 5 ounces.) To brew 2 cups of coffee, fill the decanter to the middle of the silver band. To brew 12 cups, fill the decanter to the bottom of the pouring spout.
For easy and accurate filling, cup markings can also be found inside the reservoir.
5. Pour the water into the water reservoir. Place the empty decanter onto the warmer plate.
6. Press and hold the SELECT button until the red ON indicator light illuminates. When the coffee stops flowing, the audible signal will beep five times to let you know that the brewing cycle is complete. The ON light will remain illuminated after the brew cycle is complete to indicate that the warming plate is still hot.
7. Carefully remove the black inner filter basket and discard the used grounds and filter. Rinse the filter basket and replace.
8. To make another pot of coffee, repeat steps 1 through 7.
9. Be sure to turn your coffeemaker OFF when the decanter is empty and you are no longer using your coffeemaker. Unplug the power cord when not using the coffeemaker or clock.

WARNING

TO AVOID RISK OF PERSONAL INJURY OR DAMAGE TO PROPERTY AS A RESULT OF OVERFLOW, BE SURE THAT THE DECANTER IS SQUARELY CENTERED UNDER THE BREW BASKET DURING BREWING CYCLE. BREWED COFFEE AND GROUNDS, BOTH IN BREW BASKET AND DECANTER, ARE VERY HOT. HANDLE WITH CARE TO AVOID SCALDING. IF BREW BASKET OVERFLOWS, OR IF BREW BASKET FAILS TO DRAIN INTO DECANTER DURING BREW CYCLE, DO NOT OPEN OR HANDLE BASKET. UNPLUG COFFEEMAKER, AND WAIT FOR CONTENTS TO COOL BEFORE HANDLING!

SUGGESTED COFFEE MEASUREMENT

For the best results, use drip grind recommended for automatic drip coffeemakers.

TO BREW

12 cups
10 cups
8 cups
6 cups
4 cups
2 cups

GROUND COFFEE:

11 tbs. or 5-1/2 scoops
9 tbs. or 4-1/2 scoops
7 tbs. or 3-1/2 scoops
6 tbs. or 3 scoops
5 tbs. or 2-1/2 scoops
3 tbs. or 1-1/2 scoops

* Use more or less coffee to suit your taste.
2 level tablespoons = 1 level scoop
1 cup = 5 oz. brewed coffee

Automatic Pause 'N Serve Drip Stop Valve

For your convenience, our Pause 'N Serve feature allows you up to **30 SECONDS** to sneak a cup while the coffee is still brewing. It also prevents any remaining coffee in the filter basket from dripping onto the warmer plate once the brew cycle is completed.

TO PREVENT INJURY FROM HOT OVERFLOW, REPLACE DECANTER WITHIN 30 SECONDS IF REMOVED DURING BREWING. IF THE DECANTER IS NOT REPLACED WITHIN 30 SECONDS, THE FILTER BASKET WILL FILL WITH WATER AND OVERFLOW.

Automatic Shut-Off

After four hours the coffeemaker will beep three times then automatically shut off.

To Adjust the Warming Plate Temperature

After the coffee is brewed you can keep it at just the right temperature. Use the **WARMER TEMPERATURE** knob to adjust the warming plate temperature. Do not allow the decanter to boil dry. This will damage the decanter.

CLEANING INSTRUCTIONS

Your PRX30/PRX33 coffeemaker will notify you when cleaning is required. After one minute into the brewing cycle the electronic controls will decide if the coffeemaker needs cleaning. If it does, the CLEAN mode light will begin to flash.

If the CLEAN mode light flashes, clean the coffeemaker before the next brew cycle. Failure to clean the coffeemaker when indicated could result in excessive steaming and increased brewing time.

SUGGESTED CLEANING INTERVAL

Type of Water	Cleaning Frequency
Soft Water	every 80 brew cycles
Hard Water	every 40 brew cycles

Your coffeemaker may be cleaned by using MR. COFFEE CLEANER or vinegar. For best results use MR. COFFEE CLEANER. It is superior to vinegar and has no unpleasant odor.

Using Mr. Coffee® Cleaner

(Read caution statement on side panel of Mr. Coffee Cleaner box before use)

1. Fill the decanter with 4-5 decenter cups of warm water.
2. Empty contents of one packet of MR. COFFEE CLEANER into the decanter and stir with a plastic or wooden spoon until the cleaner is completely dissolved. This will make a clear blue solution.
3. Pour the blue solution into the coffeemaker.
4. Place the empty decanter on the warming plate. The swivel basket with the black filter basket in place should be closed.
5. Press and hold the SELECT button until the CLEAN light is illuminated. You will notice that the clean cycle is a bit slower than the brewing cycle. This is done automatically to give the cleaning solution more time to clean.
6. At the end of the clean cycle, the audible signal will beep one time, the CLEAN light will go out and the coffeemaker will shut off automatically.
7. Discard the blue solution and thoroughly rinse the decanter, lid and filter basket.
8. **Repeat steps 1-7 with clean water (no blue solution). Using the regular "ON" mode, continue to rinse out the unit until you see no remaining traces of the blue solution.**
9. If a normal brewing flow is not achieved, repeat the cleaning steps 1-8.

Using Vinegar

1. Pour 1 quart of undiluted white household vinegar into your coffeemaker.
2. Place a filter into the black filter basket and close the swivel basket.
3. Place the empty decanter on the warming plate and press and hold the SELECT button until the CLEAN light illuminates. When three cups have flowed through, press the SELECT button to turn off the CLEAN light. Let stand for 1/2 hour.
4. After 1/2 hour, pour the vinegar back into the coffeemaker. Place the empty decanter on the warming plate.
5. Press and hold the SELECT button until the CLEAN light is illuminated. Let the clean mode run to completion.
6. Discard the vinegar and the paper filter.
7. **To flush out all traces of vinegar**, pour a decanter full of tap water into the coffeemaker, turn it ON (red "ON" light illuminated), and allow it all to cycle through.
8. Discard the water and turn coffeemaker OFF. Repeat steps 7-8.

Decanter Cleaning

Hard water can leave a whitish mineral deposit inside the decanter. Coffee and tea discolor these deposits, sometimes leaving a brownish stain inside the decanter. To remove these stains, follow these simple steps:

1. Use a solution of equal parts white vinegar and hot water.
2. Let solution stand in decanter for about 20 minutes and then discard.
3. Wash and rinse the decanter thoroughly using a soft cloth. Do not use harsh abrasive cleaners. These may cause scratches which can lead to breakage.

Decanter and lid are top-rack dishwasher safe.

Limited Warranty

Mr. Coffee warrants to the purchaser that the PR Series by Mr. Coffee® (except for cord set and glass parts) is free from manufacturer's defects in material and workmanship for a period of one year from the date of original purchase when used in compliance with directions as outlined in the manufacturer's instructions, which will constitute reasonable and necessary maintenance by the purchaser.

In case of manufacturer defects in material or workmanship, Mr. Coffee agrees to repair (remedy) a defective coffeemaker without charge. The purchaser's exclusive remedy against Mr. Coffee shall be for the repair or replacement of a defective Mr. Coffee product.

All repairs must be made at an *authorized* Mr. Coffee Service Center. To locate a Mr. Coffee Service Center, call 1-800-MR COFFEE (1-800-672-6333). *Mr. Coffee shall not be responsible for any repairs performed at any facility which is not an authorized Mr. Coffee Service Center.*

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. Any implied warranty is limited in duration to the one year provided in this, the only, expressed warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

In no event shall Mr. Coffee be responsible for incidental or consequential damages, nor damage due to misuse or the use of any unauthorized attachment; nor damage caused by use of an electrical circuit not specified on the Mr. Coffee product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Mr. Coffee
24700 Miles Road, Bedford Heights, Ohio 44146-1399

A Division of Health o meter, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>