

Electric Gage and Swichgage® Instruments



Sharper Accuracy
Higher Durability
Advanced Technology

Sharper Accuracy. Higher Durability. Advanced Technology.



The EG21 Series Electric Gage and the EGS21 Series Swichgage instrument take the electric gage to new heights with proven state of the art technology and reliability.

- ▼ EG Air Core movement design
- ▼ Technological improvements in lighting, accuracy in reading and wiring installation
- ▼ Assurance of highest reliability and service
- ▼ Environmentally sealed design

- ▼ Exceeds the rigid SAE J1810 standard
- ▼ Corrosion-resistant materials.
- Desirable for marine and other environmentally sensitive applications

2-1/16 in. (52 mm)


SWICHGAGE® Contact

▼ Soft, non-glare dial and pointer illumination by "cold light" LED.

Electric Swichgage instrument

The EGS21 Series Swichgage instrument has all of the features of the EG21 Series Gage plus an adjustable set point PowerHall® Effect switch output for operating alarms or equipment shutdown. The trip point is adjustable over 90% of the scale and has a set point indicator visible from the gage face. Now you can have both, the ease of electric gage installation and the reliable switching of Murphy's famous Swichgage instrument.

Dimensions

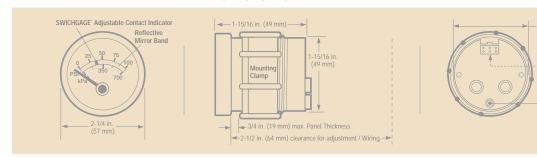

Specifications

Power Input, all models and sender: 12 VDC or 24 VDC.

Case: Polyester (PBT), impact and weather resistant with screw-on mounting clamp.

Bezel: Polished 316 stainless steel standard; available in black. SAE style optional.

Lens: Clear Polycarbonate and UV stabilized.

Air Core Movement: Silicon dampened pointer.

Dial: Black with white markings; back-lite (marking becomes red when illuminated); dual scale with mirror band to reduce parallax reading errors.

Swichgage instrument Sensor: PowerHall® Effect; outputs ground signal (sinking output) rated: 300 mA continuous (EGS21 models). Pressure, Fuel, Volts set on decreasing scale. Temperature and Amps set on increasing scale. Output saturation voltage (voltage drop across switch): 1.3-2.3 Volts @ 25°C (may require some conditioning to work with logic inputs)

Swichgage instrument Set Point Indicator: Visible on mirror band (scale); adjustable from the back of the unit (1/16 in. hex type wrench).

Wiring: Plug connector with wire leads, 18 AWG (1.0 mm²), 8 in. (203 mm) long.

Operating Temperature: -40 to 185°F (-40 to +85°C).

Storage Temperature: -77 to 185°F (-60 to 85°C).

 
Over Voltage (Gage Movement): Withstands 200% of nominal system voltage for 5 min. Meets SAE J1810.

Reversed Polarity (Gage Movement): Withstands reversed battery terminal polarity indefinitely within operating temperatures.

Environment and Test: Meets SAE J1810 standards.









TEMPERATURE	250°F	(121°C)	
	300°F	(149°C)	



FUEL LEVEL	Empty $- \frac{1}{4} - \frac{1}{2} - \frac{3}{4} - \text{Full}$



AMMETER 60 - 0 - 60 amps (internal shunt)*



 
VOLTMETER 12 VDC: 8 — 18 Volts 24 VDC: 16 — 36 Volts


IMI red

IMPORTANT: EG21 Series gage and EGS21 Series Swichgage Movement and Illumination require 12 VDC to function. For 24 volts systems, voltage converters are built into the electrical wire / connector assembly and supplied with the instrument, Specify voltage when ordering.

Electric Gage Senders





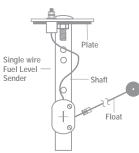

PRESSURE

- ▼ ESP: 1-wire-to-ground sender[†]
- ▼ ES2P: 2-wire ungrounded sender[†]
- ▼ ESDP: 2-wire ungrounded sender, it drives 2 gages[†]

TEMPERATURE

- ▼ EST: 1-wire-to-ground sender
- ▼ ES2T: 2-wire ungrounded sender
- ▼ ESDT: 2-wire ungrounded sender, it drives 2 gages.

FUEL LEVEL


- ▼ ESF: 1-wire-to-ground sender
- ▼ ES2F: 2-wire ungrounded sender
- ▼ ESDF: 2-wire ungrounded sender, it drives 2 gages.

[†]Thru 100 psi (689 kPa) [6.89 bar].

How to Order EG Series Gage and Swichgage Instruments

\j\

IMPORTANT: EG21 Series gage and EGS21 Series Swichgage Movement and Illumination require 12 VDC to function. For 24 volts systems, voltage converters are built into the electrical wire / connector assembly and supplied with the instrument. Specify voltage when ordering. No designator is required for standard configurations.

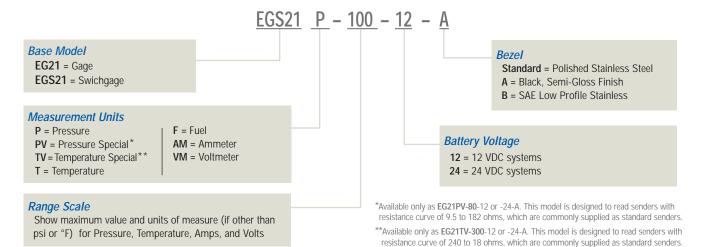

How to Order EG Senders

ES <u>2</u> <u>T</u> – <u>250/300</u> – <u>1/4</u>

Thread Sizes

(for temperature senders)

 $X = 5/8-18 \text{ UNF}^{4}$

1/8 = 1/8-27 NPT⁵⁾

1/4 = 1/4-18 NPT

3/8 = 3/8-18 NPT

3/8B = 3/8-19 BSPT

1/2 = 1/2-14 NPT⁵⁾

1/2B = 1/2-14 BSPT

5/8 = 5/8-18 UNF

3/4 = 3/4-14 NPT

7/8 = 7/8-9 UNC M14 = 14 mm x 1.5 M16 = 16 mm x 1.5 M18 = 18 mm x 1.5

M20 = 20 mm x 1.5

M22 = 22 mm x 1.5

M24 = 24 mm x 1.5

NOTE: Boot is optional on ES2T

and ESDT temperature senders.

Fuel level senders are for fuel tanks only.

Tank depths 6-24 in. (152-610 mm).

Specify p/n 00-00-3624.

Sender Type

Blank = 1-wire

2 = 2-wire

D = 2-wire, dual

Process to be Measured

P = Pressure¹⁾

PM = Pressure 2) & 3)

T = Temperature

F = Fuel

Range/Scale

Show maximum value and units of measure (if other than psi or °F) for Pressure, Temperature, Amps, Volts.

- ¹⁾ Thru 100 psi (689 kPa) [6.89 bar].
- ²⁾ Ranges above 100 psi (689 kPa) [6.89 bar].
- 3) Mounting off-equipment recommended.
- 4) Straight threads, for use with adapter nut.
- 5) Separate adapter nut not required.

How to Order Accessories and Replacement Parts

Off-Equipment Mounting Kit

This kit allows off-equipment mounting of the ESPM, ES2PM and ESDPM pressure senders. Recommended for protection from damaging vibration. Customer supplies hose and fittings. Specify part number 30-00-0213 when ordering.

Wire/Connector Assembly

Listed below are replacement part numbers for all wire/connector assemblies. Voltage converter included for 24 and 32 volt. Specify part number when ordering.

	12 VDC	24 VDC	
EG21P/T/F	05004506	05006166 (05004546)	
EGS21P/T/F	05004507	05006168 (05004548)	
EG21AM	05004505	05006170 (05004550)	
EGS21AM	05004504	05006172 (05004552)	
EG21VM	05004508	05004508	
EGS21VM	05004504	05004504	

LOW VOLUME CONFIGURATIONS NOTE:

Low volume configurations may require minimum purchase quantities.



CAUTION: Certain danger to human safety and to equipment may occur if some equipment is stopped without pre-warning. It is recommended that monitored functions be limited to alarm-only or alarm before shutdown.

FW MURPHY

P.O. Box 470248

Tulsa, Oklahoma 74147 USA +1.918.317.4100 Fax: +1.918.317.4266 E-mail: sales@fwmurphy.com

INDUSTRIAL PANEL DIVISION

Fax: 918.317.4124

E-mail: ipdsales@fwmurphy.com

MURPHY POWER IGNITION

Web site: www.murphy-pi.com

www.fwmurphy.com

CONTROL SYSTEMS & SERVICES DIVISION

P.O. Box 1819

Rosenberg, Texas 77471 USA

Phone: 281.633.4500 Fax: 281.633.4588

E-mail: sales@fwmurphy.com Web site: www.fwmurphy.com

FRANK W. MURPHY, LTD

Church Rd Laverstock Salisbury SP1 1QZ UK

Phone: +44 1722 410055 Fax: +44 1722 410088

E-mail: sales@fwmurphy.co.uk Web site: www.fwmurphy.co.uk

COMPUTRONIC CONTROLS, LTD

41 - 43 Railway Terrace Nechells

Birmingham B7 5NG UK

Phone: +44 121 327 8500 Fax: +44 121 327 8501

E-mail: info@computroniccontrols.com
Web site: www.computroniccontrols.com



FW MURPHY INSTRUMENTS (HANGZHOU) CO. LTD 77 23rd Street

Hangzhou Economic & Technological Development Area Hangzhou, Zhejiang, 310018, China

Phone: +86 571 8684 8886 Fax: +86 571 8684 8878

Printed in U.S.A.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com