Installation Instructions for Transmission/Gear Pressure SWICHGAGE®

TP-8318N Revised 05-99 Section 05 (00-02-0164)

Please read the following information before installing. A visual inspection of this product for damage during shipping is recommended before mounting.



- ✓ Make sure the machine cannot operate during installation.
- ✓ Follow all safety warnings of the machine manufacturer.
- Read and follow all installation instructions.



CAUTION: Certain dangers to human safety and to equipment may occur if some equipment is stopped without pre-warning. It is recommended that monitored functions be limited to alarm-only or to alarm before shutdown.

Base Model Description

20P, 25P, A20P and A25P SWICHGAGE®


The gage pointer makes with an adjustable contact to complete a pilot-duty circuit.

20PE, 25PE, A20PE and A25PE SWICHGAGE®

Features internal snap-acting SPDT switches, instead of the single pole/pointer contacts. When the switch closes on falling pressure, it becomes <u>Set</u>, as pressure rises the switch <u>Resets</u>.

20PABS, 25PABS, A20PABS and A25PABS SWICHGAGE®

Same as 20P, 25P, A20P and A25P with internal SPDT snap-switch for pre-alarm.

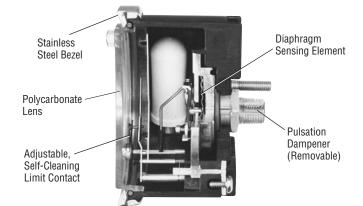

Specifications

Case Material: 20P and 25P Series: *Plated steel*. A20P and A25P Series: *Polycarbonate*.

Pressure Connection: 1/8-27 NPT.

Contact Rating: Standard is 2A @ 30 VAC/DC resistive (pilot-duty only). Models 20PE, A20PE, 25PE and A25PE have non-adjustable snap-switch rated 3A @ 30 VDC inductive, 4A @ 125 VAC inductive.

Warranty


A limited warranty on materials and workmanship is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to <u>www.fwmurphy.com/support/warranty.htm</u>

IMPORTANT Installation Recommendations

SWICHGAGE® Used On Transmission/Clutch Oil Pressure

 Install the SWICHGAGE[®] using a Murphy pulsation snubber PD2160 in the pressure connection at the transmission or gear and at the SWICH-GAGE[®]. The snubber helps reduce pressure spikes/surges which will damage the gage sensing element. It also stabilizes the gage readout through all operating cycles. Failure to isolate gage in this manner will void Murphy warranty and possibly cause equipment damage.

2. Models with pre-alarm have two switch points and when used with Murphy SS300 speed switch–allows changing between high and low switch points according to engine RPM. This configuration does away with nuisance alarms when shifting or when at idle–yet maintains maximum pressure protection. See Murphy Application Tip AT-01 for further details.

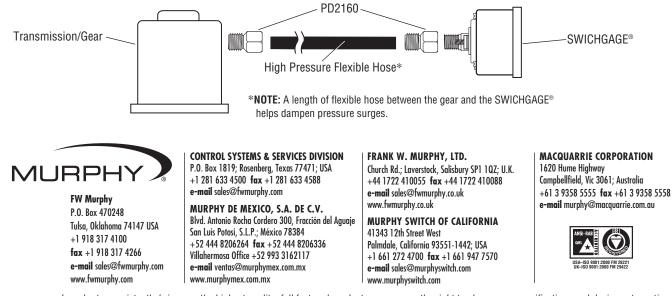

In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. Printed in U.S.A. 113286N

Installation TP-8318N page 1 of 1 Download from Www.Somanuals.com. All Manuals Search And Download. Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com