


## V-PSU<sub>II</sub> Power Supply Unit Instructions

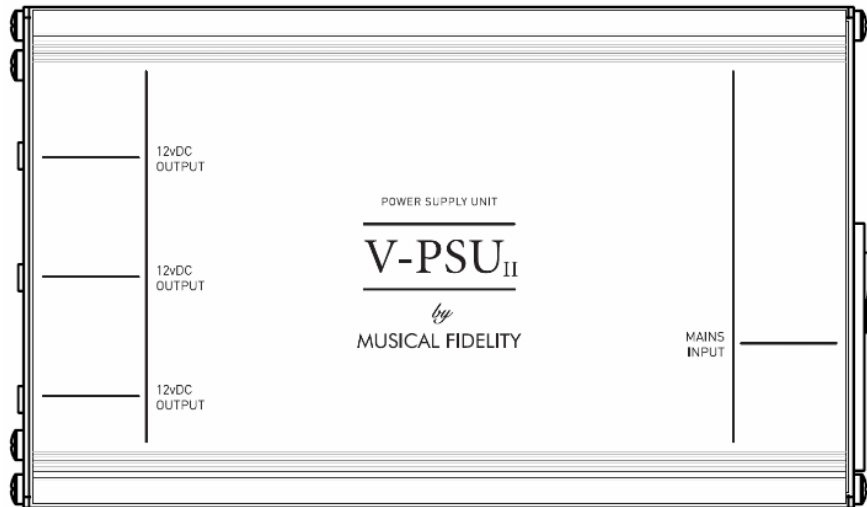

### Connections

All connections must be made before the mains adaptor is plugged in, and before any amplifier connected is switched on. Always switch off the V-PSU<sub>II</sub> (and connected amplifiers etc) before connecting/disconnecting power, or changing leads.

### Power Inputs

Using figure-8 moulded mains lead (supplied), connect the V-PSU<sub>II</sub> to a mains socket.

### Power Outputs

Using 1.3mm DC plug to plug lead(s) (supplied), connect the V-PSU<sub>II</sub> 12VDC **OUTPUTS** to the V-series units as required.

### Use

Connect up the V-series components audio inputs and outputs as required.

Switch on the V-PSU<sub>II</sub> using the rocker switch next to the mains input socket.

The three individual output LEDs should light indicating presence of power at the respective output.

Switch on attached components (amplifiers etc).

Turn the volume on amplifier to normal listening levels, sit back and enjoy the music.

These products have been designed so that it may be left on indefinitely, but please note that the V-PSU<sub>II</sub> may become warm to the touch - this is normal.

Note: The V-PSU<sub>II</sub> can also be used to power older V-series components.

### Introduction

Thank you for purchasing the V-PSU<sub>II</sub> power supply unit. We sincerely hope that it will bring you many years of outstanding listening pleasure.

### Installation Precautions

Your new V-PSU<sub>II</sub> is designed and built to provide trouble-free performance, but as with all electronic devices, it is necessary to observe a few precautions:

Do not use the V-PSU<sub>II</sub> near water. The unit must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, must be placed on the unit.

Keep the V-PSU<sub>II</sub> away from heat such as radiators. No naked flame sources, such as lighted candles, should be placed on the unit.

This product has been tested to ensure that its operation is not adversely affected by normal background levels of Radio Frequency Interference (R.F.I.), and that it does not itself generate excessive amounts of interference. However, if a problem persists, please contact your Musical Fidelity agent.

Never open the case of the V-PSU<sub>II</sub> yourself, as this will invalidate the guarantee. Place all connecting cables where they are not likely to be walked on or trapped by items placed on them.


The V-PSU<sub>II</sub> will operate in accordance with its specifications within the following environmental range:

Temperature 5 to 45 degrees Celsius

Humidity 10 to 90% non condensing

There are no user adjustments inside. Please refer all service work to an authorised Musical Fidelity agent.

### Front and back connections

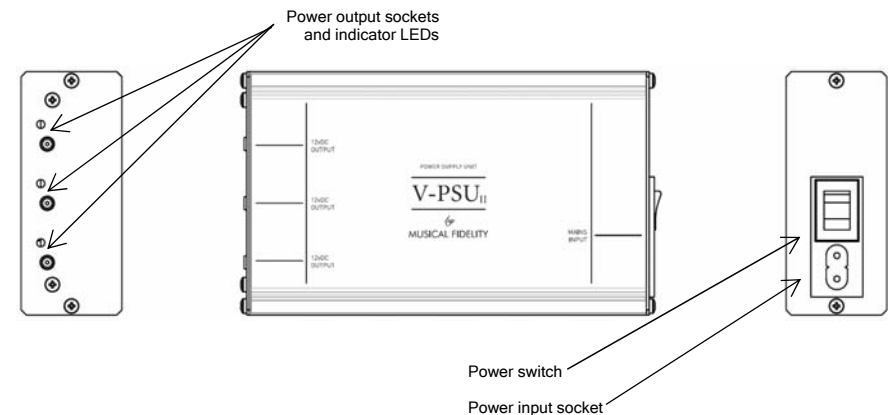

Basic problem-solving with an amplifier is similar to troubleshooting other electrical or electronic equipment. Always check the most obvious possible causes first, such as the following examples:

Problem	Probable Cause	Remedy
No power	Power supply not switched on.  Power plug is not fully inserted into rear socket	Check power supply is plugged in and switched on  Plug in securely
V-series component not working	Power lead not properly attached	Check power output lead connections
Corresponding LED extinguishes when plugging in a V-series unit	Short circuit in lead or power connectors  V series unit drawing too much current	Check power output lead connections  V-series unit may need servicing
Hum or buzz from unit	As the unit contains a transformer, small amount of hum or buzz is normal. Mains disturbances and DC offset caused by e.g. TVs, fridges or computers may cause this to vary from location to location and/or over the course of time.	Try a different mains spur; but this may not always affect a cure.  The <b>source</b> of the interference should be investigated

If none of these actions affect a cure, please contact the dealer, or an authorised Musical Fidelity service agent. Remember; never open the case of the V-PSU<sub>II</sub>, as this will invalidate the guarantee.

Specifications:

Output Power requirement	12V 90-253V AC (worldwide universal)	500mA	3 off individual outputs
Connections	Power input Power output	Figure-8 mains socket 1.3mm DC power socket	
Dimensions	Length Width Height	165mm 95mm 40mm	6½" 3¾" 1½" including "feet"
Weight	Unit alone Unit packed in carton	785g 1Kg	1¼lbs 2.2lbs
Accessories (supplied)	Mains lead Power leads Leaflet	Figure-8 moulded lead 1.3mm DC plug to 1.3mm DC plug V-PSU <sub>II</sub> Instructions	1 off 3 off 1 off

Musical Fidelity reserves the right to make improvements which may result in specification or feature changes without notice. E&OE.



### Item disposal information for Europe



<p><b>DISPOSAL</b> The crossed out wheeled bin label that appears on the back panel of the product indicates that the product must not be disposed of as normal household waste. To prevent possible harm to the environment please separate the product from other waste to ensure that it can be recycled in an environmentally safe manner. Please contact your local government office or your retailer for available collection facilities.</p>	<p><b>AFVAL</b> Het label op de achterzijde van dit apparaat, een afvalbak op wielen met een kruis doorgeschild, geeft aan dat dit apparaat niet samen met gewoon huishoudafval mag worden weggegooid. Om mogelijke schade aan onze leefomgeving te voorkomen dient dit apparaat, gescheiden van gewoon huishoudelijk afval, te worden afgevoerd zodat het op een milieuvriendelijke manier kan worden gerecycled. Neem voor beschikbare inzamelplaatsen contact op met uw gemeentelijke reinigingsdienst of met uw elektronica leverancier.</p>
<p><b>DISPOSITION</b> La poubelle sur roulettes barrées X, qui apparaît en logo sur le panneau arrière du produit, indique que celui-ci ne doit pas être traité comme un déchet domestique commun. Afin de protéger l'environnement, ce produit électronique devra être géré séparément et donc recyclé selon les nouvelles normes Européennes RoHS concernant les déchets d'appareils électroniques. Prière de contacter les services concernés gouvernementaux ou votre point de vente pour l'élimination et l'enlèvement de déchets électroniques équipés de composants électroniques.</p>	<p><b>HÄVITÄMINEN</b> Yrüksattua jättesitua kuvaava tarra tuotteen takalevyssä kertoo, että tuotetta ei saa käsitellä normaalina talousjätteenä. Ympäristön suojelemiseksi on tuote pidettävä erillään muusta jätteestä ja se on kierrätettävä ekologisesti kestävässä tavalla. Ota yhteyttä laitteen myyjään tai Pirkanmaan Ympäristökeskukseen lähimmän kierrätyskeskuksen löytämiseksi.</p>
<p><b>DISPOSAL</b> La etiqueta cruzada hacia fuera del compartimento que aparece en el panel trasero del producto indica que el producto no se debe reciclar como basura normal de la casa. Para prevenir daños posible al ambiente separe por favor el producto de otras basura para asegurarse de que puede ser reciclada de una manera ambientalmente segura. Entre en contacto por favor a su oficina gubernamental local o a su minorista para las instalaciones disponibles de la colección.</p>	<p><b>AFSKAFNING</b> Logoet med en skraldespand med kryds over på bagsiden af apparatet indikerer at dette produkt ikke må kasseres som normal husholdningsaffald. For at forebygge mulig skade på miljøet, bedes De separere dette produkt fra andet affald, og sikre at det bliver genbrugt på en miljørigtig måde. Kontakt venligst de lokale myndigheder eller din forhandler for oplysning om nærmeste tilgængelige opsamlingssted for elektronikaflald.</p>
<p><b>RIFIUTI</b> L'etichetta del cassonetto barrato riportato sul retro dell'apparecchio indica che il prodotto non deve essere smaltito tramite la procedura normale di smaltimento dei rifiuti domestici. Per evitare eventuali danni all'ambiente, separare questo prodotto da altri rifiuti domestici in modo che possa venire riciclato in base alle procedure di rispetto ambientale. Per maggiori dettagli sulle aree di raccolta disponibili, contattate l'ufficio governativo locale od il rivenditore del prodotto.</p>	<p><b>ΔΙΑΔΙΚΑΣΙΑ ΑΠΟΡΡΙΨΗΣ</b> ΤΟ ΣΗΜΑ ΜΕ ΤΟΝ ΔΙΑΓΕΓΡΑΜΜΕΝΟ ΤΡΟΧΗΛΑΤΟ ΚΑΔΟ ΑΠΟΡΡΙΨΑΝΤΟ ΣΤΗΝ ΠΙΣΩΤΗ ΟΨΗ ΤΟΥ ΜΗΧΑΝΗΜΑΤΟΣ ΔΗΛΩΝΕΙ ΟΤΙ ΤΟ ΠΡΟΪΟΝ ΑΥΤΟ ΔΕΝ ΠΡΕΠΕΙ ΝΑ ΔΙΑΧΕΙΡΙΣΘΕΙ ΣΑΝ ΣΥΝΗΘΙΣΜΕΝΟ ΟΙΚΙΑΚΟ ΑΠΟΒΛΗΤΟ. ΠΡΟΣ ΑΠΟΦΥΓΗ ΕΝΔΕΧΟΜΕΝΗΣ ΕΠΙΒΑΡΥΝΣΗΣ ΤΟΥ ΠΕΡΙΒΑΛΛΟΝΤΟΣ, ΞΕΧΟΡΙΣΤΕ ΤΟ ΠΡΟΪΟΝ ΑΠΟ ΤΑ ΆΛΛΑ ΑΠΟΡΡΙΨΙΜΑ ΩΣΤΕ ΝΑ ΕΞΑΦΑΝΙΣΘΕΙ Η ΑΝΑΚΥΚΛΩΣΗ ΤΟΥ ΜΕ ΤΟΝ ΠΡΕΠΟΝΤΑ ΤΡΟΠΟ. ΠΑΡΑΚΑΛΟΥΜΕ ΝΑ ΕΠΙΚΟΙΝΩΣΗΤΕ ΜΕ ΤΗΝ ΤΟΠΙΚΗ ΥΠΗΡΕΣΙΑ ΑΝΑΚΥΚΛΩΣΗΣ Η ΜΕ ΤΟ ΚΑΤΑΣΤΗΜΑ ΑΓΟΡΑΣ ΓΙΑ ΠΕΡΙΣΣΟΤΕΡΕΣ ΛΕΠΤΟΜΕΡΕΙΕΣ.</p>
<p><b>FACHGERECHTE ENTSORGUNG</b> Das auf der Geräterückseite angebrachte Label deutet darauf hin, dass das Produkt nicht mit konventionellem Hauskehricht entsorgt werden darf. Um Schäden und Verschmutzungen an Umwelt und Mensch zu vermeiden, muss das Produkt fachgerecht entsorgt und von anderem Abfall getrennt werden. Wenden Sie sich bei Fragen hierzu an Ihren Fachhändler oder an eine öffentliche Informationsstelle.</p>	

# MUSICAL FIDELITY

Units 24-26  
Fulton Road  
Wembley  
HA9 0TF  
England  
(+44) 208 8900 2866  
<http://www.musicalfidelity.com/>

Manual issue 02

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>