


DSX-80 Demo Kit Quick Start Guide



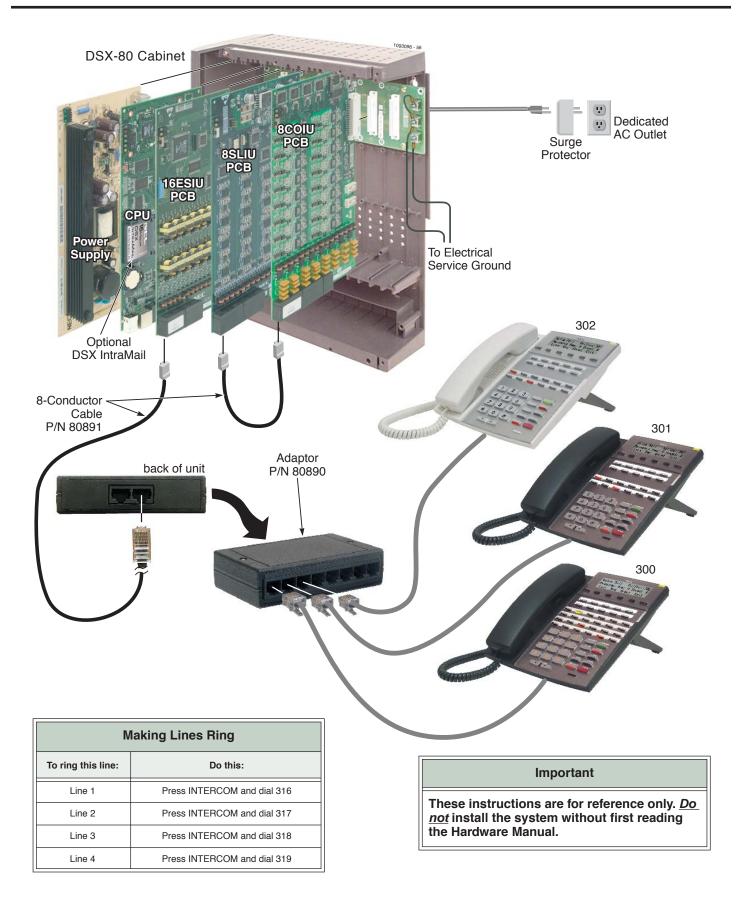

Basic Installation Layout

Default Features

Default Features for Lines		
1.	All lines are loop start DTMF. • Use 3101-01: Line Type to change this assignment.	
2.	 Lines 1-12 ring on line keys 1-12 for extensions 300-315. (Lines 13-64 do not appear on line keys.) All other extensions are lamp only for lines 1-12. 	
3.	To customize line ringing, use one of the following: • User Programmable Features code #RAL. (See the <i>User Programmable Features</i> feature for more.) • Use 2132-[01-64]: Line Ringing.	

Default Features for Extensions		
1.	The circuit types for keyset extensions are automatically set when the extension is plugged in.	
2.	 Keyset users can place outside calls by: Pressing a line key and dialing the outside number. (See the <i>Central Office Calls, Placing</i> feature for more.) Pressing INTERCOM, dialing 9, then dialing the outside number. (See the <i>Line Group Routing</i> feature for more.) Line Dial-Up and Direct Line Access are disabled. (See the <i>Central Office Calls, Placing</i> feature for more.) 	
3.	All extensions have full incoming and outgoing access to all outside lines. • See <i>Initial Startup Programming</i> below to change this assignment.	
4.	By default, Feature Keys 1-12 are line keys. Keys 13-24 are undefined. See the <i>Feature Keys</i> feature for more.	

Default Features for IntraMail	
1.	Each extension has an IntraMail voice mailbox.
2.	All mailboxes are enabled. To disable a mailbox, see 2141-01: Station Mailbox Type.
3.	The IntraMail Automated Attendant does not answer outside calls. (See the <i>Automated Attendant</i> feature for more.)

Initial Startup Programming

- 1. Enter the programming mode.
 - 1. From any display telephone, press INTERCOM + Dial #*#* + Enter the system password + HOLD.
 - **2.** The system passwords are:
 - **632379 (NECDSX)** for Installer (level 3), **9999** for System Administrator 2 (level 2), **0000** for System Administrator 1 (level 1).
- 2. Assign the correct circuit type to each of your installed lines.
 - **1.** In 3101-01: Line Type, assign the line circuit type (e.g., enter **1** or press Feature Key 2 for loop start).
 - **2.** In 3103-03: DTMF Dialing, normally enter **1** (or press Feature Key 2) for DTMF dialing.
- 3. By default, each extension has full incoming and outgoing access to each line. To change this assignment:
 - 1. In 2131-[01-64]: Line Access, change each extension's line access as required. The options are:
 - 0 for no access, 1 for incoming access only, 2 for outgoing access only, 3 for full access
 - **2.** Using 902x-Copy may save you time.
- 4. By default, extensions 300-315 ring immediately day and night for lines 1-12. To change this assignment:
 - 1. In 2132-[01-64]: Line Ringing, set the ringing option for each extension, The options are:
 - **0** for lamp only (no ringing) day and night, **1** for day and night ringing, **2** for night ringing only, **3** for delay ringing day and night
 - **2.** Using 902x-Copy may save you time.
- 5. To change the default system passwords:
 - **1.** Turn to the *System Programming Password Protection* feature for more about system passwords.

(1093068)

Empowered by Innovation

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com