

User's Manual

NEC

32" TFT LCD TV
NLT-32W

32inch



Warnings



WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING :

To reduce the risk of electric shock do not remove cover (or back).
No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING :

To prevent fire or shock hazard, do not expose the set to rain or moisture. Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.
The appliance is not intended for use by young children or infirm persons without supervision.
Young children should be supervised to ensure that they do not play with the appliance.

CAUTION:

Do not attempt to modify this product in any way without written authorization.
Unauthorized modification could void factory warranty.

POWER

The main plug should be inserted fully into the power outlet to avoid a fire hazard. Hold the plug firmly when unplugging. If you pull the cord, the cord may be damaged. Prevent dust collecting on the power plug pins or outlet. And do not use too many plugs on the Mains multi-outlet. It may result in overheating of the outlet and causes a fire hazard.

Never touch the power plug with a wet hand. This may cause an electric shock hazard. Unplug the set from the wall outlet when it is left unattended and unused for long periods of time. Accumulated dust may cause a fire or an electric shock from deterioration or electric leakage.

Warnings

Service

Never remove the back cover of the TV, this can expose you to high voltage and other hazards. If the TV does not operate properly, unplug it and call your nearest NEC Service Centre.

Connect the antenna cable to the connection marked Ant. (on the rear). For best reception, use an outdoor antenna.

Location

Position your TV so that no bright light or sunlight will shine directly on the screen. Do not expose the TV to vibration, moisture, dust or heat. Also ensure that the TV is placed in a position that allows a free flow of air. Do not cover the ventilation openings on the back cover. You can install the TV on a wall or place it on a table-top or similar flat surface. Mounted the TV securely to eliminate the risk of injury from the TV falling.

Cleaning

Unplug the TV before cleaning the face of the LCD Screen. Dust the TV by wiping the screen and cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid or aerosol cleaners.

Image Persistence

Avoid displaying fixed pattern in the monitor for long period of time to avoid image persistence.

Contents

 
Before operating the set, please read this manual carefully.

Warnings	2~3
Contents	4
Supplied Accessories	5
Controls	6~8
Controller of panel	6
Remote controller	7~8
Basic Operation	9
Turning the TV On and Off	9
Programme selection	9
Volume adjustment	9
Q.View	9
Sound mute function	9
On screen Language selection	9
On Screen Menus and Displays	10
Setting up TV Programme	11~13
Auto Programme	11
Manual Programme	12
Programme Edit	13
Picture Control	14
Manual picture control	14
Auto picture control	14
Sound Control	15~16
Other functions	17~18
Clock	17
Blue Back	17
Sleep timer	17
Auto Sleep	18
Childlock	18
Radio	18
ARC	18
Radio Control	19
Other functions	20
Teletext	21~22
Text On/Off	21
TOP text	21
FLOF text	21
Special Teletext function	22
External Equipment Connection	23~24
Antenna connection	23
COMPONENT Input	23
DTV Input	23
A/V Input	24
A/V Output	24
S-VIDEO Input	24
Headphone jack	24
Connecting the PC as a monitor	25~28
Product specification	29
Troubleshooting	30
NEC Service Centres	31


Supplied Accessories

■ Make Sure the following accessories are provided with Product.


1. AC Cord



 
2. Remote controller



 3. Batteries (type AAA)



 4. Owner's manual

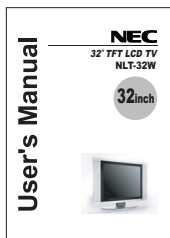

5. PC IN cable



6. PC Audio IN cable



Controls

1. ON/OFF Switches TV set on or off.

2. MENU

Displays a menu.

3. + PR - (Programme Up/Down)

Selects a programme or a menu item.

4. + VOL - (Volume Up/Down)

Adjusts the volume./ Adjusts menu settings.

5. TV/AV Selects TV, COMPONENT, VIDEO, S-VIDEO, RADIO(Only when the set is Radio On.), PC Analog, PC Digital or DTV mode./ Clears the menu from the screen.

 
6. Power Indicator

Illuminates in red when the TV is in standby mode./ Illuminates in green when the TV is switched on. Illuminates in amber when the power save mode in PC mode.

(It's possible when the connected computer has a built in power management system called PowerSaver. This system saves energy by switching the set into a low-power mode when it has not been used for a certain amount of time.)

7. Remote control sensor

Accepts the IR signal of remote controller.

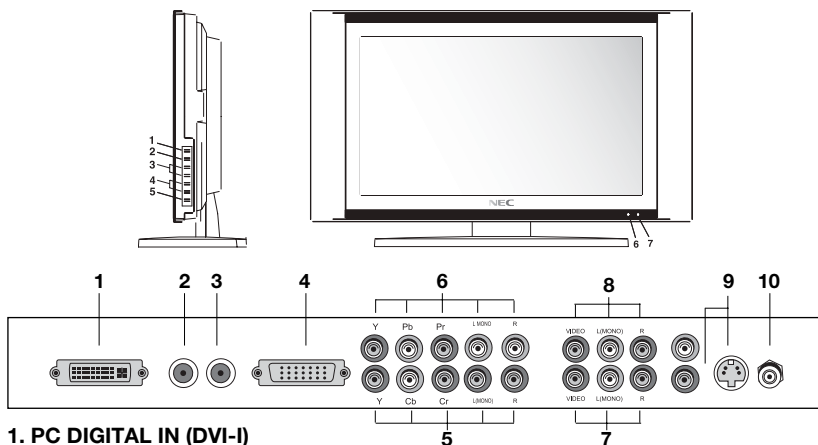

1. PC DIGITAL IN (DVI-I)

2. H/P (Headphone out)

Connect a headphone to this socket.

3. PC AUDIO IN

Connect the audio cable from the PC to the **PC AUDIO IN** of the set.

4. PC ANALOG IN (D-SUB)

5. COMPONENT IN

6. DTV IN

7. AV-IN

8. AV-OUT

9. S-VIDEO IN

Connect the output of the S -VIDEO on the VCR to the S-VIDEO input.

Connect the audio outputs of the S-VIDEO on the VCR to the Audio IN (L(MONO), R).

10. Ant. (Antenna input)

Controls

All the functions can be controlled with the remote controller. Some functions can also be adjusted with the buttons on the side panel of the set.

Remote controller

Before you use the remote controller, please install the batteries.

1. POWER

Turns the TV on from standby or off to standby mode.

2. MUTE

Turns the sound on and off.

3. NUMBER buttons

Selects programme numbers.

4. TV/AV

Selects TV, COMPONENT, VIDEO, S-VIDEO, RADIO(Only when the set is Radio On.), PC Analog, PC Digital or DTV mode.

5. MENU

Displays a main menu.

6. LIST

Displays the programme list menu.

7. I/II

Selects the language during dual language broadcast.
Selects the sound output.

8. SLEEP

Sets the sleep timer.

9. Q.VIEW

 
Returns to the previously viewed programme.

10. PR▲▼ (Programme Up/Down)

Selects next programme or a menu item.

11. OK

Accepts your selection or displays the current mode.

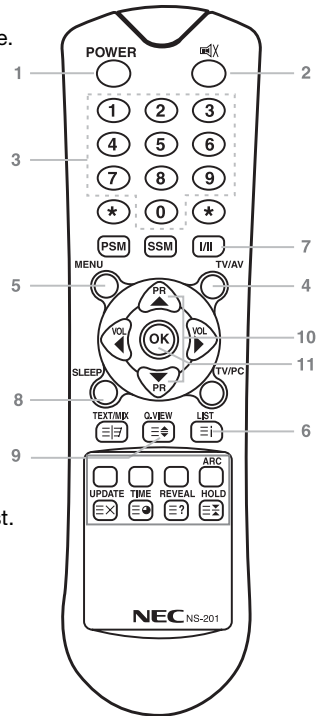

Controls

12. VOL◀▶ (Volume Up/Down)

Adjusts the sound level. Adjusts menu settings.

13. TV/PC

Selects TV or PC mode directly.

14. PSM (Picture Status Memory)

Recalls your preferred picture setting

15. SSM (Sound Status Memory)

Recalls your preferred sound setting


16. ARC

You can watch TV in various picture formats: **Auto, 16:9, 14:9, 4:3, 16:9 Zoom, 14:9 Zoom, 4:3 Zoom.** Repeatedly press the **ARC** button to select your desired picture format.

Note. 16:9 and 4:3 in PC mode are available.

17. TELETEXT buttons

 
These buttons are used for Teletext. For further details, see the "Teletext" section.

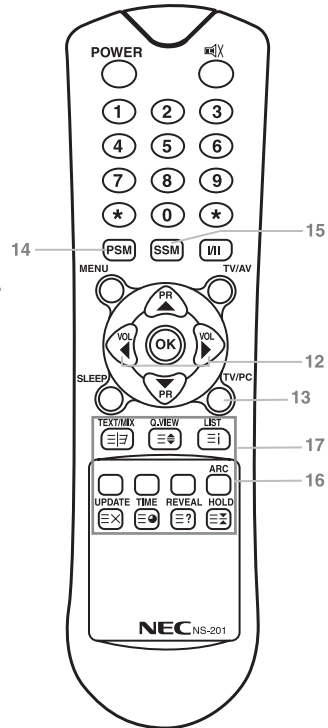

Battery installation

■ Inserting batteries

 1. Remove the battery cover by pulling it upward in the direction shown by the arrow.
2. Insert the batteries with correct polarity ("+" to "+", and "-" to "-").
3. Replace the battery compartment cover.



* Install two high-quality 1.5V "AAA" alkaline batteries. Don't mix old batteries with new batteries.

* Remove batteries when you won't use the remote controller for a long time. Liquid leakage from old batteries may cause operation failure.

■ Notes for using remote controller

- Make sure there are no objects between the remote controller and its sensor.
- Don't place the remote control near a heater or in damp place. Strong impact to the remote control may cause operation failure.
- Signal from the remote control may be disturbed by sun light or other bright light. In this case, darken the room or move the TV.

Basic Operation

Turning the TV On and Off

Standby Setup: The AC power cord must be set up and connected to have the TV in standby mode ready to be turned on. Press the **ON/OFF** button on the side panel of the TV to go into standby mode.

1. If the TV is in standby mode, press the **POWER** button on the remote controller or the TV itself to turn the TV on.
2. Press the Power button again on the remote controller or the **ON/OFF** button the TV itself to turn the TV off.

Note : If the TV is on and the **POWER** button is pressed to turn the TV off, the TV goes into standby mode.

Programme selection

You can select a Programme number with the **PR▲▼** button or **NUMBER** buttons.



Volume adjustment


Press the **VOL◀▶** button to adjust the sound level.

Quick view

Press the **Q.VIEW** button to view the last Programme you were watching.

Sound mute function

Press the **MUTE**() button. The sound is switched off and the mute display  appears.

 
To cancel mute mode, press the **MUTE**() button again, **VOL◀▶** or **SSM** button.

On screen menu language selection

The menu can be displayed on the screen in desired language. First, select your language.


1. Press the **MENU** button.
2. Select the **Setup** menu, Then press **VOL◀▶**.
3. Select the **Language** menu, then press **VOL◀▶**.
4. Press the **PR▲▼** button to select your desired language.
5. Press the **TV/AV** button.

All the on screen displays will appear in the selected language.

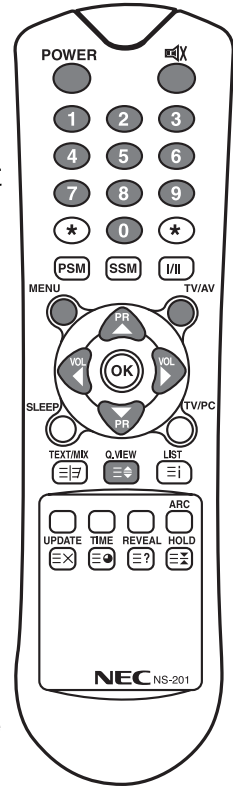

On Screen Menus and Displays

 1. Press the **MENU** button to display main menu.
2. Press the **PR** button to select menus-Picture, Sound, Special, Setup.
3. Adjust each menu with the **VOL** button.
4. Press the **MENU** button to return to preceding menu.
5. Press the **TV/AV** button to finish adjusting menu.

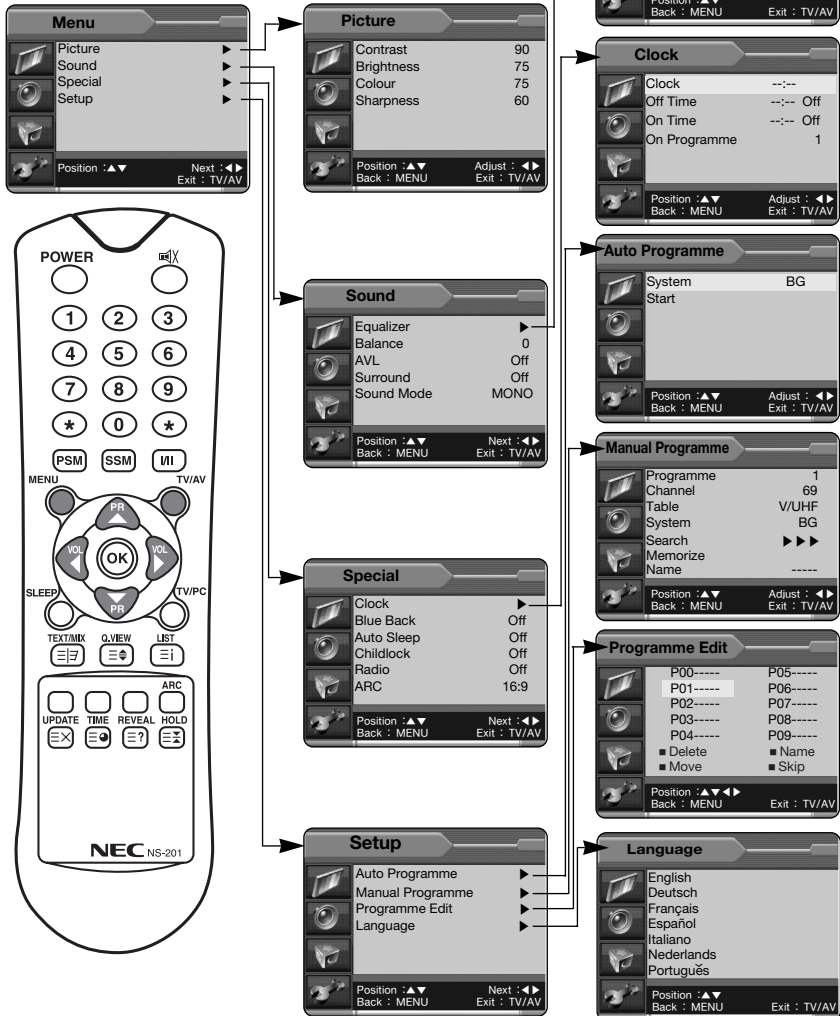

Setting up TV Programme

 
Once you have preset the programmes, you will be able to use the **PR**▲▼ or **NUMBER** buttons to scan the programmes you programmed. Programmes can be tuned using automatic or manual modes.

Auto Programme

All programmes that can be received are stored by this method. It is recommended that you use Auto programme during installation of this set.



1. Press the **MENU** button.
2. Select the **Setup** menu, then press **VOL**◀▶.
3. Select the **Auto Programme** menu, then press **VOL**◀▶.
4. Press the **PR**▲▼ button to select **System**.
5. Select a TV system with the **VOL**◀▶ button;
 - BG** : (Germany/Asia/M.East/Africa/Australia)
 - I** : (UK/Hong Kong/South Africa)
 - DK** : (CIS/China/East Europe)
 - M** : (USA, Korea, Philippines)
6. Select Start, then press **VOL**◀▶ to start Auto Programme.
7. Press the **MENU** button to stop Auto programme
8. Press the **TV/AV** button to return to normal TV viewing.

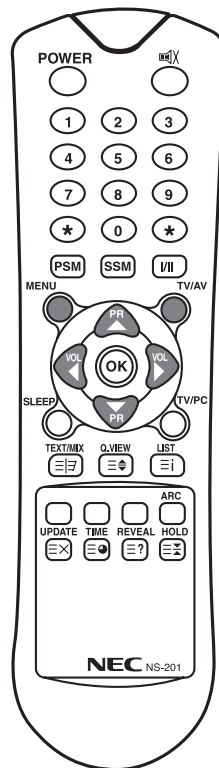


Setting up TV Programme

Manual Programme

Manual Programme lets you manually tune and arrange the programmes in whatever order you desire. Also you can assign a programme name with 5 characters to each programme number.

 1. Press the **MENU** button.
2. Select the **Setup** menu, then press **VOL◀▶**.
3. Select **Manual Programme** menu, then press **VOL◀▶**.
4. Select a programme with the **VOL◀▶** button or number buttons.
5. Press the **PR▲▼** button to select **Channel** menu.
6. Press the **VOL◀▶** button or directly number buttons to select a Channel.
7. Press the **PR▲▼** button to select the **Table** menu.
8. Press the **VOL◀▶** button to select **V/UHF** or **Cable** as required.
9. Select a TV system with the **VOL◀▶** button.
 - BG** : (Germany/Asia/M.East/Africa/Australia)
 - I** : (UK/Hong Kong/South Africa)
 - DK** : (CIS/China/East Europe)
 - M** : (USA, Korea, Philippines)
10. Press the **PR▲▼** button to select **Search** menu.
When you press the **VOL◀▶** buttons, the TV changes programmes in sequence.
You will see all the programmes that the TV has memorized. You will not see programmes that were either erased or not memorized.
11. Press the **PR▲▼** button to select **Memorize** menu.
12. Press the **VOL◀▶** button to store it.
13. Press the **MENU** button to return to prior menu.
14. Press the **TV/AV** button to return to normal TV viewing.

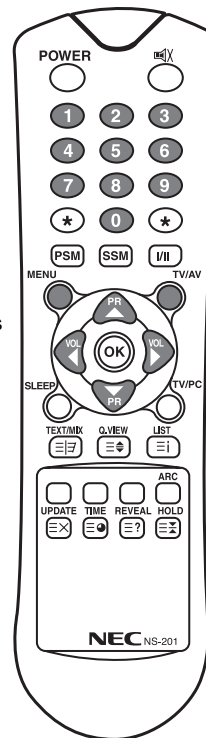

Setting up TV Programme

Programme Edit

This function enables you to delete or skip the stored programmes.

Also you can move some programmes to other programme numbers or insert a blank programme data into the selected programme number.

1. Press the **MENU** button.
2. Select the **Setup** menu, then press **VOL** ◀▶.
3. Press the **PR** ▲▼ button select **Programme Edit** menu, then press **VOL** ◀▶.
4. Select the programme name to edit with the **PR** ▲▼ and **VOL** ◀▶ button.



Deleting a programme

1. Select a programme to be deleted with the **PR** ▲▼ or **VOL** ◀▶ button.
2. Press the **RED** button once. The selected programme is deleted, all the following programme is shifted up one position.

Naming a programme

1. Select a programme to be named with the **PR** ▲▼ or **VOL** ◀▶ button.
2. Press the **GREEN** button. Then it display as below.



3. Press the **PR** ▲▼ button repeatedly to edit programme name. You can use the numeric 0 to 9, the alphabet A to z (capital and small letters,) a blank and -. With the **VOL** ◀▶ button, you can select in the opposite direction.
4. Press the **OK** button to store it.
5. Press the **MENU** button to return to prior menu.
6. Press the **TV/AV** button to return to normal TV viewing.

 
Moving a programme

1. Select a programme to be moved with the **PR** ▲▼ or **VOL** ◀▶ button.
2. Press the **YELLOW** button.
3. Move the programme to desired programme number with the **PR** ▲▼ or **VOL** ◀▶ button.
4. Press the **YELLOW** button again to release this function.

Skipping a programme number

1. Select a programme number to be skipped with the **PR** ▲▼ or **VOL** ◀▶ button.
2. Press the **CYAN** button. The skipped programme turns to blue.
3. Press the **CYAN** button again to release the skipped programme.

Note: When a programme number is skipped it means that you will be unable to select it using the **PR** ▲▼ button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the **Programme Edit**.

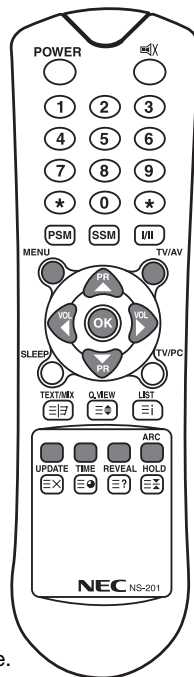

Picture Control

You can adjust picture **Contrast**, **Brightness**, **Colour**, **Sharpness** and **Tint**(only in NTSC mode) to the levels you prefer.

Manual Picture Control

1. Press the **MENU** button.
2. Select the **Picture** menu, then press **VOL ◀▶**.
3. Press the **PR ▲▼** button select a picture item.
4. Press the **VOL ◀▶** button to adjust the picture condition as you want.
5. Press the **TV/AV** button to store for the picture **User**.



Selected Item	Setting Change
Contrast	More darkness VOL ◀ 0~100 ▶VOL More light
Brightness	Less bright VOL ◀ 0~100 ▶VOL More bright
Colour	Lower color intensity VOL ◀ 0~100 ▶VOL Higher color intensity
Sharpness	Soft picture VOL ◀ 0~100 ▶VOL Sharp picture
Tint*	More purple VOL ◀ -50~50 ▶VOL More green

Auto Picture Control

*The Picture options - Dynamic, Standard, Mild and Game are programmed for good picture reproduction at the factory and cannot be changed.

PSM (Picture Status Memory)

1. Press the **PSM** button.
2. Press the **PSM** button repeatedly to select [PSM].

 
Each press of the button changes the screen display as below.

Dynamic → **Standard** → **Mild** → **Game** → **User**



- **Dynamic** : Vivid Picture Appearance
- **Standard** : Standard Picture Appearance
- **Mild** : Softer Picture Appearance
- **Game** : External Video Game Picture Setup
- **User** : Manual Picture Setup


Note. In PC mode, **PSM** function isn't available.

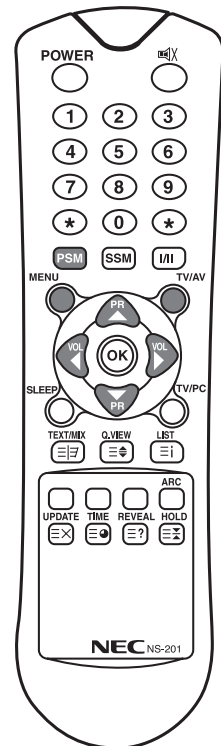

Sound Control

You can select your preferred sound setting; **Flat, Music, Movie or Speech**. You can also adjust the sound frequency of equalizer, balance. If you switch **AVL** to on, the set automatically keeps on an equal volume level even if you change programmes.

 1. Press the **MENU** button.
2. Select the **Sound** menu, then press **VOL◀▶**.
3. Press the **PR▲▼** button to select the desired sound item; **Equalizer, Balance, AVL, Surround or Sound Mode**.
4. Press the **VOL◀▶** button to make desired adjustment.
5. Press the **VOL◀▶** button in **Equalizer** to set the **Equalizer**.

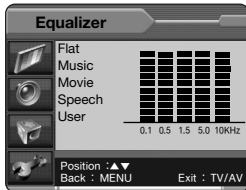


6. Press the **PR▲▼** button to select your preferred setting ; **Flat, Music, Movie, Speech or User**. To set the Equalizer User.
 - a. Select **User** by pressing the **PR▲▼** button.
 - b. Select a sound band by pressing the **VOL◀▶** button.
 - c. Make appropriate sound level with the **PR▲▼** button.
 - d. Press the **MENU** button to return to preceding menu.
7. Press the **PR▲▼** button to the **Balance** menu.
8. Select the **Balance** menu with the **VOL◀▶** button and adjust the balance of speaker.
9. Select the **AVL**(Automatic Volume Leveler) menu **ON** or **OFF**.
10. Select the **Surround** menu **On** or **Off**.
11. Select the Sound Mode menu.

If the sound quality is poor while you are watching a programme broadcast in Stereo, select **MONO** with the **VOL◀▶** button. Press the **VOL◀▶** button to switch between **MONO** and **STEREO**.(Please note that it works only when the broadcast is done in stereo).

If a programme is received in two language(dual language), you can switch to **DUAL I** or **DUAL II** by pressing the **VOL◀▶** button repeatedly.

DUAL I sends the primary broadcast language to the loudspeakers.

 DUAL II sends the secondary broadcast language to the loudspeakers.

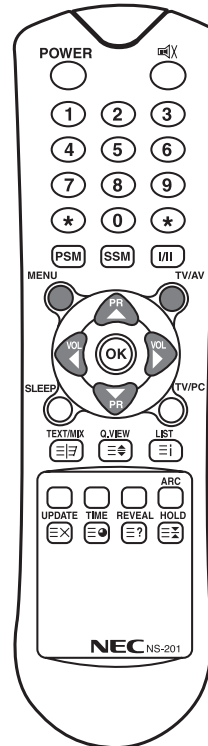

Sound Control

Auto Sound Control

* The sound **Flat**, **Music**, **Movie** and **Speech** are programmed for good sound reproduction at the factory and cannot be changed.

SSM (Sound Status Memory)

 
1. Press the **SSM** button.
2. Press the **SSM** button repeatedly to select.

Each press of the button changes the screen display as below.

Flat → **Music** → **Movie** → **Speech** → **User**



- Choose **Flat** for the standard factory settings.
- Choose **Music** when watching music video or concerts.
- Choose **Movie** when watching movies.
- Choose **Speech** when watching a show that is mostly dialogue.
- Choose **User** to recall your personalized settings.

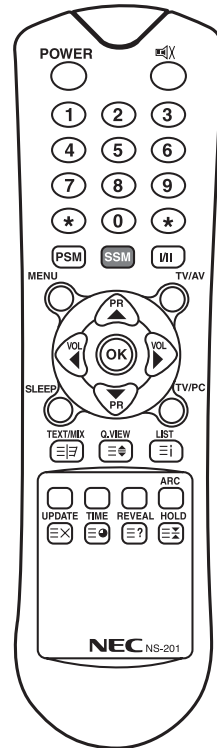

Other functions

You can control other functions; **Clock**, **Blue Back**, **Auto Sleep**, **Childlock**, **Radio** and **ARC** menu.

Clock

Setting the clock is necessary in order to use the various timer features of the TV. You can set automatic TV **On** or **Off** time.

1. Press the **MENU** button.
2. Press the **PR**▲▼ button to select the **Special** menu. Then press the **VOL**◀▶ button.
3. Press the **VOL**◀▶ button to select **Clock** menu.



4. Setting the clock

Press **VOL**◀▶, to select hour & minutes. Press **PR**▲▼ to select the number between 00:00 ...23:59 (Hours:Minutes). After setting the time, press **VOL**◀▶ until the red letters disappear.

5. OFF time

Select the OFF time by pressing **PR**▲▼. Press **VOL**◀▶, to select hour/minutes. Press **PR**▲▼ to select the number between 00:00 ...23:59 (Hours:Minutes). Select ON/OFF, to turn the OFF TIME On/Off. After setting the OFF time, press **VOL**◀▶ until the red letters disappear..

6. ON TIME

 
Select the ON time by pressing **PR**▲▼. Press **VOL**◀▶, to select hour & minutes. Press **PR**▲▼ to select the number between 00:00 ...23:59 (Hours:Minutes). Select ON/OFF, to turn the ON TIME On/Off. After setting the ON time, press **VOL**◀▶ until the red letters disappear.

7. ON Programme

Select the ON Programme by pressing **PR**▲▼. Press **VOL**◀▶ to change the programme number. This programme number will be the first programme displayed after setting the ON TIME.

8. Press the **TV/AV** button to return to normal TV viewing.

Note. The present time must be set for using the **Clock** function.

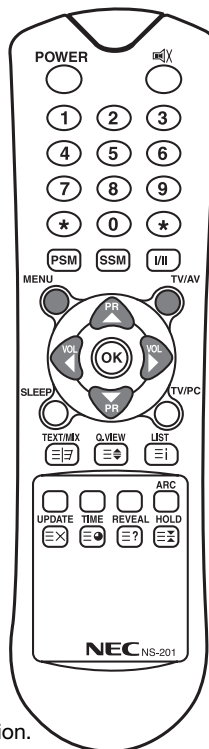

Blue Back

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background.

If you wish to continue viewing the poor picture, you must select the **Blue Back Off**. (Pressing the **VOL**◀▶ button will alternate between "On" and "Off".)

SLEEP TIMER

Set the timer for the TV to turn off at the preset time automatically.

Press the **SLEEP** button on the remote control.

The number on the screen changes from

0-> 15->30->60->0

Other functions

Auto Sleep

If you select **Auto Sleep On** the set will automatically switch itself to standby mode approximately ten minutes after a TV Channel stops broadcasting.

1. Press the **MENU** button.
2. Select the **Special** menu, then press **VOL◀▶**.
3. Press the **PR▲▼** button to select **Auto Sleep**.
4. Press the **VOL◀▶** button to select **On**.
5. Press the **TV/AV** button to return to normal TV viewing.

Childlock

Childlock menu is necessary in order to disable the buttons on the side panel of the set. Especially it is useful to prevent unauthorized viewing.

1. Press the **PR▲▼** button to select **Childlock**.
2. Press the **VOL◀▶** button repeatedly to select **On** or **Off**.

* When the setting is **Childlock On**, the buttons on the side panel of the set is disabled except ON/OFF button.

* When the setting is **Childlock Off**, the buttons on the side panel of the set is enabled.

Radio

You can listen to radio with the set.

1. Press the **MENU** button.
2. Press the **PR▲▼** button to select the **Special** menu.
Then press the **VOL◀▶** button.
3. Press the **PR▲▼** button to select Radio.
4. Press the **VOL◀▶** button to select Radio **On** or **Off**.

Note. When the setting is **On**, you can adjust radio function in radio mode. (see page 20)

ARC (Aspect Ratio Control)

You can watch TV in various picture formats; **Auto, 16:9, 14:9, 4:3, 16:9 Zoom, 14:9 Zoom, 4:3 Zoom**.

Repeatedly press the **ARC** button to select your desired picture format.

Auto When your set receives the wide screen signal, it will change automatically the picture format that has been sent.

16:9 You can enjoy the cinema or general TV programme through the 16:9 mode.
The screen 16:9 is viewed just like that but the screen 4:3 is magnified to the left and right so that the screen 16:9 is full.

14:9 You can enjoy the picture format of 14:9 or general TV programme through the 14:9 mode.
The screen 14:9 is viewed just like that the screen 4:3 is magnified to the upper/lower and left/right.

 
4:3 This picture format is 4 to 3 of general TV.

16:9 Zoom Magnifies the size of the picture on screen 16:9.

14:9 Zoom Magnifies the size of the picture on screen 14:9.

4:3 Zoom Magnifies the size of the picture on screen 4:3.

Note. In **Zoom** mode, you can adjust the position of the picture with **PR▲▼** button.
(It's possible when the **ARC** information is displayed on screen.)

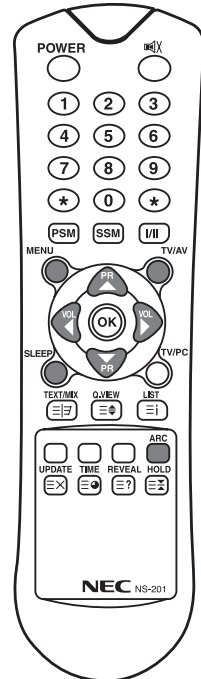


Radio Control

This function is possible only when the set is in Radio mode.(Radio mode is displayed when the Setting for special menu is radio On.)

- Use **TV/AV** button on remote controller to select **Radio mode**.
- Press the **MENU** button to set **Radio Setup** menu.
- Press the **VOL◀▶** button repeatedly to select **Mode Auto** or **Manual**.
 - * When the Radio Setup Mode is **Auto**, only the programmes stored in memory are selected.
 - * When the Radio Setup Mode is **Manual**, all frequencies are selected.
- Press the **PR▲▼** button select **Frequency**. Then press the **VOL◀▶** button repeatedly to tune in the desired station manually. If you press the **VOL◀▶** button continually above 2 seconds, It automatically changes present frequency into next frequency.
- Press the **PR▲▼** button to select **Programme**. Then press the **VOL◀▶** button repeatedly to select programme.
- Press the **PR▲▼** button to select **memorize**. If you want to memorize this radio setup, press the **VOL◀▶** button.
- Press the **PR▲▼** button to select **Delete**. Select **Off** with the **VOL◀▶** button to delete the station.
- Press the **PR▲▼** button to select **Auto Programme**.
- Press the **VOL◀▶** button repeatedly to automatically scans and tunes to the next available station.
- Press the **PR▲▼** button to select **Off Time**. Then press the **VOL◀▶** button repeatedly to select Off, 5, 10, 30(minutes). The on-screen displays disappear after time selected.(when you select Off, the on-screen displays will not disappear.) The displays identifies the status of radio settings.
- Press the **PR▲▼** button to select **Edit Name**. Then press the **VOL◀▶** button to edit radio name.
- You can assign a radio name with 8 characters. Press the **PR▲▼** button repeatedly. You can use the numeric 0 to 9, the alphabet A to z(capital and small letters.) and a blank. With the **VOL◀▶** button, you can select in the opposite direction.
- Press the **MENU** button to return to prior menu.
- Press the **TV/AV** button to exit. Then the radio setting condition is displayed.

Note. You can listen to the radio while you are at PC mode. Simply go to the PC mode, and then press MENU, select the SOUND menu, and then change the INPUT item to the RADIO.

 Please ensure that the antenna is connected and the RADIO selection is ON at the SPECIAL menu.

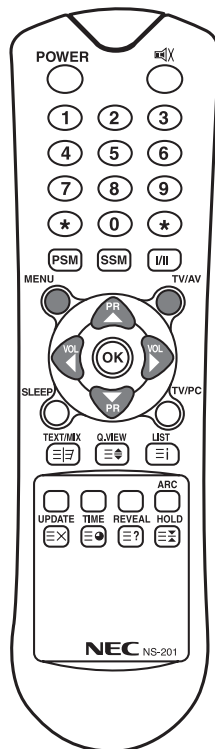

Other functions

Calling the programme list

You can check the programmes stored in the memory by displaying the programme LIST.

Displaying programme list

1. Press the **LIST** button to display the Programme list menu.

The programme list appears on the screen.

One programme list contains ten programmes as right.



Note :

- a. You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode.
- b. Some programmes with the channel number shown in the programme list indicate there is no station name assigned.

Selecting a programme in the programme list

 
Select a programme with the **PR ▲ ▼** or **VOL ◀ ▶** button. Then press the **OK** button.

The set switches to the chosen programme number.

Paging through a programme list

There are 10 programme table pages in which contain 100 programmes.

Pressing the **PR ▲ ▼** or **VOL ◀ ▶** button repeatedly turns the pages.

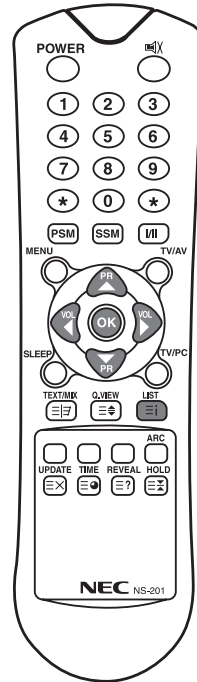

TELETEXT

TEXT On/Off

Press the **TEXT/MIX** button to switch to TELETEXT.
The initial page or last selected page appears on the screen.
The first page number indicates your selection,
while the second shows the current page displayed.

1. Press **TEXT/MIX** button once, displays the Teletext pages.
If you press the **TEXT/MIX** button twice, the teletext pages and the TV picture are concurrently displayed on both sides of the screen.
2. Press **TEXT/MIX** button once more, displays the Teletext pages superimposed on the TV picture.
3. Press the **TEXT/MIX** button to switch off Teletext once more, Text mode is off, and TV mode appears.

If you press the TEXT/MIX button displays are changed as below.

TEXT → MIX → Double window TEXT → TV mode



TOP text

The user guide displays four fields—red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

Group/block/page selection

 
1. With the **BLUE** button you can progress from block to block.
2. Use the **YELLOW** button to proceed to the next group with automatic overflow to the next block.
3. With the **GREEN** button you can proceed to the next existing page with automatic overflow to the next group. Alternatively the **PR▲** button can be used.
4. The **RED** button permits to return to previous selection. Alternatively the **PR▼** button can be used.

FLOF text

The Teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.





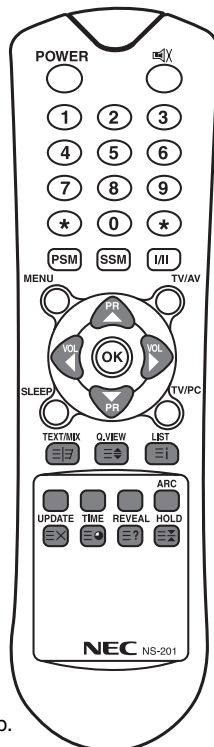


Page selection

1. Press the **INDEX** button to select the index page.
2. You can select the pages, which are colour coded along the bottom line with the same coloured buttons.
3. The **VOL◀▶** button can be used to select the preceding or following page.



TELETEXT

 Special TELETEXT functions

MENU		Functions
	TEXT/MIX	Changes Teletext mode Only Teletext mode, text mode superimposed on the TV picture, TV mode
	SIZE	Selects double height text. Press this button to enlarge the top half of the page. Press this button again to enlarge the bottom half of the page. Press this button again to return to the normal display.
	HOLD	Stops the automatic page change, which will occur if a Teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited. To continue press this button again.
	INDEX	Return to index page
	UPDATE	Displays the TV picture on the screen while waiting for the new Teletext page. The display will appear at the top left hand corner of the screen. When the updated page is available then display will change to the page number. Press this button to view the updated Teletext page.
	TIME	When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. The time will only be displayed at the channel that broadcast the teletext. In Teletext mode press this button to select and hold or change a four-digit sub page number. This is displayed along the bottom of the screen. Press this button again to exit this function.
	REVEAL	Press this button to display the concealed information, such as solutions of riddles or puzzles. Press this button again to remove the information from the display.

 
External Equipment Connection

You can connect additional equipment, such as VCRs, camcorders etc. to your set. Examples are shown below.

Note. When connecting to other equipment, please ensure you turn the main switch OFF to prevent any damage to the equipment.


Antenna connection

1. Connect RF out on the VCR to the Antenna input on the rear of the TV.
2. Connect the antenna cable to the antenna in jack on the VCR.
3. Use the TV/AV button to select TV mode.
4. Press the PLAY button on the VCR.

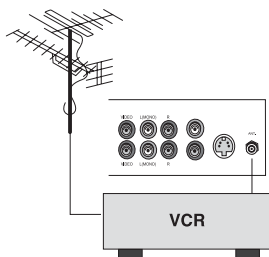


COMPONENT INPUT

 1. device to the COMPONENT on the TV.
2. Use the **TV/AV** button to select COMPONENT mode.
3. Press the **PLAY** button on the DVD.

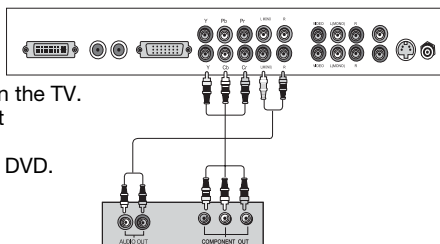

DTV Input

 1. Connect the DTV video output sockets (Y, Pb, Pr) of the DTV set top box to the DTV Input sockets of the set.
2. Connect the audio cable from the DTV set top box to the Audio Input sockets of the set.
3. Press the TV/AV button to select DTV mode.

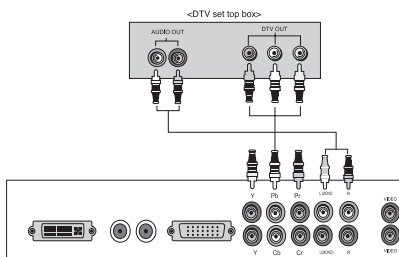

External Equipment Connection

 
Note.When connecting to other equipment, please ensure you turn the main switch OFF to prevent any damage to the equipment.

A/V INPUT

1. Connect the A/V out jacks on of the VCR to A/V-In jacks on the TV.
2. Press the **TV/AV** button to select **VIDEO** mode.
3. Press the **PLAY** button on the VCR.


The VCR playback picture appears on the screen.

Note : If you have a mono VCR, connect the audio cable from the VCR to the **L(MONO)** socket of the set.

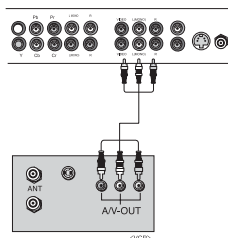

A/V OUT

 
1. Connect the Audio outputs(L, R) of the TV to Audio-IN(L, R) of another display or the amplifier system
 - If you connect the amplifier system, you can also play the TV sound through the stereo amplifier system.
2. Connect the Video output of the TV to Video IN of another displayer.

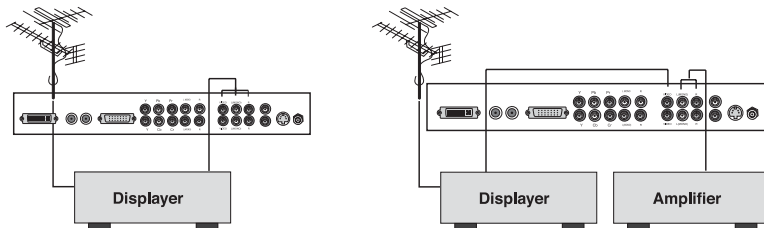

S-VIDEO input


If using an **S-VIDEO** source, the picture quality will be improved over a video source.

 1. Connect the S-VIDEO output of a VCR to the **S-VIDEO** input on the TV.
 2. Connect the audio cables from the S-VIDEO VCR to the **L (MONO) R** inputs on the TV.
 3. Select **S-VIDEO** mode by pressing the TV/AV button repeatedly.
 4. Press the **PLAY** button on the VCR.
- The VCR playback picture appears on the screen.

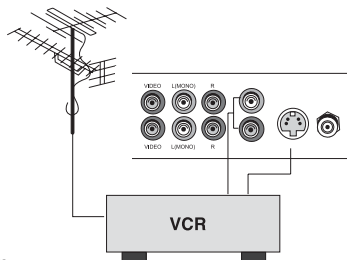

Headphone jack

 Insert the headphone plug to the headphone jack on the TV. You can listen to sound through the headphone; no sound from the speaker on the TV. To adjust the headphone volume, use the (Headphone) Volume menu in the Sound menu.

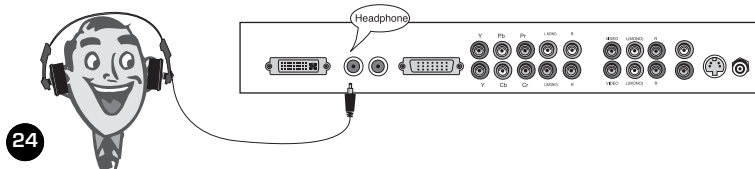

Connecting the PC as a monitor

This function is possible only when the set is in PC mode. Use the **TV/AV** button on remote controller.

Picture adjustment

You can adjust picture **Contrast, Brightness, Temperature, Clock, Phase** and **ARC** as you prefer.

1. Press the **TV/AV** button to select the PC mode.
2. Press the **MENU** button.
3. Select the **Picture**, then press **VOL◀▶**.
4. Press the **PR▲▼** button to select the desired picture item.
5. Press the **VOL◀▶** button to make appropriate adjustments.
6. Press the **TV/AV** button to exit menu.

Contrast

This function is to adjust **picture** to light/dark.

Brightness

This function is to adjust **brightness** of picture.

Temperature

Temperature is a measure of the warmth of the image color.

Clock

This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.

Note : This mediation range is different according to the supported resolution.

Phase

This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

ARC (Aspect Ratio Control)

Selects a screen mode.-4:3 or 16:9

 
 
 
- * 4:3 mode : Sets the picture to 4:3 normal mode.
- * 16:9 mode : Sets the picture to 16:9 wide mode.



4 : 3




16 : 9

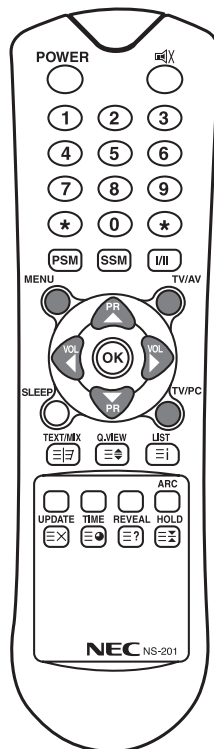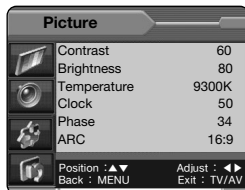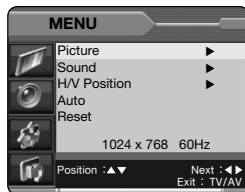

Connecting the PC as a monitor

Sound adjustment

 1. Press the **MENU** button.
2. Select the **Sound** menu, then press **VOL◀▶**.
3. Press the **PR▲▼** button to select the desired sound item; **Equalizer**, **Balance**, **AVL**, **Surround** or **Sound Mode**.
4. Press the **VOL◀▶** button to make desired adjustment.
5. Press the **VOL◀▶** button in **Equalizer** to set the **Equalizer**.
6. Press the **PR▲▼** button to select your preferred setting ; **Flat**, **Music**, **Movie**, **Speech** or **User**.
To set the Equalizer User.
 - a. Select **User** by pressing the **PR▲▼** button.
 - b. Select a sound band by pressing the **VOL◀▶** button.
 - c. Make appropriate sound level with the **PR▲▼** button.
 - d. Press the **MENU** button to return to preceding menu.
7. Press the **PR▲▼** button to the **Balance** menu.
8. Select the Balance menu with the **VOL◀▶** button and adjust the balance of speaker.
9. Select the **AVL**(Automatic Volume Leveler) menu **ON** or **OFF**.
10. Select the **Surround** menu **ON** or **OFF**.
11. Select the **Sound Mode** with **PR▲▼** button.
12. Press the **VOL◀▶** button to select sound mode – **L+R**, **L+L**, **R+R**.
L+R : Audio signal from audio L input is sent to left loudspeaker and audio signal from audio R input is sent to right loudspeaker.
L+L : Audio signal from audio L input is sent to left and right loudspeakers.
R+R : Audio signal from audio R input is sent to left and right loudspeakers.
13. Select the **Input** with **PR▲▼** button.
14. Press the **VOL◀▶** button to select Input – PC, Radio.
In PIP mode, you can select **PC** or **PIP** Input.
Note:
 - a. When selecting radio mode, sound mode alternates between **MONO** and **STEREO** according to the received signal.
 - b. In **PC** mode, radio mode supports only **Auto**.
 - c. In **PC** mode, radio control function is on an equality with Radio function in the front.(See page 20)

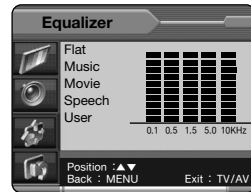


Connecting the PC as a monitor

Position Adjustment

This function is to adjust picture to left/right and up/down as you prefer.

 1. Press the **MENU** button.
2. Select the **H/V Position** menu.
3. Press the **PR ▲ ▼** button to select the desired position item.
4. Press the **VOL ◀ ▶** button to adjust horizontal position and vertical position.
5. Press the **TV/AV** button to exit menu

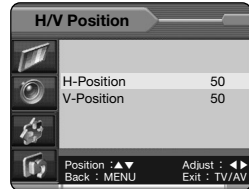

Auto

This function is for the automatic adjustment of the screen position, clock and clock phase. The displayed image will disappear for a few seconds while the Auto-configuration is in process.

Note: Some signal from some graphics boards may not function properly.

If the results are unsatisfactory, adjust your monitor's position, clock and clock phase manually.

Reset

 
This function allows you to return to the good picture reproduction programmed at the factory and cannot be changed.

Connecting the PC as a monitor

PC ANALOG(D-SUB) INPUT

1. Connect the PC ANALOG IN cable (D sub jack) from the monitor output socket of the PC to the PC/DTV input socket of the set.
2. Connect the PC Audio IN cable from the PC to the PC Audio IN of the set.
3. Press the **TV/AV** or **TV/PC** button to select **PC ANALOG IN** mode.
4. Switch on the PC, and the PC screen appears on the set.

The set can be operated as the PC monitor.

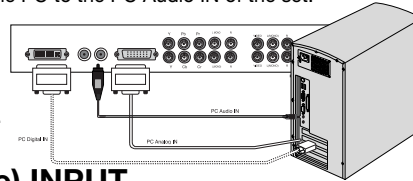

DVI (Digital Visual Interface) INPUT

1. Connect the **DVI** of PC to the DVI input on the TV.
2. Select **PC-Digital** mode by pressing the **TV/AV** button repeatedly. (When DVI source is connected, TV/AV mode converts PC to DVI mode.)

Resolution

Mode	Resolution	Horizontal frequency(KHz)	Vertical frequency(Hz)
VGA	640 x 480	31.5 KHz	60 Hz
	640 x 480	37.9 KHz	72 Hz
	640 x 480	37.5 KHz	75 Hz
	720 x 400	31.4 KHz	70 Hz
SVGA	800 x 600	35.1 KHz	56 Hz
	800 x 600	37.9 KHz	60 Hz
	800 x 600	48.1 KHz	72 Hz
	800 x 600	46.9 KHz	75 Hz
XGA	1024 x 768	48.4 KHz	60 Hz
	1024 x 768	56.5 KHz	70 Hz
	1024 x 768	60.0 KHz	75 Hz
WXGA	1280 x 768	47.4 KHz	60Hz RB
	1280 x 768	47.8 KHz	60 Hz
DTV	720 x 576p	31.2 KHz	50 Hz
	1280 x 720p	37.5 KHz	50 Hz
	1920 x 1080i	28.1 KHz	50 Hz

Note:

- a. If the set is cold, there may be a small "flicker" when the set is switched on. This is normal, there is nothing wrong with the set.
- b. Some dot defects may appear on the screen, like Red, Green or Blue spots. However, this will have no impact or effect on the monitor performance.
- c. The resolution which is not supported will appear at the resolution which gets near to the resolution which is supported
* The standard of the resolution which gets near : H/V sync.
- d. When resolutions are displayed that are not native to the panel resolution, text may appear choppy or lines may appear to be bold or thicker than others.
To minimise, choose a resolution similar to the panel

Product Specifications

Model	NLT-32W	
Main body (With stand)	Horizontal size 960(960) mm	Thickness 109(222) mm
	Height 513(565.5) mm	Weight 17.6(19.3) kg
Television system	PAL-BG, I, DK / SECAM-BG, DK, / NTSC-M	
Television programme	VHF: 0~12 UHF :21~69 Cable : S1~S41	
LCD Panel	32" WIDE TFT LCD panel	
Resolution	WXGA (1366 x 768)	
Power consumption	150W	
Stand by Power consumption	Below 3W	
External antenna impedance	75Ω	
Audio output	10W + 10W	
External input ports	<ul style="list-style-type: none"> • PC Digital IN • A/V IN • A/V OUT • HEADPHONE OUT • PC/DVI-AUDIO IN • PC Analog IN • COMPONENT IN • DTV IN • S-VIDEO IN • ANTENNA IN 	
AC Input	100-240Va.c. 50/60Hz	
Net Weight	19.3 kg	
Gross Weight	25.43 kg	

Note.

- a. Although LCD panel uses highly precise technology, it may display blank pixels, dark spots, or lightning pixels on the screen. This is normal and not an indication of a defect
- b. Technical specifications are subject to change without notice

Troubleshooting

Problem	Check item
No picture on screen and no sound from speakers	<ul style="list-style-type: none"> • Insert the AC power cord plug securely in AC power outlet. • Make sure the set is not in the standby mode (The POWER/Standby indicator is red.)
No picture/No picture from AV terminal	<ul style="list-style-type: none"> • Check the brightness setting of the display. • Lamp may have malfunction.
Picture is displayed, but no sound from the speakers.	<ul style="list-style-type: none"> • Check the sound setting. • Make sure the sound is not muted. • Make sure a pair of headphones is not connected. • Make sure the connectors of the optional speaker system are securely inserted.
Picture is too light	<ul style="list-style-type: none"> • Make sure COLOR and CONTRAST settings.
Picture is too dark.	<ul style="list-style-type: none"> • Make sure BRIGHTNESS setting is not set too low. • Lamp may have malfunction.
Remote control does not work.	<ul style="list-style-type: none"> • Change the batteries. • Make sure the infrared transmitter window is not receiving strong light such as light from fluorescent lamps.
The picture is not sharp. The picture moves.	<ul style="list-style-type: none"> • The reception may be weak. • The state of the broadcast may also be bad. • Make sure the antenna is facing the right direction. • Make sure the outside antenna is not disconnected.
The picture is doubled or tripled.	<ul style="list-style-type: none"> • Make sure the antenna is facing the right direction. • There may be reflected electric waves from mountains or buildings.
The picture is spotted.	<ul style="list-style-type: none"> • There may be interference from automobiles, trains, high voltage lines, neon lights, etc. • There may be interference between the antenna cable and power cable. Try positioning them further apart.
There are stripes on the screen or colors fade.	<ul style="list-style-type: none"> • Is the unit receiving interference from other devices? Transmission antennas of radio broadcasting stations and transmission antennas of amateur radios and cellular phones may also cause interference. • Use the unit as far apart as possible from devices that may cause possible interference.

NEC

NEC Australia Pty. Ltd.
ABN 86 001 217 527
Home Electronics Group

NEC Service Centres

New South Wales

Sydney	184 Milperra Rd, Revesby 2212	131-632
Newcastle	120 Parry Street, Newcastle West 2302	131-632

Victoria

Melbourne	Unit1/6, Garden Road, Clayton, 3168	131-632
-----------	-------------------------------------	---------

Queensland

Brisbane	Unit 4/305 Montague Road, West End, 4101	131-632
Southport	Shop 1, 48 Ferry Road, Southport 4215	131-632

South Adelaide

Adelaide	84A Richmond Rd, Keswick, 5053	131-632
----------	--------------------------------	---------

Western Australia

Perth	45 Sarich Court, Osborne Park 6017	131-632
-------	------------------------------------	---------

For Service in outer areas, please contact your NEC retailer for the address of the nearest Authorised NEC Service Centre



NEC Australia Pty. Ltd.
Home Electronics Group
244 Beecroft Road EPPING 2121
Tel:131-632
Fax:(02) 9877 2353

NEC

NEC Australia Pty Ltd

500-011H050729

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>