
# OPERATING INSTRUCTIONS AND SPECIFICATIONS NI 9426

32-Channel, 24 V, Sourcing Digital Input Module

Français	Deutsch	日本語	한국어	简体中文
ni.com/manuals				

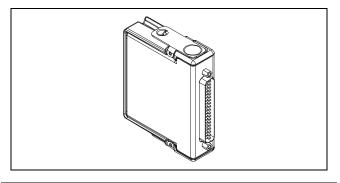

Download from Www.Somanuals.com. All Martuals Search And Download.

This document describes how to use the National Instruments 9426 and includes specifications and pin assignments for the NI 9426. Visit ni.com/info and enter rdsoftwareversion to determine which software you need for the modules you are using. For information about installing, configuring, and programming the system, refer to the system documentation. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.



**Note** The safety guidelines and specifications in this document are specific to the NI 9426. The other components in the system might not meet the same safety ratings and specifications. Refer to the documentation for each component in the system to determine the safety ratings and specifications for the entire system.

# **Safety Guidelines**

Operate the NI 9426 only as described in these operating instructions.



**Hot Surface** This icon denotes that the component may be hot. Touching this component may result in bodily injury.

## Safety Guidelines for Hazardous Voltages

If hazardous voltages are connected to the module, take the following precautions. A hazardous voltage is a voltage greater than 42.4  $V_{pk}$  or 60 VDC to earth ground.



**Caution** Ensure that hazardous voltage wiring is performed only by qualified personnel adhering to local electrical standards.



**Caution** Do *not* mix hazardous voltage circuits and human-accessible circuits on the same module.



**Caution** Make sure that devices and circuits connected to the module are properly insulated from human contact.



**Caution** When module terminals are hazardous voltage LIVE (>42.4  $V_{pk}$ /60 VDC), you must ensure that devices and circuits connected to the module are properly insulated from human contact.

# Safety Guidelines for Hazardous Locations

The NI 9426 is suitable for use in Class I, Division 2, Groups A, B, C, D, T4 hazardous locations; Class I, Zone 2, AEx nA IIC T4, and

© National Instruments Corp. 3 NI 9426 Operating Instructions and Specifications Download from Www.Somanuals.com. All Manuals Search And Download. Ex nA IIC T4 hazardous locations; and nonhazardous locations only. Follow these guidelines if you are installing the NI 9426 in a potentially explosive environment. Not following these guidelines may result in serious injury or death.



**Caution** Do *not* disconnect I/O-side wires or connectors unless power has been switched off or the area is known to be nonhazardous.



**Caution** Do *not* remove modules unless power has been switched off or the area is known to be nonhazardous.



**Caution** Substitution of components may impair suitability for Class I, Division 2.



**Caution** For Zone 2 applications, install the system in an enclosure rated to at least IP 54 as defined by IEC 60529 and EN 60529.



#### Special Conditions for Hazardous Locations Use in Europe

This equipment has been evaluated as Ex nA IIC T4 equipment under DEMKO Certificate No. 07 ATEX 0626664X. Each module is marked  $\langle \widehat{e_x} \rangle$  II 3G and is suitable for use in Zone 2 hazardous locations. If you are using the NI 9426 in Gas Group IIC hazardous locations or in ambient temperatures of -40 °C  $\leq$  Ta  $\leq$  70 °C, you must use the device in an NI chassis that has been evaluated as EEx nC IIC T4, Ex nA IIC T4, or Ex nL IIC T4 equipment.

#### **Special Conditions for Marine Applications**

Some modules are Lloyd's Register (LR) Type Approved for marine applications. To verify Lloyd's Register certification, visit ni.com/certification and search for the LR certificate, or look for the Lloyd's Register mark on the module.




**Caution** To meet radio frequency emission requirements for marine applications, use shielded cables and install the system in a metal enclosure. Suppression ferrites must be installed on power supply inputs near power entries to modules and controllers. Power supply and module cables must be separated on opposite sides of the enclosure and must enter and exit through opposing enclosure walls.

© National Instruments Corp. 5 NI 9426 Operating Instructions and Specifications Download from Www.Somanuals.com. All Manuals Search And Download.

# **Connecting the NI 9426**

The NI 9426 has a 37-pin DSUB connector that provides connections for 32 simultaneously-sampled digital input channels.

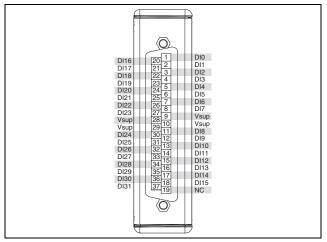



NI 9426 Operating Instructions and Specifications 6 ni.com Download from Www.Somanuals.com. All Manuals Search And Download. Each channel has a DI pin to which you can connect a digital input signal. The NI 9426 has four supply pins,  $V_{sup}$ , that are internally connected to the isolated reference of the module.

The NI 9426 has sourcing inputs, meaning the DI pin sources current from  $V_{sup}$  to the sinking output device. The NI 9426 internally limits current signals connected to DI. For more information about input current levels, refer to the *Specifications* section.

You can connect 2-, 3-, and 4-wire sinking-output devices to the NI 9426. A sinking-output device provides a path from the DI pin to a voltage below  $V_{sup}$ . An example of a sinking-output device is an open collector NPN.

Connect the sinking-output device to the DI pin of the NI 9426. Connect the positive power supply lead of the external device to the  $V_{sup}$  pin. Refer to Figure 2 for an illustration of connecting a device to the NI 9426.

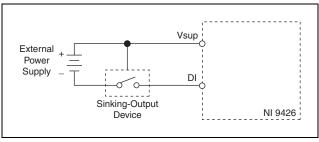


Figure 2. Connecting a Device to the NI 9426 (Three-Wire Device Shown)

The NI 9426 channel registers as ON when the sinking-output device drives the input below  $V_{sup}$  and meets the input ON range. The channel registers as OFF when the device does not drive the input low and is in the input OFF range. If no device is connected to the DI pin, the channel registers as OFF. Refer to the *Specifications* section for more information about the ON and OFF states.

# Sleep Mode

This module supports a low-power sleep mode. Support for sleep mode at the system level depends on the chassis that the module is plugged into. Refer to the chassis manual for information about support for sleep mode. If the chassis supports sleep mode, refer to the software help for information about enabling sleep mode. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Typically, when a system is in sleep mode, you cannot communicate with the modules. In sleep mode, the system consumes minimal power and may dissipate less heat than it does in normal mode. Refer to the *Specifications* section for more information about power consumption and thermal dissipation.

# **Specifications**

The following specifications are typical for the range -40 to 70 °C unless otherwise noted. All voltages are relative to  $V_{sup}$  unless otherwise noted.

#### **Input Characteristics**

© National Instruments Corp. 9 NI 9426 Operating Instructions and Specifications Download from Www.Somanuals.com. All Manuals Search And Download.

Input type	Sourcing
Digital logic levels	
OFF state	
Input voltage <sup>1</sup>	$\dots \ge (V_{sup} - 5 \text{ V})$
Input current	≤150 µA from DI pin
ON state	
Input voltage <sup>1</sup>	$\leq (V_{sup} - 10 \text{ V})$
Input current	$\dots \ge 330 \mu\text{A}$ from DI pin
Hysteresis	
Input voltage	1.9 V min
Input current	65 µA min
Input impedance	30 kΩ ±5%
I/O protection (V <sub>sup</sub> -to-channel)	
Input voltage	30 V max
Reverse-biased voltage	30 V max

 $<sup>^1~</sup>V_{\text{sup}}$  is the external power supply voltage.

Hold time <sup>1</sup>	.0 s min
Setup time <sup>2</sup>	.1 μs min
Update/transfer time <sup>3</sup>	.7 μs max
MTBF	, , , , , , , , , , , , , , , , , , , ,
	Bellcore Issue 2, Method 1,
	Case 3, Limited Part Stress
	Method



**Note** Contact NI for Bellcore MTBF specifications at other temperatures or for MIL-HDBK-217F specifications.

© National Instruments Corp. 11 NI 9426 Operating Instructions and Specifications Download from Www.Somanuals.com. All Manuals Search And Download.

<sup>&</sup>lt;sup>1</sup> *Hold time* is the amount of time input signals must be stable after initiating a read from the module.

<sup>&</sup>lt;sup>2</sup> Setup time is the amount of time input signals must be stable before reading from the module.

<sup>&</sup>lt;sup>3</sup> The update/transfer time is valid when the module is used in a CompactRIO system. When used in other systems, driver software and system latencies impact this time.

#### **Power Requirements**

Power consumption from chassis	
Active mode	615 mW max
Sleep mode <sup>1</sup>	5 mW max
Thermal dissipation (at 70 °C)	
Active mode	1.35 W max
Sleep mode	1.16 W max

#### **Physical Characteristics**

If you need to clean the module, wipe it with a dry towel.

## Safety

#### Safety Voltages

Connect only voltages that are within the following limits.

V<sub>sup</sub>-to-channel ...... 30 VDC max

<sup>&</sup>lt;sup>1</sup> The external power supply may power the module during sleep mode.

Isolation

Channel-to-channel	None
Channel-to-earth ground	
Continuous	60 VDC,
	Measurement Category I
Withstand	$\dots$ 1,000 V <sub>rms</sub> , verified by a 5 s
	dielectric withstand test

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as *MAINS* voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.



**Caution** Do *not* connect the NI 9426 to signals or use for measurements within Measurement Categories II, III, or IV.

#### **Safety Standards**

This product is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



**Note** For UL and other safety certifications, refer to the product label or visit ni.com/certification, search by module number or product line, and click the appropriate link in the Certification column.

#### **Hazardous Locations**

U.S. (UL)	. Class I, Division 2, Groups A, B, C, D, T4; Class I, Zone 2, AEx nA IIC T4
Canada (C-UL)	. Class I, Division 2, Groups A, B, C, D, T4; Class I, Zone 2, Ex nA IIC T4
Europe (DEMKO)	. Ex nA IIC T4

NI 9426 Operating Instructions and Specifications 14 ni.com Download from Www.Somanuals.com. All Manuals Search And Download.

#### Environmental

National Instruments C Series modules are intended for indoor use only but may be used outdoors if installed in a suitable enclosure. Refer to the manual for the chassis you are using for more information about meeting these specifications.

Operating temperature (IEC 60068-2-1, IEC 60068-2-2)	–40 to 70 °C
Storage temperature (IEC 60068-2-1, IEC 60068-2-2)	-40 to 85 °C
Ingress protection	. IP 40
Operating humidity	
(IEC 60068-2-56)	10 to 90% RH, noncondensing
Storage humidity	
(IEC 60068-2-56)	5 to 95% RH, noncondensing
Maximum altitude	.2,000 m
Pollution Degree (IEC 60664)	.2

#### **Shock and Vibration**

To meet these specifications, you must panel mount the system.

Operating vibration	
Random (IEC 60068-2-64)	5 g <sub>rms</sub> , 10 to 500 Hz
Sinusoidal (IEC 60068-2-6)	5 g, 10 to 500 Hz
Operating shock	
(IEC 60068-2-27)	30 g, 11 ms half sine,
	50 g, 3 ms half sine,
	18 shocks at 6 orientations

# **Electromagnetic Compatibility**

This product is designed to meet the requirements of the following standards of EMC for electrical equipment for measurement, control, and laboratory use:

- EN 61326 EMC requirements; Industrial Immunity
- EN 55011 Emissions; Group 1, Class A
- CE, C-Tick, ICES, and FCC Part 15 Emissions; Class A



**Note** For EMC compliance, operate this device with shielded cabling.

# **CE Compliance**

This product meets the essential requirements of applicable European directives, as amended for CE markings, as follows:

- 2006/95/EC; Low-Voltage Directive (safety)
- 2004/108/EC; Electromagnetic Compatibility Directive (EMC)
  - **Note** Refer to the Declaration of Conformity (DoC) for this product for any additional regulatory compliance information. To obtain the DoC for this product, visit ni.com/certification, search by module number or product line, and click the appropriate link in the Certification column.

## **Environmental Management**

National Instruments is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial not only to the environment but also to NI customers. For additional environmental information, refer to the *NI and the Environment* Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

#### Waste Electrical and Electronic Equipment (WEEE)



**EU Customers** At the end of their life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers and National Instruments WEEE initiatives, visit ni.com/environment/weee.htm.

#### 电子信息产品污染控制管理办法 (中国 RoHS)

中国客户 National Instruments 符合中国电子信息
产品中限制使用某些有害物质指令 (RoHS)。关于
National Instruments 中国 RoHS 合规性信息,请登录
ni.com/environment/rohs\_china。 (For information about China RoHS compliance, go to ni.com/environment/rohs\_china.)

# Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800, Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 358 (0) 9 725 72511, France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737, Italy 39 02 41309277, Japan 0120-527196,

© National Instruments Corp. 19 NI 9426 Operating Instructions and Specifications Download from Www.Somanuals.com. All Manuals Search And Download. Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466, New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 3390150, Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886, Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222, Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the *Terms of Use* section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: Helps-Patents in your software, the patents.txtfile on your media, of ni.com/patents.

© 2007-2008 National Instruments Corp. All rights reserved.

374712D-01 May08 Download from Www.Somanuals.com. All Manuals Search And Download. Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com