

NEC

Single Line Telephone

USER'S GUIDE

LOCATION OF CONTROLS

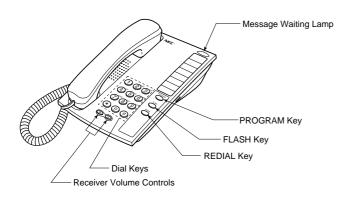

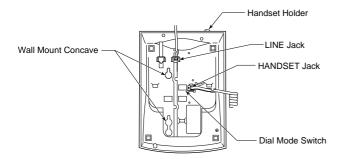

FEATURES

Making a Call

Answering a Call 1. Lift handset when the phone rings.

Lift handset.
Hear dial tone.

3. Dial number.

Last Number Redial

- 1. Lift handset.
- 2. Press key to redial your last call (up to 31 digits).
- ◆*Redial after flashing is not available.*

Flash


While on a call, press Key for outside line or PBX features.

■ Pulse to Tone Switching

When placing a call in DP (Pulse) mode, you can dial \bigstar to change to MF (Tone) dialing. The dial mode automatically reverts to DP mode when you hang up.

■ Adjusting Receiver Volume

Selecting Ringing Pitch and Ringing Volume

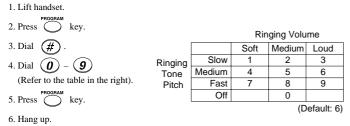

If you lift handset after setting to "0"(Off), the ringing tone automatically reverts to the previous value.

Message Waiting Lamp

Message Waiting Lamp lights when you have messages waiting (if your PBX system can send them). Also flashes when your telephone rings.

INSTALLATION

Package Contents





Wall-mount screws (2 pieces)

■ Installing the Telephone 1. Fit the other end of telephone line com

1. Fit the other end of telephone line cord to your telephone network outlet.

 
Selecting Dial Mode

Set the Dial Mode Switch either to DP(Pulse) or MF(Tone) according to the telephone network. For installation on a PBX, check with your supplier for the correct dialing mode.

Wall-Mounting

To wall-mount the phone:

- Mark off the correct positions for the screws (included), 83.5mm apart vertically opposed before drilling the wall.
- 2. Install the screw into the wooden wall.
- 3. Mount the telephone on the wall so that the screw head inserts into the concave on bottom of the telephone.



To store the handset without hanging up:

1. Hang the handset on the handset holder.



MM6017-1010

CARE AND MAINTENANCE

- 1. Avoid installing the phone where there is direct sunlight, or near heating appliances, since this may cause discoloration and warping.
- 2. When the telephone becomes dirty, wet a soft cloth with diluted neutral detergent, wring it out and wipe. Do not use strong cleaning agent or abrasive powder.
- 3. Keep away from TV sets, radios, etc. which may generate electrical noise.
- 4. Avoid dropping the handset and other rough treatment.

Warning:

The handset receiver may retain dangerous materials such as metallic pins and staples because the receiver induces magnet.

CHECKLIST FOR TROUBLESHOOTING

- ≻Does the hookswitch pop up ?
- ≻Is the dial mode switch (DP/MF) set to the correct position ?
- ≻Are phone line cord and handset cord securely plugged in ?

If you disconnect the phone from the network, the data in phone's memory such as redial number and ringing tone assignment will be erased (back to default) in a few hours.

◆For other problems, contact your supplier.

Nothing contained in this manual shall be deemed to be, and this manual does not constitute, a warranty of, or representation with respect to, any of the equipment covered. This manual is subject to change without notice and NEC has no obligation to provide any updates or corrections to this manual.

NEC Corporation Tokyo, Japan Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com