



NESPRESSO

**C 290
D 290**

Instruction Manual




Read this Instruction Manual and the safety instructions (pages 8 and 9) before operating the appliance!

Start up



Verify that the voltage indicated on the technical specifications plate on the bottom of the unit corresponds to your electrical installation.

1

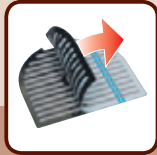

Remove protective foil



Refill with fresh water



Insert water tank

2

Rinse



3

Rinse



Daily care and cleaning



Remove the capsule used



Empty used capsule container







Empty




Refill with fresh water

Functions

Closing handle

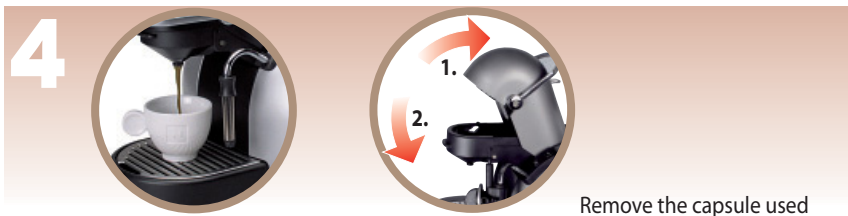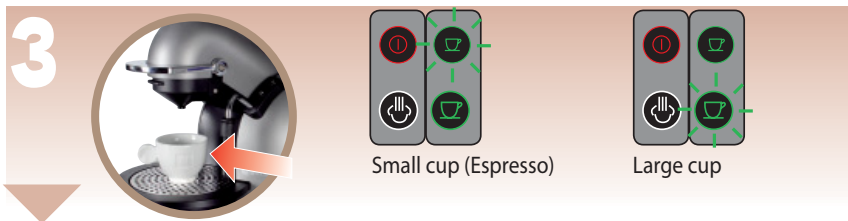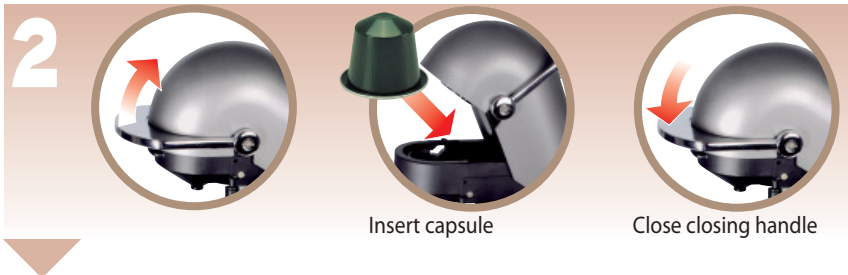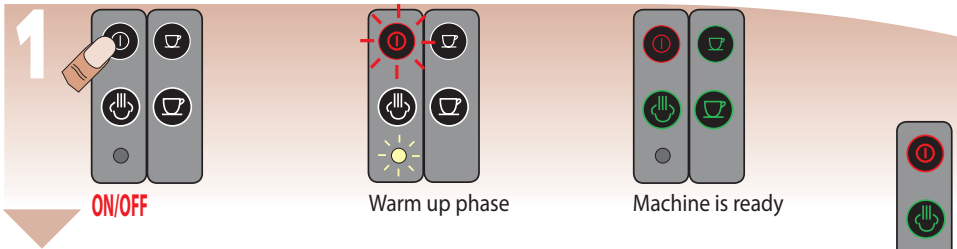



Programming the fill-up level

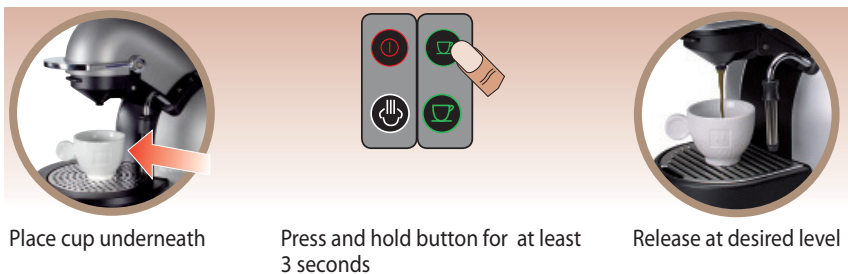




CAPPUCCINO – CAFFELATTE

Steam nozzle is very hot

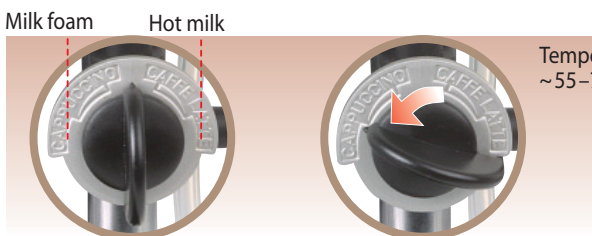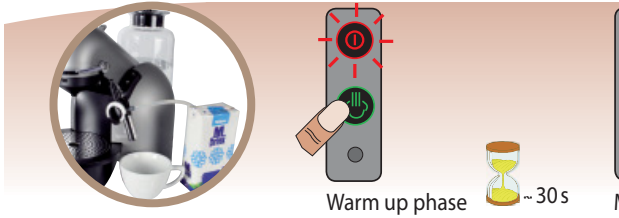

Switch position CAPPUCCINO or CAFFELATTE

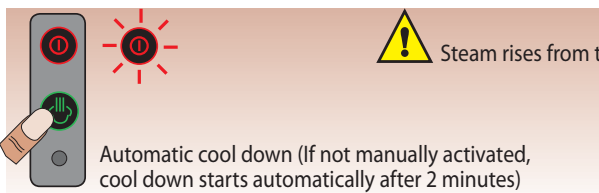


CAPPUCCINO – CAFFELATTE




CAFFELATTE:

CAPPUCCINO – CAFFELATTE:





Clean after each use

 Steam nozzle is very hot


1
Machine is ready

 Warm up phase
 ~ 30 s
 Machine is ready
 Refill with fresh water

Temperature change
5°C
2

 Steam rises from the drip tray
 Rinse for at least 10 s
 Automatic cool down
 Remove and clean nozzle once weekly

3

Hot water








 STOP

the drip tray
4

Heat up beverages

 Warm up phase
 ~ 30 s
 Machine is ready
 Do not touch the bottom of the cup

5

 Steam nozzle is very hot


 STOP
 Automatic cool down

Descaling

Decalcifier: aggressive to the surface of the casing

Never use vinegar!

Water hardness		Descalce after
fH	dH	
36	20	300
18	10	600
0	0	1200

1 Preparation

Remove steam nozzle

100 ml decalcifier + 500 ml water

min 1 l

2a Descaling water system

Warm up phase
~30s

Press simultaneously
~3 s

Flush out the entire tank
STOP

2b Descaling coffee system

Reuse decalcifier

min 1 l

Warm up phase
~30s

Press simultaneously
~3 s

Decalcify coffee system
~5x

Waste solution

3 Rinse

Clean and rinse with a lot of water. Refill with fresh water

Rinse coffee system
~5x

Flush residue from the tank
STOP

4 Clean

OFF

Clean

Machine is ready

Alerts

Empty used capsule container:



3 x beep



Machine is not ready:



 
1 x beep



Drip tray is not properly placed.



No coffee flows when the container is full.



1 x beep



Temperature is too high or too low.



wait ~ 30 seconds

Problems / Solutions



No control-LEDs turn on



Check plug, mains switch and fuses



Coffee not hot enough



Preheat cup (hot water without capsule), descale if necessary



Lower/upper jaws leak



Call the NESPRESSO Club



No hot water/steam



Remove steam nozzle and clean, descale if necessary



Milk does not froth



Check the switch position CAPPUCCINO – CAFFELATTE. Clean it if needed.



Noisy pump



Fill tank



Optional accessories



NESPRESSO descaling kit
Art. 3035/C290



Service-Kit 1b
Baseplate, ejector



Service-Kit 2
Capsule cage, capsule cage key

Spare parts



Water tank



Cover

Technical data



Environment



Packaging is made of recyclable materials.



Environnement protection first!

Your appliance contains valuable materials which can be recovered or recycled.
Leave it at a collection point.



NESPRESSO

Warranty according to the enclosed certificate of guarantee.

Date of purchase

Dealer's stamp / Signature

The guarantee becomes void if incorrectly connected.
The manufacturer cannot be held liable for damages caused by unintended purpose or by improper operation.



Safety advice

- Please read these instructions carefully before using your appliance for the first time and retain them for future use. Any use which does not conform to the instructions will absolve NESPRESSO from any liability.
- Emergency: remove immediately the power cord from the socket.
- Do not leave this appliance within reach of unsupervised children. The use of this appliance by young children or by disabled persons must be supervised at all times.
- Check that voltage indicated on the information plate on the appliance does in fact match that of your electrical system.
- Only use an earthed socket to connect the appliance. Any connection error will nullify the guarantee.
- Your appliance is intended solely for domestic and indoor use.
- Hot water, steam, spout and capsule holder are hot. Danger of burning injuries.
- Do not direct steam or hot water towards the body. Danger of burning injuries.
- Danger of finger injury in the capsule holder from the sharp capsule puncher.
- Heat up drinks: Dip the steam nozzle deep into the liquid in order to avoid hot water or steam splashes.
- Close the jaw firmly by using the handle. Do not open the capsule container during operation.
- Unplug your appliance as soon as you have finished using it. Before maintenance/cleaning unplug the machine and let it cool down. Do not unplug it by pulling on the cord.
- Do not use the appliance if it is not working correctly or if it has been damaged. If this happens, please contact an approved NESPRESSO service centre.
- Any intervention other than normal cleaning and maintenance by the customer must be carried out by an approved NESPRESSO service centre.
- Do not place the appliance, the power cord or the plug in water or any other liquid.
- Do not allow the cord to hang down within reach of children.

- The power cord must not be close to or in contact with hot parts of your appliance, close to a source of heat or resting on a sharp edge.
- If the power cord or the plug are damaged, do not use the appliance. To prevent any risk, you must have these replaced by an approved NESPRESSO service centre.
- Do not place the appliance on a hot surface such as a hotplate and never use it close to a naked flame.
- For your own safety, please use only the NESPRESSO accessories and spare parts which are suitable for your appliance.
- Do not use the appliance when the drip tray and the grille are not in place.
- All NESPRESSO appliances are subject to strict quality controls. Practical user tests are done with appliances selected at random, which explains any signs of use.
- Disposal: Unplug the machine and cut off the power cord. Bring machine and power cord to your next customer service or any public collection area.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>