

Entertainment Unlimited  
[www.next-base.com](http://www.next-base.com)

## ***NEXT BASE*** Gallery 15

8" Digital Photo Frame


**Ready to Change**



## CONTENTS

CONTENTS.....	1	GENERAL SETUP.....	20
IMPORTANT SAFETY INSTRUCTIONS.....	2	Slideshow.....	20
GENERAL INTRODUCTION.....	3	Music.....	21
PACKING CONTENTS.....	4	Video.....	22
PARTS AND CONTENTS.....	5	INITIAL SETUP.....	23
Button definitions.....	5	Language setup.....	23
Front side.....	5	Date & time setup.....	23
Left side.....	6	Date.....	23
Right side.....	6	Time.....	24
Bottom side.....	7	Clock display.....	24
Back side.....	7	Date display.....	24
Remote control.....	8	Display.....	25
Notes on using the remote control unit.....	8	Auto on /off.....	26
Replacing the battery.....	9	Link PC.....	27
Connect to the 8" x 6" frame.....	10	Default.....	27
Connect to the 10" x 8" frame using the		OTHER.....	28
Frame Mount.....	10	Dimension and parameter.....	28
How to use the integral stand support.....	11	Trouble shooting.....	29
CONNECTIONS.....	12	Smashed screen identification.....	30
Connect the adapter to the dc socket.....	12		
Inserting a memory card to gallery 15.....	12		
Inserting a USB stick to gallery 15.....	13		
Connect to a PC.....	13		
BASIC OPERATIONS.....	14		
Turning on the unit with adapter.....	14		
Turning on the unit with battery.....	14		
Selecting the file storage location.....	14		
Enjoy photo.....	15		
Photo menu.....	15		
Mark operation.....	16		
Displaying effect.....	17		
Enjoy music.....	18		
Music effect.....	18		
Enjoy video.....	19		
Video effect.....	19		

## IMPORTANT SAFETY INSTRUCTIONS

 
1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, shall be placed on the apparatus.
16.  WEEE statement: Please do not throw electronic devices into household waste and separate them for correct recycling.

## GENERAL INTRODUCTION

Thank you for purchasing this digital photo frame. Please read this manual carefully before operating and reserve it for future reference.


Nextbase Gallery15 digital photo frame can be placed either vertically or horizontally to fit the photos on display. Its internal rechargeable battery provides you with the freedom to make it portable and show photos without wires. Or, you can place it somewhere in a room for a continuous display by connecting it to the mains power supply. The built-in 1GB memory enables you to view large quantity of photos without any other storage device.

## PACKING CONTENTS

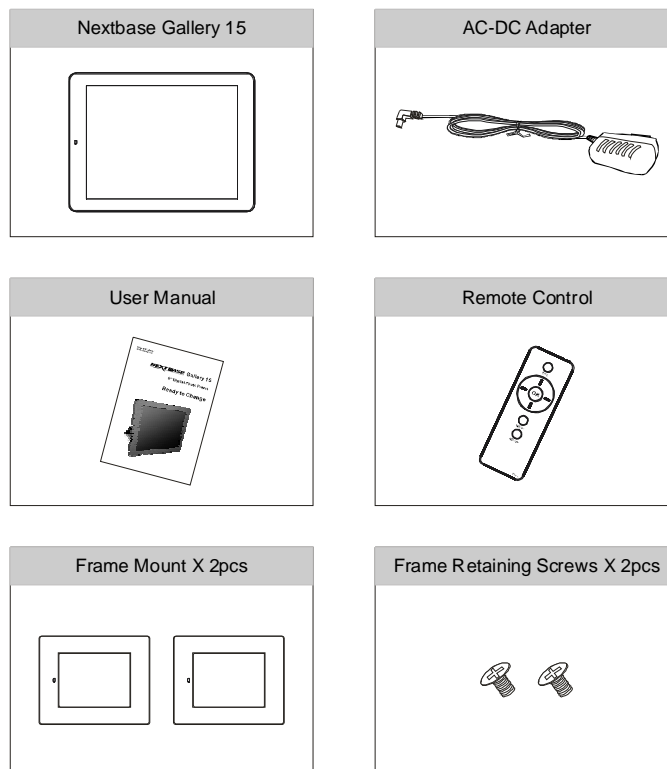

## PARTS AND CONTENTS
 
### BUTTON DEFINITIONS

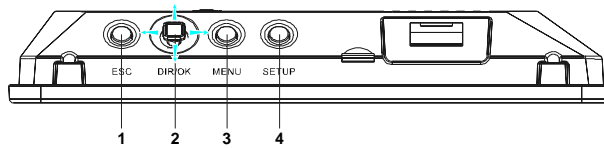


- 1. ESC (Escape)
- 2. DIRECTIONS /OK (also Volume up and down)
- 3. MENU
- 4. SETUP

### FRONT SIDE

 - 1. Remote control sensor


The remote control signals are received from here.

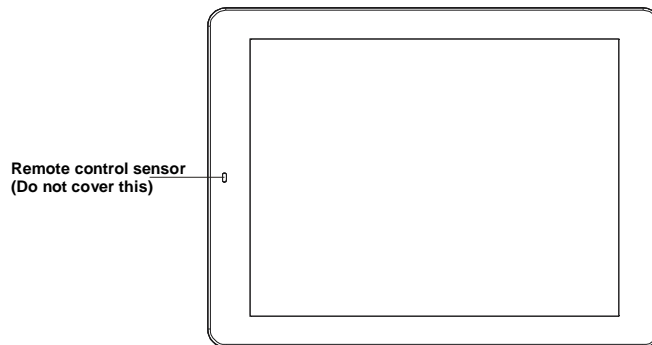

## LEFT SIDE

### 1.LED indicator

 
When using the adapter, the LED indicator is red when the battery is being charged.  
The red light turns off when the battery is fully charged.

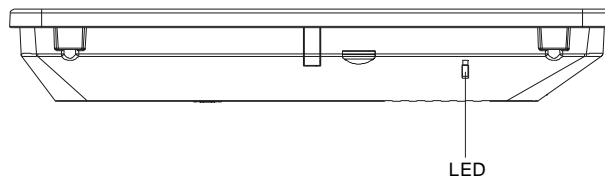

## RIGHT SIDE


### 1.USB port

 Connect the USB memory and PC from here.

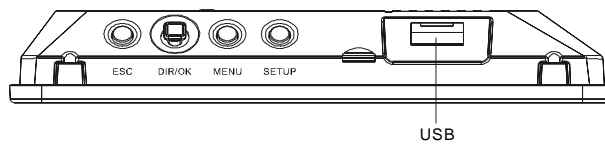


## BOTTOM SIDE

 1. DC IN 5V  
Connect the included AC/DC adapter from here.
2. Power ON/ OFF
3. Card Jack  
Support SD /MMC /MS Pro /xD card.

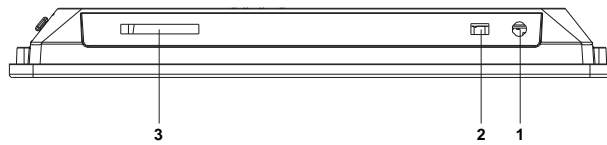

## BACK SIDE

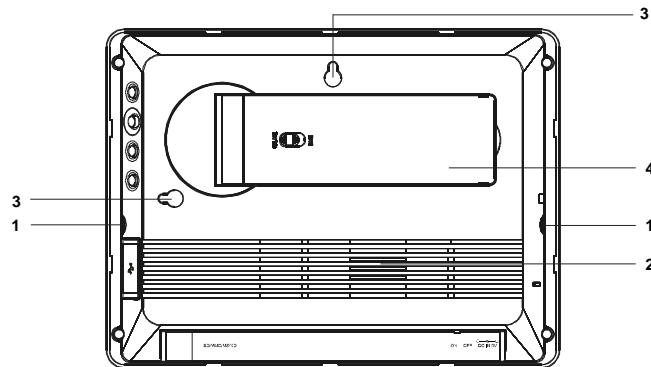 

1. Metal connectors  
Please apply the metal connector and the screws ( included in the package) to connect frames.  
(see page 10 for details)
2. Speaker
3. Wall hanging mount (Horizontal or vertical option)
4. Table top stand. Flip out, adjust to either vertical or horizontal use. See page 11.



## REMOTE CONTROL

### 1. ESC

To escape the current operation.  
Go back to the previous menu.  
When operating a Slideshow or full screen display, press ESC to exit the modes, and move back to the Thumbnail.

### 2. Up /Down /Left /Right

Direction key of Up /Down /Left /Right.  
Navigating in sub-directory.  
When operating as full screen size picture, Up /Down can be used to view the picture or the next picture.  
Left is Volume down, Right is Volume up at any situation there is audio sound playing.

### 3. OK

 
Press OK to confirm.  
Press OK to enter into the next menu or confirm the selection.  
In the Thumbnail page.  
a. Press OK to show full screen picture.  
b. If the picture is marked, press OK to cancel the mark when highlight frame stops at the picture, or press OK to mark an unmarked picture.  
In the music /video list, press OK to play the selected file.

### 4. MENU

Press Menu to choose operation options from Copy /Delete /Mark /Zoom /Rotate /Play /Volume.

### 5. Setup

Press Setup to choose settings from Slideshow, Music, Video, Language, date / time, PC link etc.

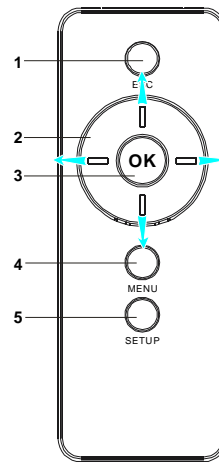

### Note:

 
The buttons on the remote control have exactly the same functions with those on Gallery 15.

## NOTES ON USING THE REMOTE CONTROL UNIT


1. Do not drop or step on the remote control unit or subject it to shocks. Note that the remote control unit may not work if there are obstacles between the remote sensor and itself.
2. Do not expose the remote sensor to strong light doing so may make operation impossible.
3. Use the remote control unit within the specified operating range.
4. Do not block the signal between the Gallery 15 sensor and the remote control. If the signal is blocked, the remote control will not work. Remote control sensor is shown on page 5.

## REPLACING THE BATTERY

1. Use your finger nail to press A and pull out the battery holder according to the indicated direction.

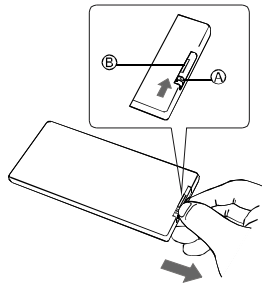


 2. Remove the old battery, and put the new battery on the battery holder with the +side facing upwards.

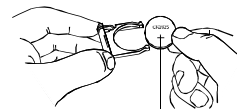

Lithium Battery (Cr2025)

 3. Fit the battery holder back to its place.

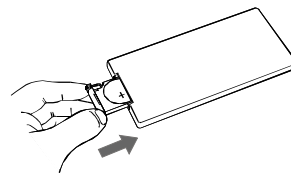

### NOTE:

- To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control unit for long periods of time (One month or more). If the battery leaks fluid, carefully take the battery out and wipe the battery holder, then replace a new lithium battery..  
Caution: The battery may present a risk of fire if mistreated. Do not recharge, disassemble, or heat it above 100°C.
- Replace battery with the same type.
- Dispose of used battery properly, keep away from children and do not dispose in of in fire.

 
### CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

## CONNECT TO THE 8" X 6" FRAME

Nextbase Gallery 15 can match with all standard 8" X 6" wooden frames as shown below:


1. Match the standard 8" X 6" frame with Gallery 15.
2. Move the locking latches upon the frame to secure the Gallery 15 in place.
3. If the chosen frame does not have its own locking latches, then use the metal connectors built in to the Gallery 15 for this purpose. Withdraw the metal connectors on shown below. Attach to the frame using screws supplied.

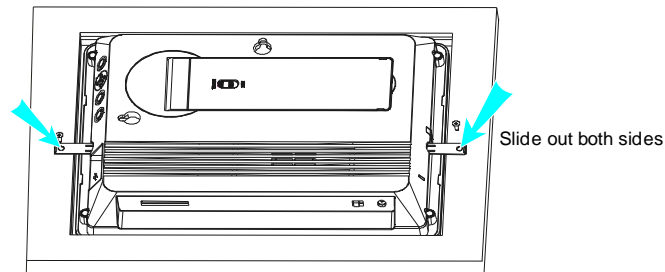


Note: Remote control is not possible if the sensor is blocked by the frame.

## CONNECT TO THE 10" X 8" FRAME USING THE FRAME MOUNT

 Your Nextbase Gallery 15 can match with all standard 10" X 8" wooden frames by using the Frame Mount contained in the accessories:

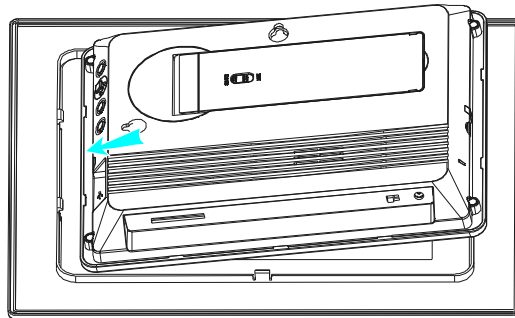

 Offer the Gallery 15 to the frame mount ensuring that the remote control sensor is aligned with the remote control window. Press down & click in to place securely.

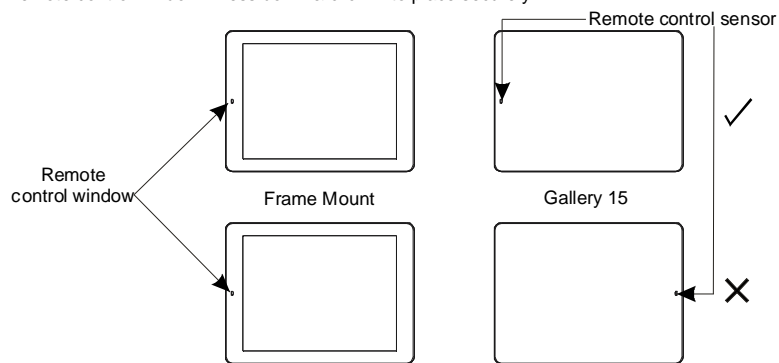


1. Choose your favorite 10" X 8" frame.
2. Mount Gallery 15 into the supplied Nextbase frame mount.
3. Then mount the frame mount, (with Gallery 15) into the standard 10" X 8" wooden frames, and fix securely.

## HOW TO USE THE INTEGRAL STAND SUPPORT

 
Nextbase Gallery 15 can be placed on a table top using the integral support. The Gallery 15 can be positional horizontally or vertically on desired.

1. Pull out the support from the back of the Gallery 15.
2. Rotate the support to either horizontal or vertical modes as required.
3. Adjust the length of the support by sliding the "Lock-Unlock latch, and then pull the support stand to the desired length.
4. Push the latch to lock to fix the position.
5. Lean the gallery 15 back to the desired position.

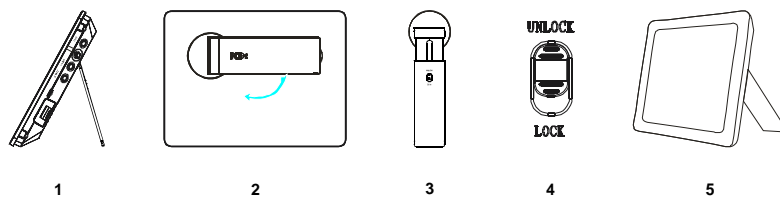


## CONNECTIONS
 
### 1. CONNECT THE ADAPTER TO THE DC SOCKET


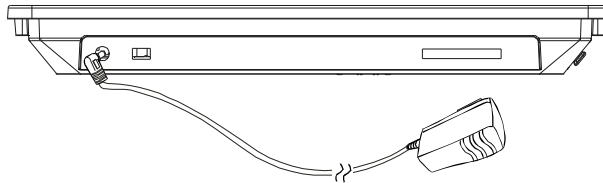


### 2. INSERTING A MEMORY CARD TO GALLERY 15

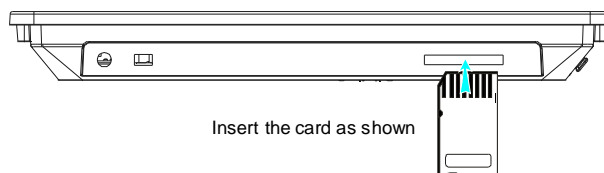

**Note:**

  1. Because of various size of memory card provided by different suppliers, please regulate the angle slightly if the memory card can't be read.
2. The mini SD adapter or dual voltage SD cards may not be recognized by the Gallery 15.
3. Please do not use the MS-PRO adapter with damaged pointed surfaces, or fault may occur.

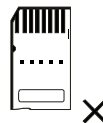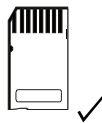


### 3. INSERTING A USB STICK TO GALLERY 15

Insert the USB stick as shown.

**Note:**

 1. Supply USB 1.1 only.
2. Support JPEG, BMP, MP3, Motion JPEG (AVI, MOV).
3. Connect the memory stick directly to the Gallery 15. Do not use an external cable or this may cause problems.

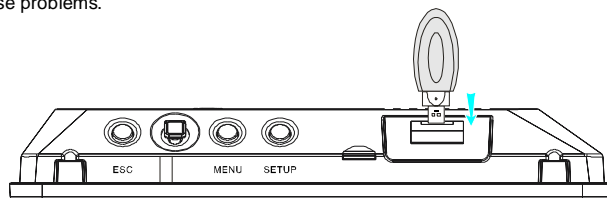


### 4. CONNECTING TO A PC

1. Use the USB cable (not included in the package) to connect your Gallery to your PC.
2. Press Setup, navigate Down to highlight Link PC, OK to choose between Yes / No.
3. Your PC should now detect 3 Removable Disks, if a memory card is being inserted in Gallery 15, choose the second Removable disk on your PC to use Gallery 15 as a card reader, or choose the last (third) Removable disk on your PC to use internal memory of Gallery 15 as Removable disk.
4. Now, the transfer of Photo /Music /Video between your Gallery and PC can be realized using normal file transfer methods.
5. After transfer, please press ESC on Gallery 15 to disconnect and return to operation mode.

**Note:**

 
Please do not disconnect the connection while transferring files.  
AC-DC adapter is recommended when connecting with PC.

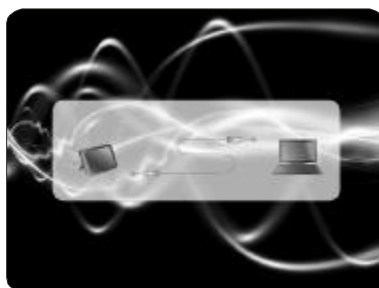

## BASIC OPERATIONS

### TURNING ON THE UNIT WITH ADAPTER

 
1. Connect the AC-DC adapter to a socket.
2. Connect the DC output plug of the adapter to the DC input jack of the main unit.
3. Move the switch to ON position to start the Gallery 15.
4. Slideshow will start if there are pictures loaded already.

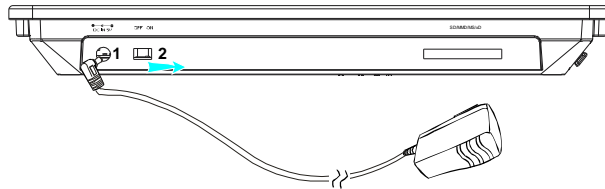

**Note:**


Slideshow will automatically start after turning on the power. Priority will be Card, USB, Internal Memory for the location of the files to be displayed.
 
### TURNING ON THE UNIT WITH BATTERY

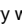1. Gallery 15 is able to play without adapter if the battery is charged.
2. The built-in battery is Li-polymer battery, 1500mAh.  
When fully charged, it can be played for approximately 180 minutes under silent slideshow condition with 10 seconds refresh interval.
3. Please re-charge the battery when the icon  appears on the right top corner.

### SELECTING THE FILE STORAGE LOCATION

 1. Press ESC to go back to Internal Memory, Memory Card, USB menu.
2. Highlight Internal Memory, Memory card or USB, select your desired storage location.
3. Enter the storage location and start your desire show.

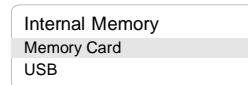

**Note:**

 
Please always select the storage location first.

## ENJOY PHOTO

1. Navigate Down to highlight **Photo**, press **OK** to enter Thumbnail.
2. Use **Up /Down /Right /Left** on remote control or buttons on Gallery 15 to choose photos for displaying, press **OK** for full screen display.
3. Press **UP** to go to the previous picture, and press **Down** to go the next picture.


Note:

1. Up to 1600 photos can be stored.
2. The speed of displaying pictures will vary. More time is required for larger file sizes. BMP is also slower to load than JPEG formats.

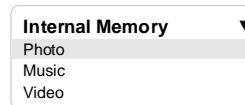

## PHOTO MENU

 1. Press **Menu** in Thumbnail, choose the effect from **Play Slideshow, Copy one, Copy all, Delete one, Delete all, Mark**.
2. Select **Slideshow** to enter slideshow display. Please refer to Slideshow setup for different effect setup.
3. Navigate **Down** to select **Copy one**, select the storage location from **Internal Memory, Memory Card, USB**. Select one and "**File copying**" appears on screen, and "**Files Copied**" indicates copying finished.
4. Navigate **Down** to select **Copy all**, follow the same steps to copy all pictures to your required storage location.
5. Navigate **Down** to select **Delete one**, select **Yes** to delete one single picture.
6. Navigate **Down** to select **Delete All**, select **Yes** to delete all pictures.
7. Navigate **Down** to select **Mark**. Please refer to **Mark Operation** for details.

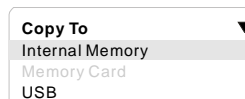



**Note:**

Press **Menu** or **Setup** during the slideshow can stop the slideshow and enter relative menu for effect choosing and setup.  
Press **ESC** to go back to Thumbnail, press **OK** to pause the photo slideshow.

## MARK OPERATION

1. Navigate Down to select Mark. Press **OK**, a tick box will appear next to each thumbnail displayed. A tick mark will also be shown against the selected photo.



2. Use the navigating key to choose pictures you want to mark, press **OK** to set a mark in the tick box, press **OK** again to unmark.

 
 


3. Press Menu to enter the menu Slideshow Marked, **Slideshow Unmarked, Copy Marked, Copy Unmarked, Delete Marked, Delete Unmarked, Cancel All Mark.**
4. Press OK to select slideshow Marked. The marked pictures will play a slideshow automatically.
5. Navigate Down to select slidershow unmarked. The unmarked pictures will play a slideshow automatically.
6. Navigate Down to select Copy Marked. The marked pictures will be copied automatically.
7. Navigate Down to select Copy Unmarked. The unmarked pictures will be copied automatically.
8. Navigate Down to select Delete Marked. The marked pictures will be deleted automatically.
9. Navigate Down to select Delete Unmarked. The unmarked pictures will be deleted automatically.
10. Navigate Down to Cancel All Marked. All marks will be cancelled.




## DISPLAYING EFFECT

1. Press **Menu** during full screen display, select from **Play Slideshow, Counter Clockwise Rotate, Clockwise Rotate, Zoom in, Copy, Delete, Music ON /OFF.**
2. Navigate down to play slideshow to start the slideshow.
3. Navigate **Down** to Counterclockwise Rotate, picture can be counterclockwise rotated.
4. Navigate **Down** to Clockwise Rotate, picture can be clockwise rotated.
5. Navigate **Down** to **Zoom in**, press **OK** to zoom 2x, 4x, 8x, 16x. Press **ESC** to cancel zoom.
6. Navigate **Down** to **Copy OK** to select storage location, press **OK** again to confirm.
7. Navigate **Down** to **Delete**, **OK** to select between **Yes / No**. Press **OK** again to confirm.
8. Navigate Down to Music ON/ OFF, select Music ON to turn on the music, vice versa.
9. Navigate Left /Right to regulate the volume when there is music playing.

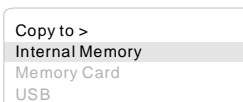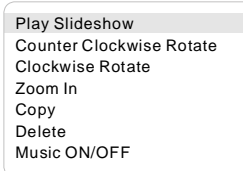


## ENJOY MUSIC

 1. Always remember to choose from three storage locations to enter **Photo, Music, Video** menu.
2. Navigate **Down** to select **Music**, press **OK** to enter song list.

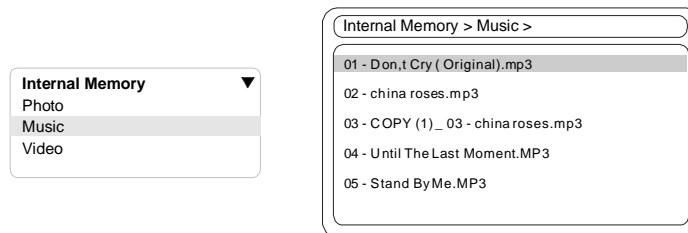


 3. Use **Up /Down** to choose songs for playing, press **OK** to play the song.
4. When playing music, press **Left** to decrease volume, press **Right** to increase volume. Press **OK** to pause.
5. When the music tracks are displayed, press, press **Menu** to enter Copy One, Copy All, Delete One, Delete All, Mark.

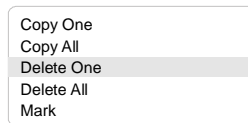

## MUSIC EFFECT

 1. Press **Menu Navigation Key** while playing a song, choose from **Pause, Stop, Next, Previous**.
2. Select **Pause** to pause the playing, press **OK** to confirm. Press **Menu** again, select **Play** to continue.
3. Press **Left /Right** to adjust the volume.

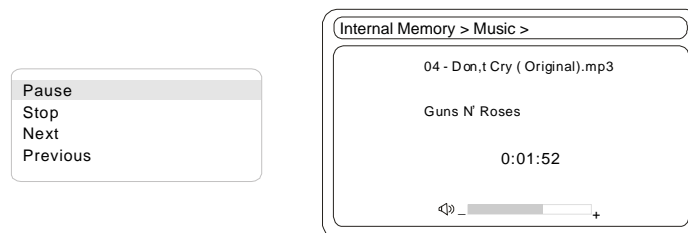


4. Navigate **Down** to select **Stop**, press **OK** to confirm and exit to the song list.
5. Navigate **Down** to select **Next**, press **OK** to **Next** song.
6. Navigate **Down** to select **Previous**, press **OK** to **Previous** song.
7. Press **ESC** to go to the music list whilst music playing, press **ESC** to go back to Photo, Music, Video menu, photo show can be started without stopping the music.

**Note:**

 Playing photos with music can be performed only when photos and music are stored in the same storage location.

### ENJOY VIDEO


1. Navigate **Down** to select **Video**, press **OK** to enter video list.
2. Use **UP/ DOWN** on remote control or buttons on Gallery15 to choose video file and press **OK** to play.

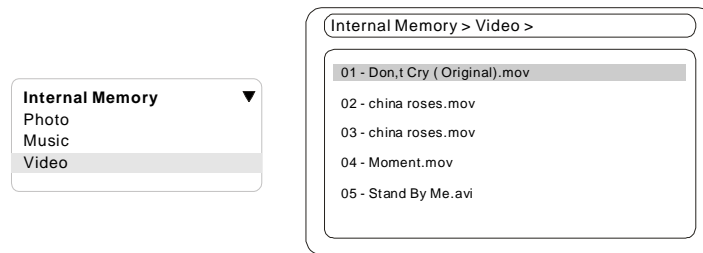

3. When playing video, press **Left** to decrease volume, press **Right** to increase volume. Press **OK** to pause.
4. When the video files are listed, press **menu** to **OK Copy One, Copy All, Delete One, Delete All, Mark**.

### VIDEO EFFECT

 1. Whilst the video is playing, press **menu** to enter **Pause, Stop, Next, Previous** menu.
2. Press **pause** to pause the video.
3. Navigate to **Down** to stop the Video.
4. Navigate to **Down** and press **OK** to next.
5. Navigate to **Down** and press **OK** to previous.
6. Press **ESC** to go back to the video list.

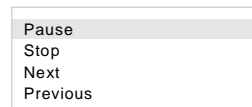

**Note:**

Only **MOV** or **AVI** files will play on the Gallery 15, other file types will not play. Files must be recorded within the following parameters to play correctly. Only support Motion JPEG up to **VGA@30fps (640X480)** in **MOV** or **AVI** format.

 
## GENERAL SETUP

### SLIDESHOW


1. Press **setup** to enter the setup menu  
Press **Slideshow** to enter **Slideshow setup**.




2. Press **Delay Time** to select the slideshow delay time, you will have the selected delay time between two pictures. There'll be longer interval when displaying pictures of bigger size.

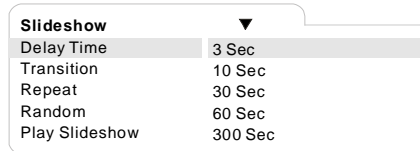

 
3. Navigate **Down** to select **Transition**, select different effects of picture emergence. Select **Off** to disable the Transition, and **Random** to enable random effect of transition.

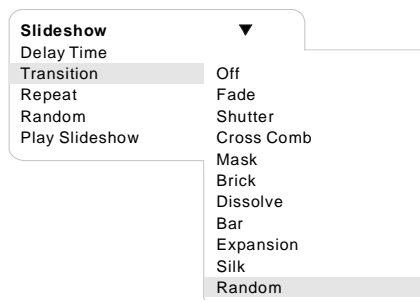

 4. Navigate **Down** to select **Repeat**, select **On**, slideshow will repeat from the first picture to the last one automatically.

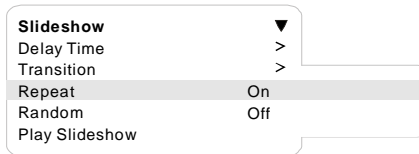

 5. Navigate **Down** to select **Random**, select **On**, slideshow will pick pictures randomly; select **Off**, slideshow will play one by one following the order

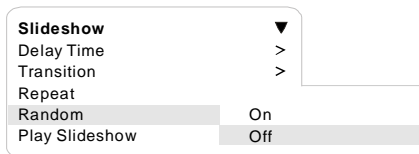


6. Navigate Down to **Play Slideshow**, press **OK** to enter slideshow immediately.




## MUSIC

 
1. Press **Music** to enter **Music setup**.

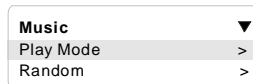

 2. Press **Play Mode** to select from Play One, Play All, Single Repeat, Repeat All.

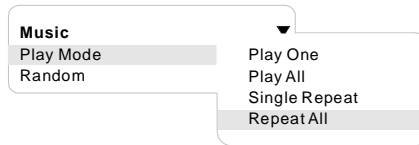


 3. Press **Random**, select **On**. Gallery 15 system will pick music randomly from the music list; select **Off**, music will be played one by one following the order.

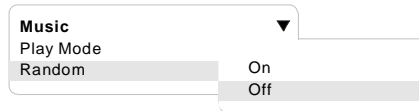


## VIDEO

 
1. Press **Video** to enter **Video setup**.

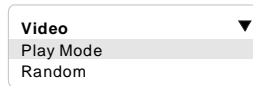

 2. Press **Play Mode** to select from **Play One, Play All, Single Repeat, Repeat All**.

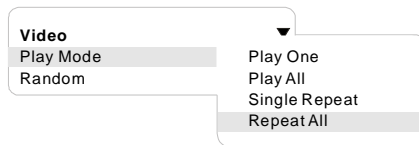

 3. Press **Random**, select **On**. Gallery 15 system will pick video randomly from the video list; select **Off**, video will be played one by one following the order.

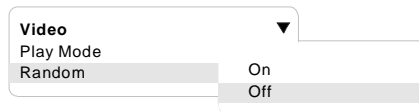

## INITIAL SETUP

 
### LANGUAGE SETUP

1. Press **Setup** to enter the setup menu.
2. Navigate Down to select Language and press **OK** to confirm.  
There are five languages for you to select: English, German, French, Italian, Spanish.




### DATE & TIME SETUP

1. Press **Date & Time** to enter the setup list.
2. Navigate **Down** to select the setup item.
3. Press **OK** to confirm required setup item.

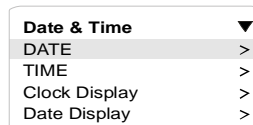

### DATE

 
1. Press **Date**, press **OK** to enter **Year, Month, Day** menu.
2. Navigate **Up** and **Down** to select **year**, press **OK** to enter **Month** selection. Follow the same way to select **Month** and **Day**.
3. Press **OK** after going through all three selections to confirm.

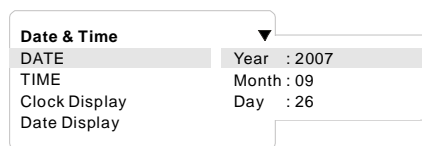



## TIME

 1. Select **TIME**, press **OK** to enter **Hour, Minute, 24 Hour** menu.
2. Navigate **Up** and **Down** to select the **Hour**, press **OK** to enter **Minute** selection. Follow the same way to select **24 Hour** selection. You can choose the display of 24 hour pattern **On** or **Off**.
3. Press **OK** after going through all three selections to confirm.

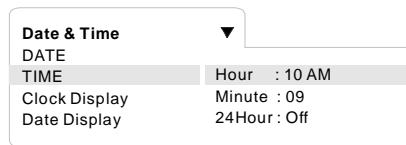


## Clock Display

1. Select **Clock Display**, press **OK** to enter **On/Off** menu.
2. Press **On** to make the clock displayable, or navigate down to select **Off**, vice versa.
3. Press **OK** to confirm your selection.




## Date Display

 1. Select **Date Display**, press **OK** to enter **On/Off** menu.
2. Press **On** to make the Date displayable, or navigate down to select **Off**, vice versa.
3. Press **OK** to confirm your selection.

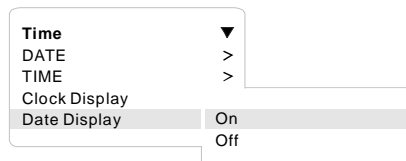


## DISPLAY

 
1. Navigate Down to select Adjust, press **OK** to enter Brightness, Contrast, Color menu.



 
2. Press Brightness to enter brightness adjustment, press **OK** and Left /Right to adjust, press **OK** again to confirm and exit the adjustment.

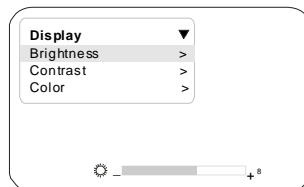

 3. Navigate Down to select Contrast, press **OK** and Left /Right to adjust, press **OK** again to confirm and exit the adjustment.

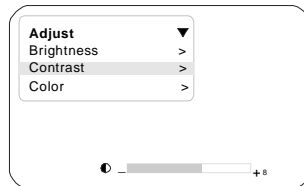


 4. Navigate Down to select Color, Press **OK** and Left /Right to adjust, press **OK** again to confirm and exit the adjustment.

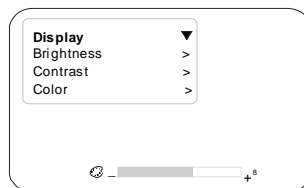


## Auto On / Off

 1. Navigate **Down** to select **Auto On /Off**, press **OK** to enter **Enable, Auto On, Auto Off** menu.



 
2. Press **Enable** to select between **On / Off**, press **On** to enable the **Auto On /Auto Off** function.



3. Navigate **Down** to Highlight **Auto On**, press **Up /Down** to adjust **Hour**, press **OK** to confirm and enter **Minute** adjustment, press **Up /Down** to adjust Minute.



 
4. Press **OK** to confirm the adjustment.
5. Navigate **Down** to highlight **Auto Off**, follow the same steps of **Auto On**.

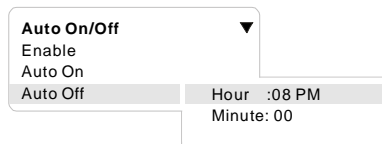

Gallery will automatically turn ON/ OFF according to the above set-up steps after finishing the setup.

### Link PC

 
1. Navigate **Down** to highlight **Link PC**, press **OK** to enter **Yes /No** menu.
2. Choose between **Yes /No**, press **OK** to confirm and exit the menu.



See page 13 for details.

### Restore Factory Setting

 Navigate Down to restore the original set-up by supplier.



## OTHER

### DIMENSION AND PARAMETER

<b>Product Name:</b>	<b>Gallery 15</b>
<b>Power Supply:</b>	<b>Input 100-240V AC Output 5V DC 2Amp</b>
<b>Resolution</b>	<b>800X600X3 Pixels</b>
<b>Battery</b>	<b>1500mAh</b>
<b>Screen Aize</b>	<b>8"</b>
<b>Screen Ratio</b>	<b>4:3</b>
<b>Speaker Output</b>	<b>1W</b>
<b>Dimension:</b>	<b>201 X 150 X 22.8 mm</b>
<b>Net Weight:</b>	<b>500g</b>

## TROUBLE SHOOTING

PHENOMENON	SOLUTION
<b>Cannot turn on the Gallery</b>	<ol style="list-style-type: none"> <li>1. Check whether the battery has been charged, or charge the battery.</li> <li>2. Use the adapter to supply power.</li> </ol>
<b>Automatically turns off</b>	<ol style="list-style-type: none"> <li>1. Check whether the battery has been charged, or charge the battery.</li> <li>2. Check the setting of "Auto off " from setup menu.</li> </ol>
<b>No sound /Low Volume</b>	<ol style="list-style-type: none"> <li>1. Make sure there are audio files contained.</li> <li>2. Position the volume setting of the unit to a suitable level.</li> </ol>
<b>Blurred Image</b>	<ol style="list-style-type: none"> <li>1. Check the original size and quality of the pictures.</li> </ol>
<b>Video doesn't play</b>	<ol style="list-style-type: none"> <li>1. Check video format is MOV or AVI (other format not compatible)</li> </ol>
<b>IR remote doesn't work</b>	<ol style="list-style-type: none"> <li>1. Change batteries in the remote control.</li> <li>2. Ensure that the IR sensor is not covered by object or the frame. Sensor location is shown on Page 5.</li> </ol>
<b>Blurred or no picture</b>	<ol style="list-style-type: none"> <li>1. Smashed screen.</li> <li>2. Non warrantable damage.</li> </ol>
<b>Pixel failure</b>	<ol style="list-style-type: none"> <li>1. The LCD screen contains 1,440,000 pixels. Pixels can fail during normal product life. 1 pixel=0.00007% failure rate. One pixel failure / per year of operation is considered normal and not a cause for concern.</li> </ol>

## SMASHED SCREEN IDENTIFICATION

A Liquid Crystal Display (LCD) screen is a multilayer complex component.

Under the tough outer plastic layer, the glass sandwich beneath holds the LCD crystals in place, which are themselves suspended in fluid. In the unfortunate event of an accident, particularly a sharp localized impact, the glass will break. The tough plastic outer sheet on the surface of the glass keeps all the glass intact underneath, preventing shards from falling out. This is a specific safety feature, particularly implemented for the younger user and also for in-car use. The broken glass normally shows signs of the impact mark and also cracks radiating away. The resultant fluid leakage renders the panel inoperable.

Symptoms are often a dark round mark, a white screen without picture and maybe some multicolored lines. Depending on the individual break, an element of the TV picture may remain for a while, but not for long, as the fluid leaks away. Some inky black staining may also appear upon the crack lines, as the fluid escapes.

Unfortunately a break of this nature is not covered under the manufactures warranty, as it is accidental damage to the product, rather than an original defect from manufacture. Please see below for some sample images of broken LCD panels for reference.



## DAMAGE REQUIRING SERVICE

Have the unit serviced by a qualified service technician if:

- The unit has been exposed to rain or water.
- The unit does not seem to operate normally.
- The unit exhibits a marked change in performance.

**DO NOT ATTEMPT TO SERVICE THE UNIT BY YOURSELF!**



## **NEXTBASE Gallery 15**

[www.next-base.com](http://www.next-base.com)

Gallery 15 - ENG - MANUAL - NB - B1



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>