



# DIGITAL PHOTO KEYCHAIN

*See Things Differently™*

 


INSTRUCTION MANUAL  
N1-107

*Wherever you go...*

Thank you for purchasing the Nextar N1-107 Portable Keychain Photo Album. Please read this manual to get the optimum performance out of this product.

**Nextar Digital Album (1.2" OLDE) Features:**

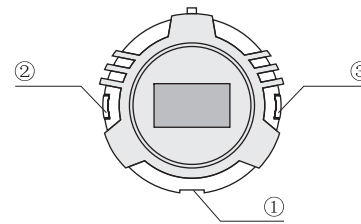

**Button Functions**

1. USB (Supports USB 1.1 & 2.0)
2. Navigate DOWN
3. Power ON/OFF and show time

**Detailed Instructions:**

Supported graphic formats

- BMP
- JPG
- GIF

**Product Specification:**

1. Store up to 100 pictures.(With 16M flash memory)
2. Image format: BMP, JPG, GIF
3. Display size is 1.2" OLED 96 x 64 Pixel, 65K colors.
4. Built-in rechargeable Li-ion polymer battery.
5. Driverless for Windows XP, 2000, Millennium, Mac OS 8.0 or above.

**A. Device Features**

7. Support: Photo Playback, Slide Show, Auto Advance.
8. Time/Date displayed in OSD mode.
9. Two keys: Press and hold for ON/OFF(Auto Sleep in 3 minutes), Navigate Down.(refer to the above picture)
10. Shaking key: Shake for next frame.
11. Automatic Power off: Power off after 10 minutes idle to save power.
12. USB charge Connect to USB prot for recharge

**B. PC Application Software Features:**

1. Edit pictures and the display order.
2. Edit the color of the background and character.
3. Set the display and play mode.

4. Support the picture format in JPG, BMP, GIF.
5. Support time and date synchronize. When the device is plugged in PC's USB port, the time and date will be synchronized with the PC.

**C. PC Application Software Functions:**

**Function 1.**

If the selected picture is smaller than the size of the display, the picture will appear middle of the LCD display. The empty space will be filled by background color. You can preview the picture and make sure it is displayed as you expected.




If PIC is shorter,the space will be filled with background color and set the PIC in the middle.



If PIC is narrower,the space will be filled with background color and set the PIC in the middle.

**Function 2:**

If the picture size is smaller than the display size, the empty space will be filled with the background color. You can select the background color - There are 48 preset colors (see the figure below) .:

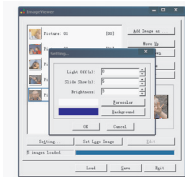 **Function 3:**

You can edit the display order of pictures by using application program. All pictures will be in sequential order. New pictures will be arranged at the end of the list. You can move the picture up or down by selecting the picture and clicking the [Move Up/Move Down] button.

**Function 4:**

In the USB mode, you can run the application program to set the time interval for display.. The

shorter the time interval, the better the animation effect.. Every picture is in normal scanning mode named as Auto Advance Mode. For TFT LCD display, many pictures can be shown sequentially in the Slide Show mode.


**Function 5:**

In the USB mode, to activate static picture display, click the No Slide Show setting in application program. In this mode, the same picture will be shown when the keychain is powered on and if the Up is not pressed.

**Function 6:**


In the USB mode, you can edit the picture by selecting the picture and pressing Edit. You can view the edited picture in a small box, displayed on the LCD.

 **Note:** You can edit pictures only in the USB mode

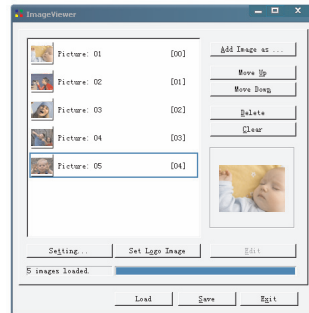

|                     |   |
|---------------------|---|
| <b>Add Image as</b> | Input picture to Digital frame. You can add pictures through file explorer. |
| <b>Move Up</b>      | Move the picture up   |
| <b>Move Down</b>    | Move the picture down   |
| <b>Delete</b>       | Delete the selected picture   |
| <b>Clear</b>        | Delete all the pictures   |

 6

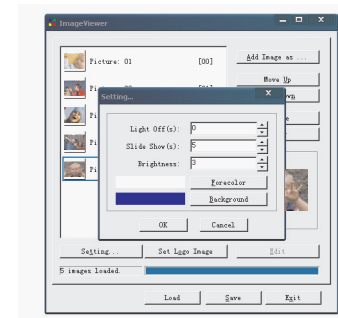

- “Setting”** :
- 1) Set the backlight on time.
  - 2) Set the auto run time.(Pictures will be displayed in the set time interval)
  - 3) Set the backlight level.
  - 4) Set the fore color.
  - 5) Set the background color

**“Set Logo Image”** : Not used

**“Rotate”** : Rotate the selected picture by 90 degree.

7

 


**“Edit”:** Load the selected picture and enter the Edit mode. You can then use a rectangle to select the desired image to save it in the flash. (For better results, select the rectangle as small as possible. The displayed result as shown in the rectangle box)

Click **“Edit”**, the picture will be loaded as shown above.

Double-click the picture, the picture will be loaded to the small box, which is the same as displayed in the product.

8

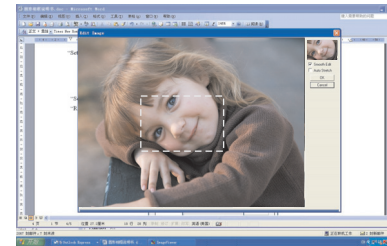

Select the small box, which you want to show on the display. The result will be displayed in the small box as shown in the figure above.

**Load :** Load the pictures from flash to PC.

**Save :** Save the pictures from PC to flash.

**Exit :** Exit the application software.

Note: You must run “save” before exit to save the edited pictures to the flash.

9

**D. Accessories**

- USB cable
- User manual
- Keychain
- Product registration card
- Warranty card

NOTE: The Keychain Photo Album LCD screen may have slight variations in contrast - that is normal. Do not attempt to open the unit as that will void the warranty. Only use water and a soft cloth to clean the screen. Do not store in very hot/cold/humid locations. Use only included cables and connectors.

Nextar may find it necessary to modify, amend or otherwise change or update this manual.

We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice.

All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals, updated drivers or other information, be sure to visit our website at:

[www.Nextar.com](http://www.Nextar.com)

Or write us at:

Nextar

1661 Fairplex Dr.

LaVerne, CA USA 91750

Copyright©2007

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>