 


2011 **NISSAN**

ENTERTAINMENT SYSTEM



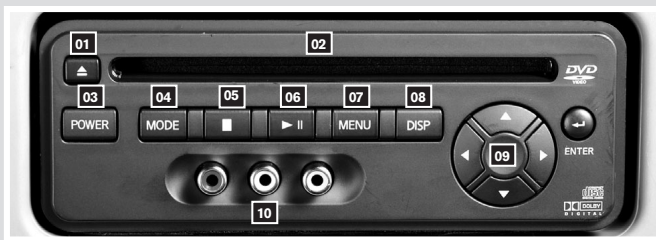

DVD PLAYER CONTROLS (Titan only)

- 01** EJECT BUTTON – Press once to eject a DVD from the player.
- 02** DVD SLOT – Insert the DVD here.
- 03** POWER ON/OFF BUTTON – With the ignition in the ACC or ON position, press this button to turn the DVD player on or off.
- 04** MODE BUTTON – Press this button to select the Audio/Video source between DVD and AUX input.
- 05** STOP BUTTON – Press the button once to stop the disc in play.
- 06** PLAY/PAUSE BUTTON – Press this button once to begin play; press again to pause play.
- 07** MENU BUTTON – Press this button when the DVD is in PLAY mode and the DVD menu will appear in the display. Press the button again to resume play.
- 08** DISPLAY BUTTON – Press this button for less than 2 seconds and the display menu will appear on screen; press the button for longer than 2 seconds to remove the display information screen.
- 09** NAVIGATION KEYS – These buttons perform a number of functions, depending on which mode the player is in.
- 10** INPUT JACKS – These are used to plug additional compatible devices into the DVD system. They are color-coded (yellow – video input; white – left channel audio input; red – right channel audio input).

PLAYING A DIGITAL VIDEO DISC

The DVD player plays DVD videos, video CDs and audio CDs. To play a DVD, begin by placing the ignition switch in the ACC or ON position and pressing the **POWER** button. Insert the disc into the slot. The disc is automatically drawn in. The player can be operated by using the control panel buttons or the remote control. The DVD player can be operated by pressing the **CD•DVD** button. Press the **REAR ON•OFF** button to toggle the rear audio control on and off. Press the **CD•DVD** button to toggle between the CD and DVD operation.

PLAYING A COMPACT DISC

The DVD player plays DVD videos, video CDs and audio CDs. To play a CD, begin by placing the ignition switch in the ACC or ON position and pressing the **POWER** button. Insert the disc into the slot. The disc is automatically drawn in. The player can be operated by using the control panel buttons or the remote control.

USING THE AUXILIARY INPUT JACKS

Auxiliary input jacks are used to plug in compatible devices, such as video games and portable video players. The jacks are located on the control panel and are color-coded for identification. Refer to the section titled “DVD PLAYER CONTROLS” for a description.



 
DVD PLAYER CONTROLS (Armada and Pathfinder only)

The NISSAN Mobile Entertainment System can be played on the front control panel screen by inserting a DVD, placing the shift selector lever in P (Park) and applying the parking brake.

- 01 EJECT BUTTON** – Press once to eject a DVD from the player.
- 02 DVD SLOT** – Insert the DVD here.
- 03 INPUT JACKS** – These are used to plug additional compatible devices into the DVD system. They are color-coded (yellow – video input; white – left channel audio input; red – right channel audio input).

ON SCREEN DVD OPERATION KEYS

To operate the DVD drive, touch the preferred key or select the preferred key displayed on the operation screen using the NISSAN controller and press the ENTER button.

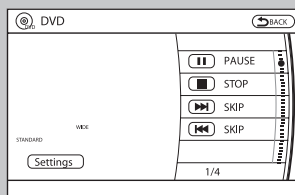

- || PAUSE key** - Touch the || PAUSE key to pause the DVD. To resume playing the DVD, touch the ▶ PLAY key. To pause the DVD, it is also possible to press the || button on the keypad of the remote controller.
- ▶ PLAY key** - Touch the ▶ PLAY key to start playing the DVD, for example, after pausing the DVD. To start playing the DVD, it is also possible to press the ▶ button on the keypad of the remote controller.
- STOP key** - Touch the ■ STOP key to stop playing the DVD. To stop playing the DVD, it is also possible to press the ■ button on the keypad of the remote controller.
- ▶▶ SKIP (forward) key** - Touch the ▶▶ SKIP key to skip the chapter(s) of the disc forward. The chapters will advance the number of times the ▶▶ SKIP key is touched. Touch and hold the ▶▶ SKIP key for more than 1.5 seconds to fast forward the disc. When the ▶▶ SKIP key is released, the disc will be played normally. To skip the chapter(s) forward, it is also possible to press the ▶▶ button on the keypad of the remote controller.
- ◀◀ SKIP (rewind) key** - Touch the ◀◀ SKIP key to skip the chapter(s) of the disc backward. The chapters will go back the number of times the ◀◀ SKIP key is touched. Touch and hold the ◀◀ SKIP key for more than 1.5 seconds to reverse the disc. When the ◀◀ SKIP key is released, the disc will be played normally. To skip the chapter(s) backward, it is also possible to press the ◀◀ button on the keypad of the remote controller.

For additional information, see "NISSAN Mobile Entertainment System (MES) (if so equipped)" in the Owner's Manual.

PLAYING A DIGITAL VIDEO DISC

The DVD player plays DVD videos, video CDs and audio CDs. To play a DVD, begin by placing the ignition switch in the ACC or ON position. Insert the disc into the slot. The disc is automatically drawn in. The player can be operated by using the control panel buttons or the remote control. The DVD player can be operated by pressing the **DISC/AUX** button. Press the **REAR CTRL** button to toggle the rear audio control on and off. Press the **DISC/AUX** button to toggle between the CD, AUX and DVD operation.

PLAYING A COMPACT DISC

The DVD player plays DVD videos, video CDs and audio CDs. To play a CD, begin by placing the ignition switch in the ACC or ON position. Insert the disc into the slot. The disc is automatically drawn in. The player can be operated by using the control panel buttons or the remote control.

USING THE AUXILIARY INPUT JACKS

Auxiliary input jacks are used to plug in compatible devices, such as video games and portable video players. The jacks are located on the DVD player and are color-coded for identification. Refer to the section titled "DVD PLAYER CONTROLS" for a description.



FLIP DOWN SCREEN

The flip down screen has a wireless remote control receiver. The screen rotates down for viewing and back up into the housing when not in use.



 
REMOTE AUDIO SYSTEM CONTROLS (if so equipped, Pathfinder only)

Press the **REAR CTRL** button on the front radio control panel to allow the remote controller to control some audio system functions in the rear seats. Press the **REAR CTRL** button again to allow the audio system to be controlled by only the front controls.

01 INFRARED TRANSMITTER LENS*

02 REAR DISPLAY SCREEN

*Red transmitter will be visible when infrared headphones are on.

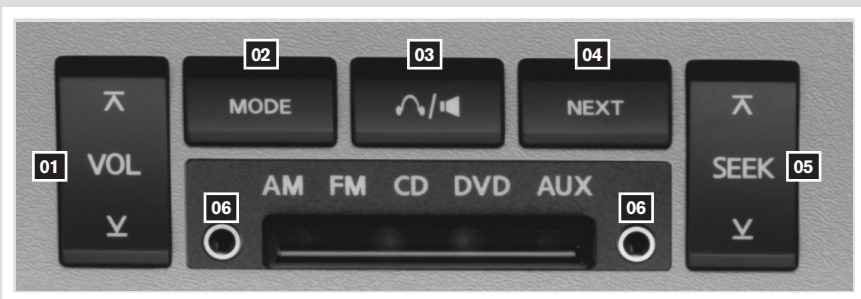

REAR AUDIO CONTROLS (if so equipped, Titan and Armada only)

To lock or unlock audio controls, depending on what DVD system you have, press the **REAR ON•OFF** or **REAR CTRL** button on the front radio control panel.

- 01 VOLUME CONTROL BUTTON** – This button allows the rear passengers to adjust the headphone volume.
- 02 MODE BUTTON** – This button allows the rear passengers to change between FM, AM, CD, and DVD.
- 03 SPEAKER CONTROL BUTTON** – Press this button to turn the rear speakers off and the headphones on; press again to turn the rear speakers on and the headphones off.
- 04 NEXT BUTTON** – When this button is pressed while in FM or AM mode, the radio will change to the next preset. The **NEXT** button does not function while in XM® (if so equipped) radio mode or when playing a DVD or CD.
- 05 SEEK BUTTON** – In FM or AM mode this button allows rear seat passengers to find the next radio station up or down the band frequency. In CD mode, this button allows the rear passengers to choose the next or previous selection on the disc.
- 06 HEADPHONE JACKS** – These allow two rear seat passengers to listen privately to the audio system.



WIRELESS HEADPHONES

 
The wireless headphones include separate buttons for power and volume control. The headphones automatically turn off after 30 seconds if no sound is present.

For optimum wireless headphone performance, increase the volume on the rear seat controller to the maximum level and adjust the wireless headphone volume using the volume control on the wireless headphone. Using a lower volume setting on the rear seat controller can cause static noise in the wireless headphone.

The wireless headphone audio signal originates from the rear audio controls. This signal needs an unobstructed path to the headphones to maintain performance.

REMOTE CONTROL

- 01** Power Button
- 02** Stop Button
- 03** Next Track/Chapter and Previous Track/Chapter Button
- 04** Title Button
- 05** Enter Button
- 06** Display Button
- 07** Mode Button
- 08** Subtitle Button
- 09** Audio Button
- 10** Angle Button
- 11** Clear Button
- 12** Pause Button
- 13** Play Button
- 14** Fast Forward/Fast Reverse Button
- 15** Menu Button
- 16** Navigation Keys
- 17** Back Button
- 18** Numeric Keypad

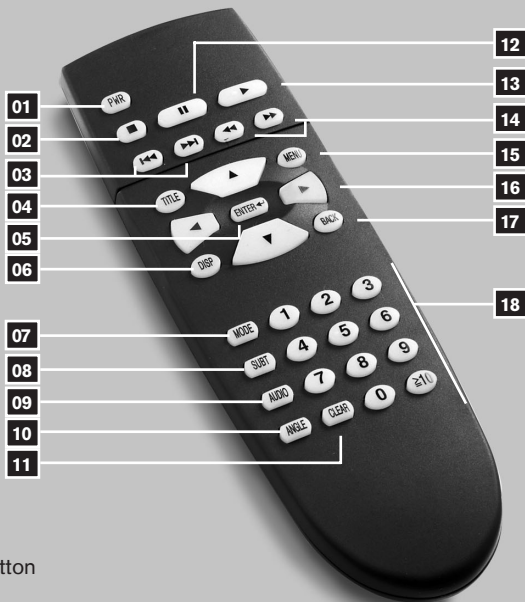

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without obligation.



DV1E 0ALLU0

Download from Www.Somanuals.com. All Manuals Search And Download.

Nissan, the Nissan Brand Symbol, "SHIFT_" tagline, Z and Nissan model names are Nissan trademarks.

©2010 Nissan North America, Inc.

May 2010 (11)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>