

Nortech Media™

 
Operation Manual

TWIN 7" portable DVD players

Model no. E-DVKIT006



Important Safety Instructions

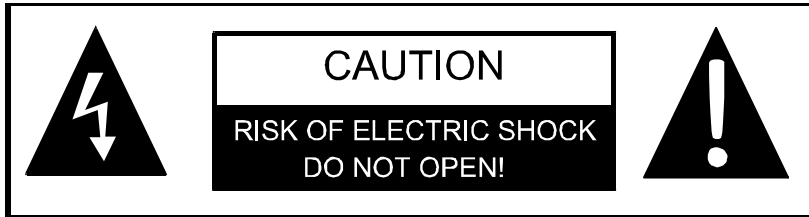

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OF MOISTURE.



CAUTION: Laser radiation when open. Do not stare into beam.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

POWER SUPPLY:


Connect the supplied adapter to the side of the DVD player in the slot marked "Power In". Plug the two-prong end of the power cord to an AC100-120V outlet. If you have difficulty inserting the plug, turn it over and reinsert it, if the unit will not be used for a long time, disconnect the plug from the outlet.

NOTE:

Before plugging the power cord into an AC outlet, make sure that all the connections have been made.

Important Safety Instructions

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to service manual for servicing instructions.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Maintain well ventilated conditions around the product. Do not put product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Note: Do not touch the color TFT LCD screen by hand directly.

Important Safety Instructions

Copyright Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT

2. DANGER: Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

3. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel.

Region code information

DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, this product cannot play the disc. The region code of this unit is 1.

PROMPTS FOR USERS

- ◆ **These units should never be used by the vehicle's driver or left unsecured in the vehicle while driving.**
- ◆ **If these units are being used in your vehicle, be sure that they are secured or held safely and that they do not obstruct any safety device including air bags or seat belts.**
- ◆ **All passengers should wear seat belts when using these units in a moving vehicle.**
- ◆ **If in doubt, please contact your vehicle manufacturer for further advice.**

High-quality audio and video

Excellent sound: Dolby Decoder delivers great sound.

AV In: External Audio, Video input can be connected to most external AV sources.

AV Out: Analog Audio output and video output.

Advanced Playing Functions

Compatibility: Compatible with DVD, CD and JPEG.

On-screen Display: You are supplied different On-screen Display languages.

Particular Performance: Multi-speed, fast forward, fast backward and slow forward.










Search by Time: Search for a certain track of a disk by selected time.

Last Memory Playback: Memorizes the stopped playback track and continues playing the disk from this spot when the power is kept to supply. (Only available for DVD and CD disc).

Special Functions: Supports screen aspect ratio changing, screen saver, multi-languages subtitle, multi-angles, zooming in or out pictures etc. functions.

Accessories

Accessories List

| ITEM | NAME | QTY |
|---|---|-----|
|  | Remote Control | 2 |
|  | Cell for Remote Control | 2 |
|  | Power Adapter | 2 |
|  | Car Adapter | 1 |
|  | Strap | 4 |
|  | Audio/Video Cable (To connect one player with TV, Amplifier, and External AV source.) | 1 |
|  | Audio/Video Cable (To connect two players) | 1 |
|  | Owner's Manual | 1 |
|  | Earphone | 2 |

NOTE

Accessories and their parts numbers are subject to modification without prior notice due to improvements.

Contents

| | |
|-------------------------------|----|
| Important Safety Instructions | 1 |
| Features | 4 |
| Accessories | 5 |
| Contents | 6 |
| View of Front Panel | 7 |
| View of Side Panels | 9 |
| View of Main Unit Bottom | 11 |
| View of Remote Control | 12 |
| Preparation and Using of RC. | 14 |
| System Connections | 15 |
| Power Supply Preparation | 18 |
| Notes on Discs | 19 |
| Playback Operation | 20 |
| DVD Playback | 21 |
| CD Playback | 25 |
| JPEG Playback | 27 |
| System Setup | 29 |
| Use of Straps | 33 |
| Definitions | 35 |
| Troubleshooting | 36 |
| Specifications | 38 |

View of Front Panel



- 1. +/- button**
Press to adjust the value of brightness and color.
- 2. AUDIO/ FUNC button**
Press AUDIO button to select different languages when a DVD disc which contains multiple audio languages is played. Press AUDIO button to select different audio track when a CD disc is played.
Press the FUNC button to change the brightness and color level. Press FUNC button and hold for 1-2 seconds to change the aspect ratio between 16:9 and 4:3.
- 3. SLOW/ A-B Repeat button**
Press SLOW button to activate the slow playback function.
Press A-B Repeat button to play a certain selected segment repeatedly.
- 4. TITLE/ SETUP button**
Press TITLE button to access to or exit from the title menu if it exists in the disc.
Press SETUP button to enter the player's system setup.

View of Front Panel



5. MENU/ SOURCE button

Press MENU button to access to or exit from the menu.

Press SOURCE button to shift between AV MODE and DVD mode.

6. ■ / ►|| button

Press ■ to stop playback. Then press the ►|| button to resume playback from the stopped spot. Press ■ button twice to stop playback completely.

Press ►|| once to pause the playback and press it again to resume the playback.

7. Remote Control Sensor

Receive the signal from the remote control for operation.

8. ►► ◀◀ ◀◀ button

Press ►► button to select different options or to search forward fast.

Press ◀◀ button to select different options or to search backward fast.

Press ◀◀ button to select different options or to return to the previous list, track or chapter.

Press ►► button to select different options or to skip to the next list, track or chapter.

9. ENT button

Press to access playback or confirm your selection.

10. Speaker

11. LCD Screen

View of Side Panels

Right Side View



- 1. Volume Control**
Adjust the volume of the headphone and speaker.
- 2. Headphone Jack**
Connect headphones for private listening. When the headphones are connected to this jack, the speaker will be turned off automatically.
- 3. Audio input/output Jack**
For connecting an external amplifier or audio source.
- 4. Video input/output Jack**
For connecting an external monitor / video source.
- 5. DC 9.5V Input Jack**
For connecting Power supply / Car Adapter.
- 6. OPEN Switch**
Push to open the disc tray cover.
- 7. Disc tray cover**
When the disc is loaded gently, press the cover to close it.

 
View of Side Panels

Left Side View




- 1. Headphone Jack**
Connect headphones for private listening. When the headphones are connected to this jack, the speaker will be turned off automatically.
- 2. Power Switch**
Turn the power on or off.

View of Main Unit Bottom

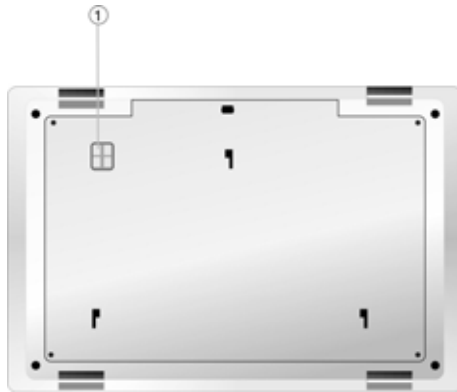

1. Rechargeable Battery Contacts

 
For connecting the rechargeable battery pack. You can use the AC adapter to charge the battery as shown below.

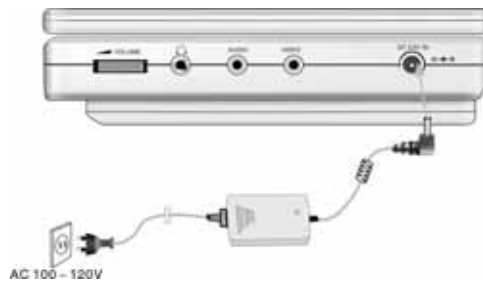

Note:

- **This unit comes without rechargeable battery. Please buy corresponding rechargeable battery separately.**
- Before charging, make sure that the power switch on the left side of the unit is switched off.
- When charging the battery pack, the charge light at the pack side will turn red. When the charging is complete, the light will turn green.

 View of Remote Control

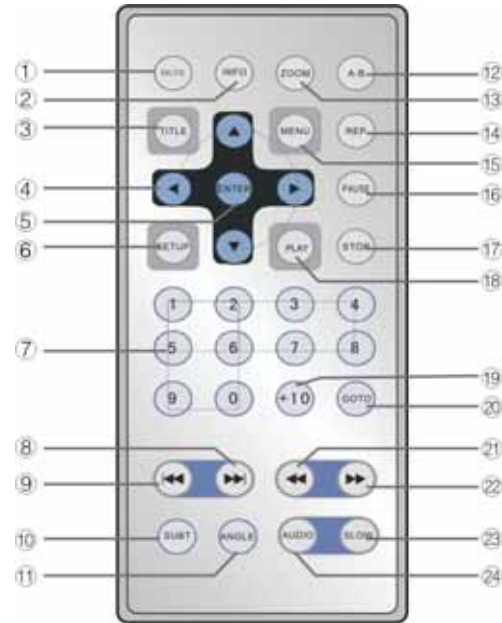


1. **MUTE button**
Press to turn off or on the speaker output.
2. **INFO button**
Press repeatedly to display or conceal the detailed information of the disc during playback.
3. **TITLE button**
Press to access to or exit from the title menu if it exists in the disc.
4. **Direction button**
Press to select different options.
5. **ENTER button**
Press to access playback or confirm your selection.
6. **SETUP button**
Press to enter the player's setup menu.
7. **0-9 number buttons**
Press to select number.

8. **▶▶ NEXT button**
Press to skip to the next list, track or chapter.
9. **◀◀ PREV button**
Press to return to the previous list, track or chapter.
10. **SUBT button**
When playing a DVD coded with multi-subtitles, press to select a subtitle language or to turn subtitles off.
11. **ANGLE button**
Press to access various camera angles if the DVD disc contains multiple camera angles.
12. **A-B button**
Press to play a section of the disc from point A to point B. Press once to select the starting point A, press again to select the end point B. During A-B repeat playback, press this button to stop the repeat.
13. **ZOOM button**
Press to realize various zoom functions.
14. **REP button**
Press to repeat a chapter, title, and cancel the repeat in sequence.
15. **MENU button**
Press to access to or exit from the menu during playback.
16. **PAUSE button**
Press to pause playback. Press the PLAY button to resume normal playback.
17. **STOP button**
Press to stop playback. Then press the PLAY button to resume playback from the stopped spot. Press this button twice to stop playback completely.
18. **PLAY button**
Press to start playback.
19. **+10 button**
Press this button first and then the additional number buttons as needed to select number greater than 9.
20. **GOTO button**
Press to select the desired title, chapter or playback start time.
21. **◀◀ REV SCAN button**
Press to search backward fast during playback.
22. **▶▶ FWD SCAN button**
Press to search forward fast during playback.
23. **SLOW button**
Press to activate slow playback function.
24. **AUDIO button**
Press to select different languages when a DVD disc with multiple audio languages is played. Press to select different audio track when a CD disc is played.

Installation Steps


Follow the steps below to install the battery.

 1. Pull the battery holder out from the remote control in the direction of the arrow.
2. Load a new battery properly with the (+) side up.
3. Insert the battery holder back into the remote control.

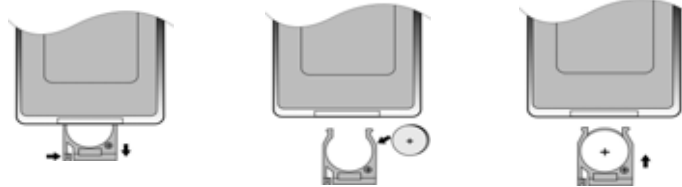

Use of Remote Control

 Point the remote control unit from no more than about 5m from the remote control sensor and within about 60 degrees of the front of the unit.

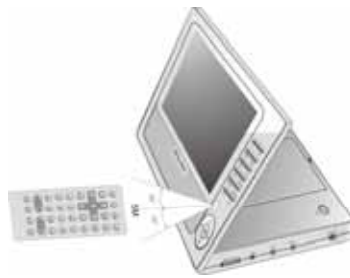

Note

- The battery will last for about 1 year under normal use (at room temperature).
- Improper use of the battery may cause overheating, explosion or ignition, which can result in an injury or a fire. Battery leakage may damage the remote control.
- Do not expose the remote control unit to direct sunlight.
- Do not recharge, disassemble, deform or heat the battery.
- Do not put the battery in fire or water.
- Immediately replace the exhausted battery.
- Take out battery when the remote is not in use for a long time.

 
System Connections

- Always ensure that the DVD player, TV and any other electrical equipment to be connected with are switched off and unplugged from the power supply.
- Ensure that you observe the color coding when connecting audio and video cables.

Connecting to TV


Audio/Video connections

Follow the drawings below to connect the DVD player to TV's Audio/Video inputs with Audio/Video cables.

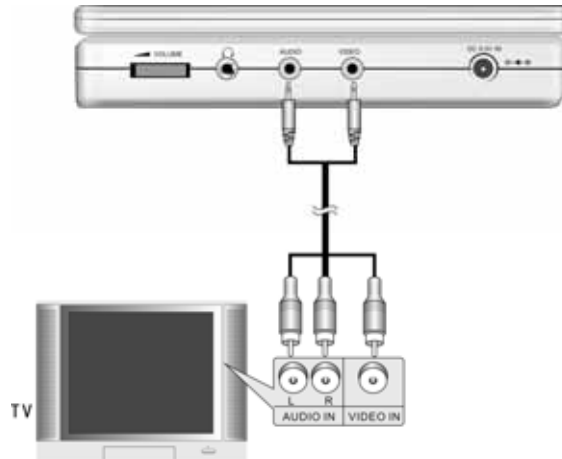

Connecting to Amplifier

 Refer to your Audio equipment's manual before connection.
Follow the drawings below to connect the DVD player to AV amplifier.

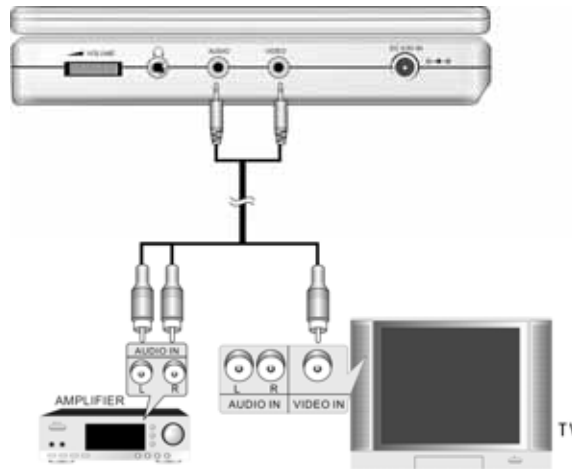

Connecting to Headphones

Connect the headphones to the right side of the player for private listening.



NOTE:

 
- Excessive loud volume could damage your hearing.
- Turn down the volume before you connect the headphones, and then tune the volume up to comfortable level.
- When headphone is connected, the speakers will automatically turn off.

System Connections

Connecting to External AV Source

The unit supports AV signal input function. Please use the audio/video cable to connect the unit to the external AV signal source such as a DVD, VCR etc. after connecting, press SOURCE button on the front panel to select AV mode.


Note: Noise may occur in speakers when there is an external audio signal input while playing a DVD disc. Unplug the audio cable to clear the noise.

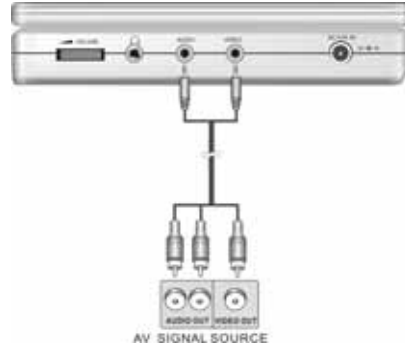

Connecting to DVD Player

Audio/Video connections

 Follow the drawings below to connect a DVD player to another same unit by using the audio/video cable that is the same as the figure below. If one of the DVD players is playing, you can enjoy simultaneously at another unit.

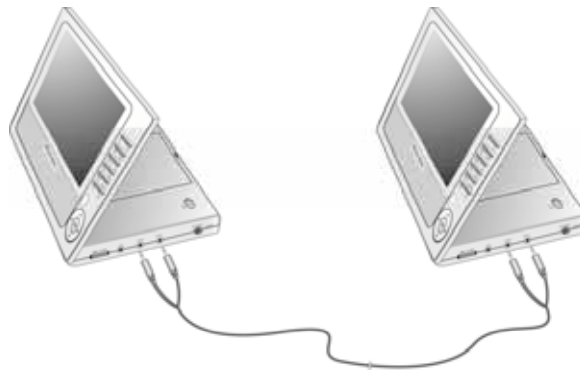

Using the AC Adapter

The player is supplied with an AC adapter for powering the unit and charging the battery.

1. Connect AC adapter to the right side of the DVD player in the jack marked DC 9.5V IN, as shown on the right.
2. Plug the other end of the power cord into the wall AC outlet.



NOTE: Turn player's power off before unplugging.

Using of Car Adapter

The player is supplied with a Car Adapter for powering two units while in a vehicle.

Connect the Car Adapter Power Plug to the units' power jacks and plug the other end to the vehicle's cigarette socket. As shown on the right.





Attention

- Do not operate the units or view video software while driving a vehicle.
- Place the units in a proper position for viewing.
- Disconnect the players from the Car Adapter when starting the vehicle.

Notes on Discs

Compatible Disc Formats

| COMPATIBLE FORMAT | DISC LOGO | DIAMETER | PLAYBACK TIME/ PLAYABLE SIDES |
|-------------------|---|----------|----------------------------------|
| DVD |  | 12cm | 133 min (SS-SL) |
| | | | 242 min (SS-DL) |
| | | | 266 min (DS-SL) |
| | | | 484 min (DS-DL) |
| | | 8cm | 41 min (SS-SL) |
| | | | 75 min (SS-DL) |
| CD |  | 12cm | 74 min |
| | | 8cm | 20 min |
| JPEG | | 12cm | |

Operation methods of some DVD discs are specified by the software manufacturer. Please follow the instructions of those discs.

Care of Discs

Holding Discs

Do not touch the playing surfaces when loading or removing discs. Hold the disc as right picture.



Cleaning

Fingerprints or stain on the disc may affect the quality of sound and picture. To clean your discs, use a soft clean cloth to wipe them. If necessary, moisten a soft cloth with diluted neutral detergent to remove heavy dirt or fingerprints.



Do not wipe in a circular direction as the figure in the right middle (concentric scratches on the disc groove tend to cause noise). Gently wipe from the center of the disc to the outer edge as the right figure.



Playback Operation

READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING YOUR DVD PLAYER FOR THE FIRST TIME.

WARNING: Do not play poor-quality discs to avoid damaging the lens.

 

Pre-operation

1. Connect the unit to power supply through the provided AC adaptor.
2. Switch "POWER ON/OFF" to "ON" on the left panel to turn on the DVD player.
3. Press OPEN button on the unit to open the disc tray cover, put a disc in the disc tray with printed side facing up. Close the disc cover. (See below)



4. The player will read the disc automatically.
5. Adjust the volume with the VOLUME control on the right panel to the desired level.
6. To turn the player off, switch the "POWER ON/OFF" on the left panel to "OFF".


Using of General Button

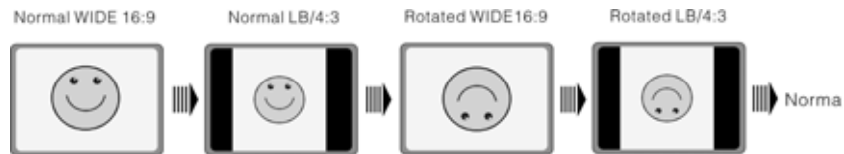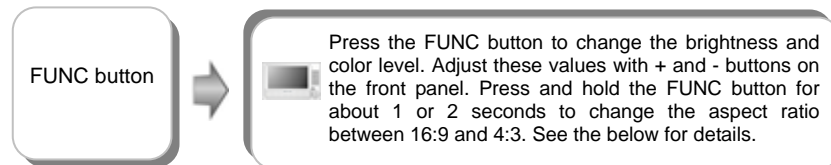


Playback Operation

DVD Playback

 Buttons Operation

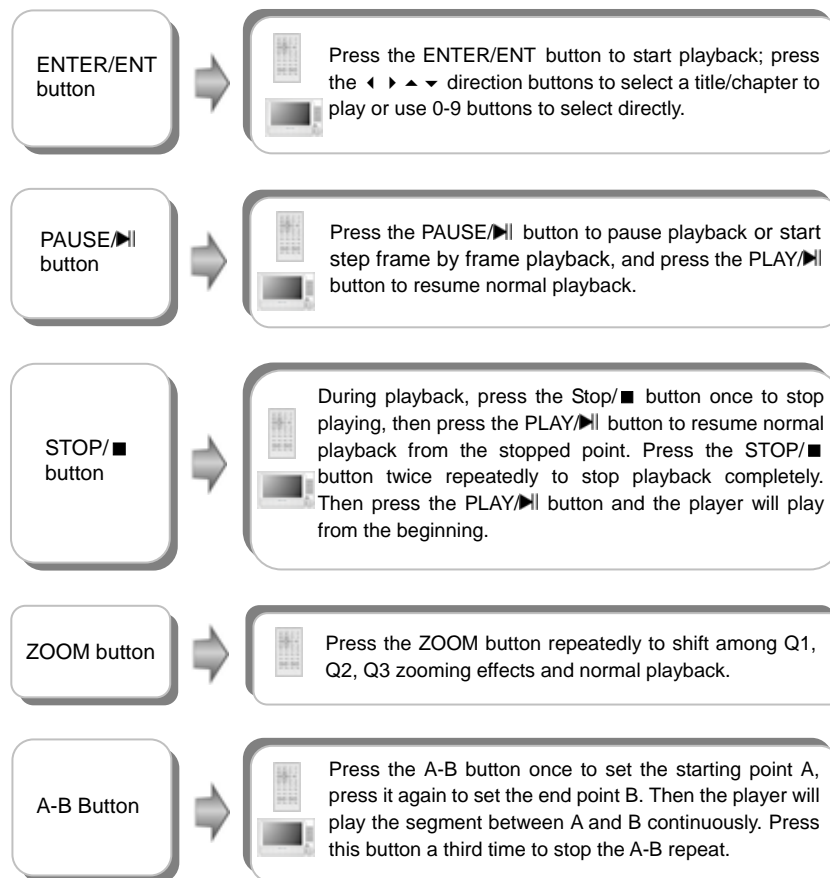


DVD Playback (continued)

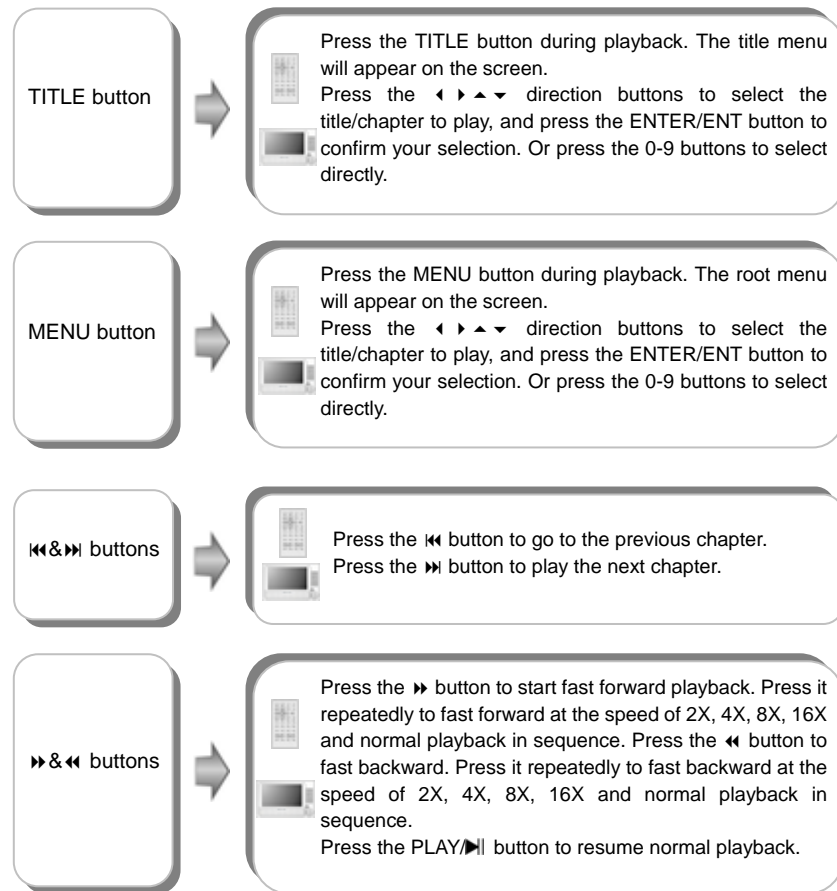 


Playback Operation

 DVD Playback (continued)

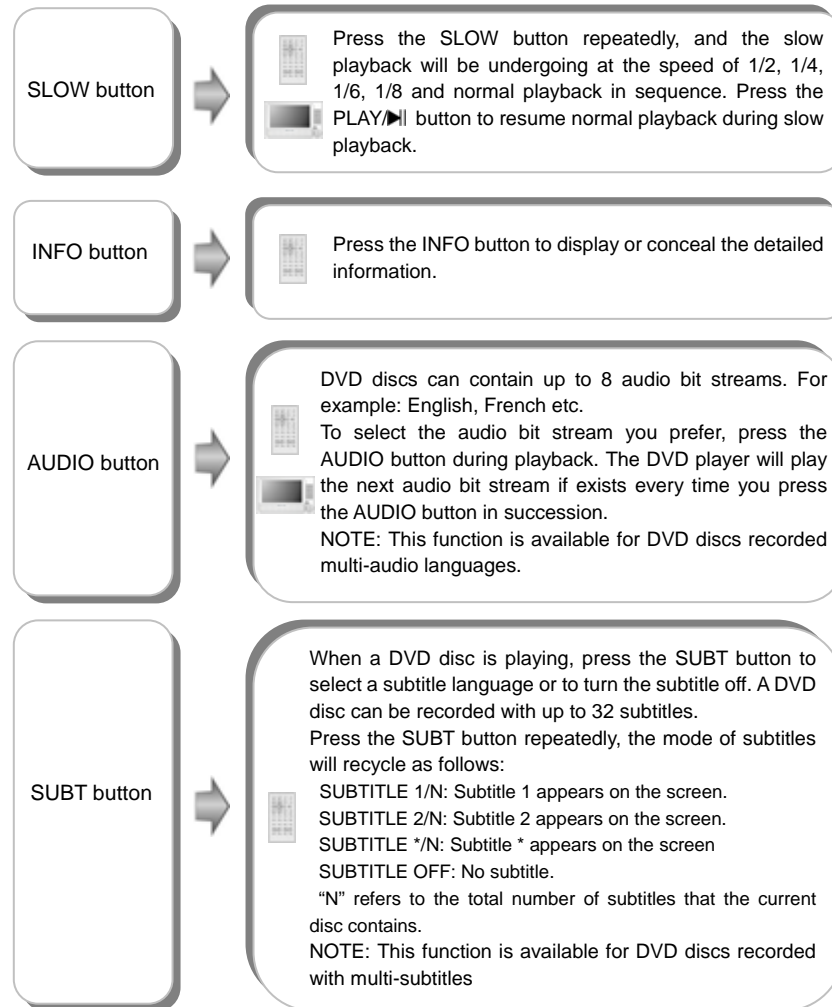

DVD Playback (continued)

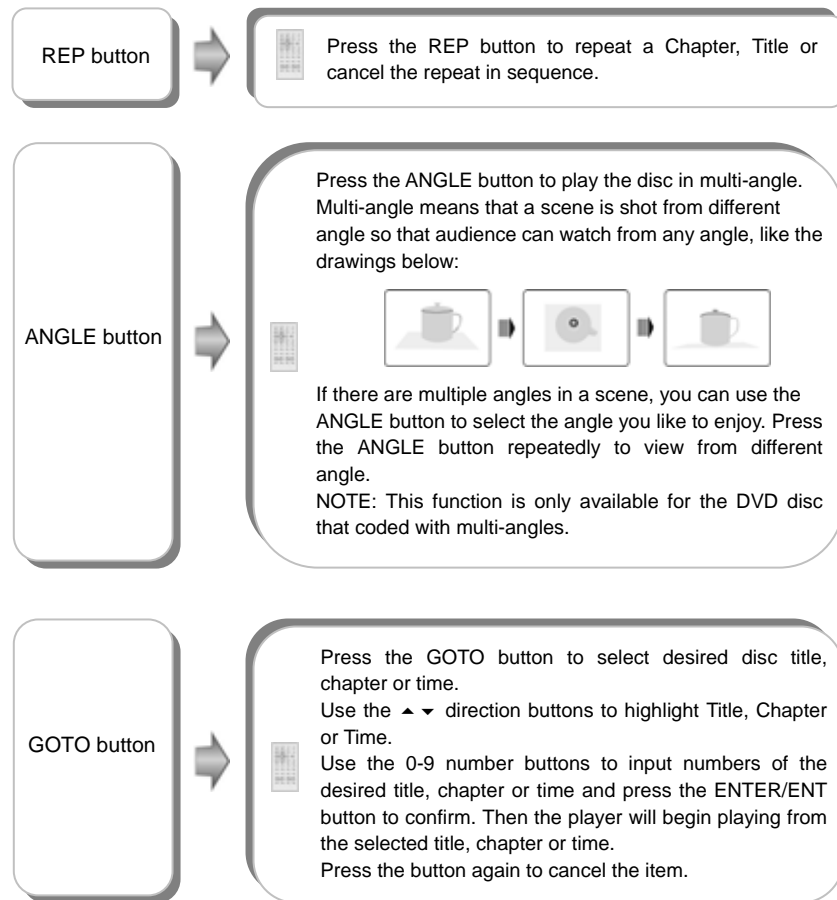 


Playback Operation


CD Playback

When a CD disc is loaded, the player will read the disc. Then a playback menu will appear on the screen and the player will play the disc automatically by the default sequence of the disc. You can use the **⏮** **⏭** buttons to select the desired track. Or press the number buttons to input the number of the desired track first and then press the ENTER/ENT button to confirm to play.

 Buttons Operation

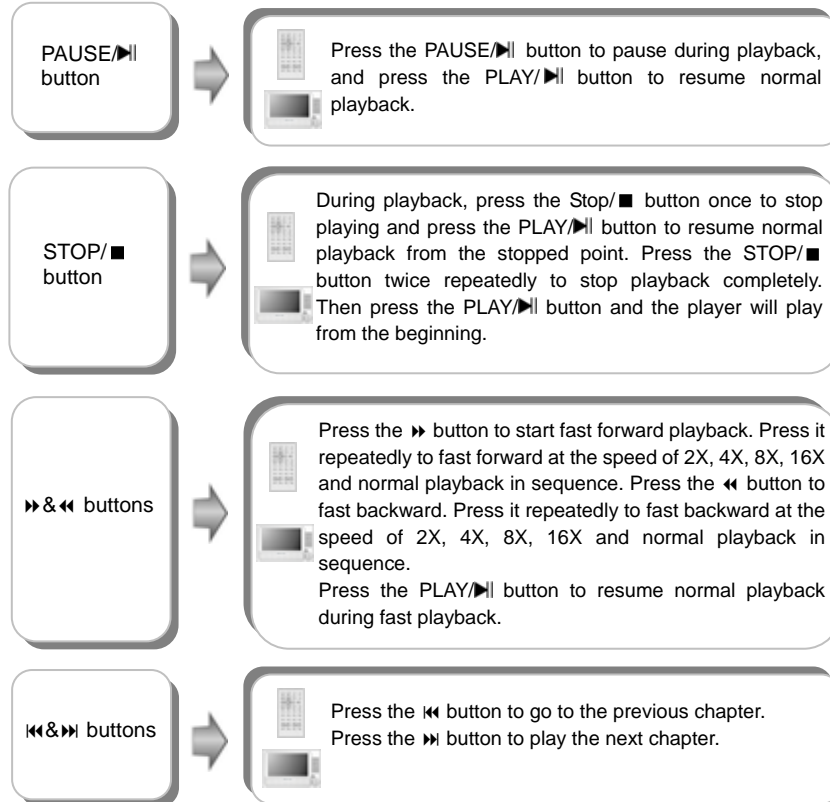


CD Playback (continued)

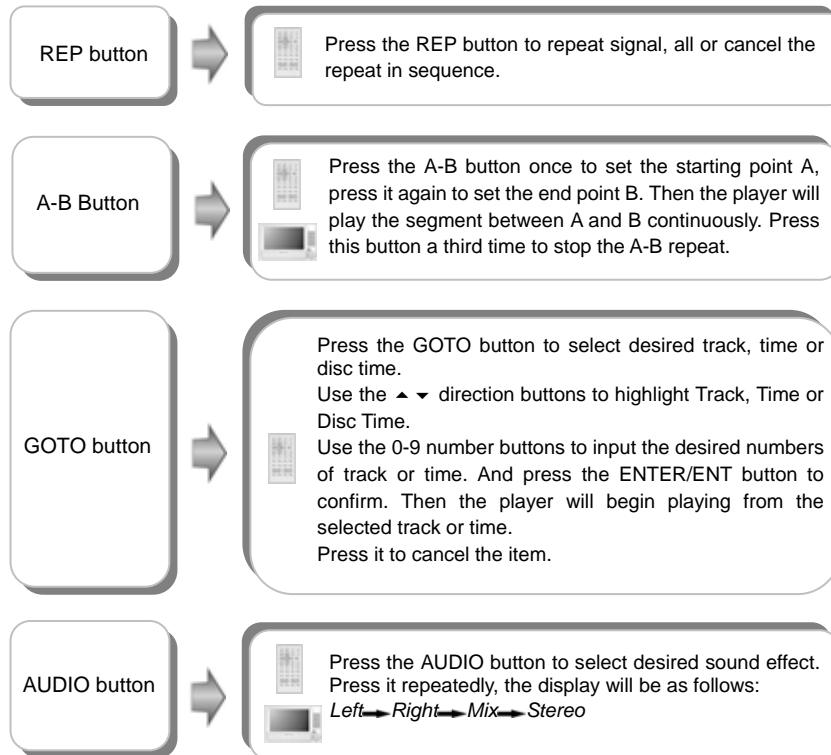 

Playback Operation

JPEG Playback

Pre-operation

1. Load a JPEG in the disc tray, the player will read the disc automatically.
2. The screen displays the root folder with several subdirectories/subfolders. Press the ENTER/ENT button to enter. Use the ▲ ▼ buttons to select a desired folder and press the ENTER/ENT button to confirm your selection.
3. The screen enters the selected subfolder with several pictures. Press the ▲ ▼ buttons to select the desired picture and press the ENTER/ENT button to enter the playback.
4. Press the ▲ ▼ buttons to highlight  .., then press the ENTER/ENT button to return to the last folder or directory.

NOTE: Many discs have other items besides pictures.

 
Filter and Repeat setup

Under the folder mode, press the direction buttons to highlight "Filter" and you can change its settings according to the steps below:


1. Press the ENTER/ENT button to enter the setup menu.
2. Press the ▲ ▼ button to select the item you want to set.
3. Press the ENTER/ENT button to select or cancel.
4. Press the ◀ button to exit.


Under the folder mode, press the direction buttons to highlight "Repeat" and press ENTER/ENT button repeatedly to change its setting. You can also press the REP button on the remote control to change its setting.

Button Operation

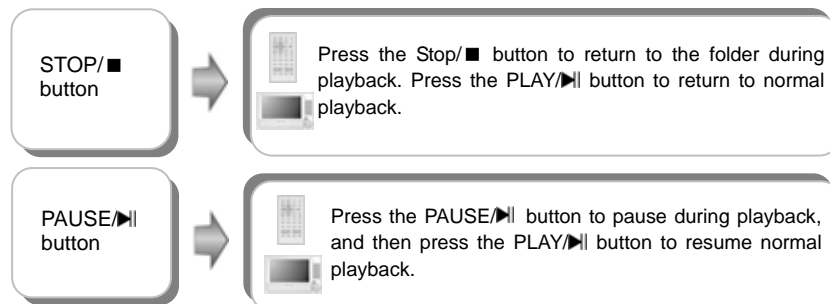


JPEG Playback (continued)

◀◀&▶▶ buttons →  During playback, press the ◀◀ button to go to the previous picture; press the ▶▶ button to go to the next picture.

REP button →  Press the REP button to repeat single, folder or cancel the repeat in sequence.

Picture Rotate

 During browsing a picture, you can use the direction buttons to rotate the current picture.

Press the ▶ button to rotate the current picture 90° clockwise, as shown below:



Press the ▼ button to rotate the current picture 180° clockwise, as shown below:



Press the ◀ button to rotate the current picture 270° clockwise, as shown below:



System Setup

You can change the default settings of this unit to customize its performance to your own preference. Read this section to learn how to set up the system.

Follow the steps below to set up your system:

1. Press the SETUP button and the setup menu will appear on the screen.
2. Press the ▲ ▼ buttons to select a sub-menu that you want to set up and press the ► button to enter the menu.
3. Press the ◀ button to return to the previous menu. Or press the SETUP button again at any time during the setting to exit from the setup menu.

Language setup



Press the SETUP button and press the ▲ ▼ buttons to select Language. The screen will display as shown left.



1. OSD language

This item is used to set the OSD (on-screen display) language.

Press the ▲ ▼ buttons to highlight this item. Press the ENTER/ENT or ► button to enter the setup of this item.

There are several languages for you to choose. Press the ▲ ▼ buttons to choose the proper one. Press the ENTER/ENT button to confirm your selection and return.

Language setup (continued)



 
2. Subtitle

This item is used to set the subtitle language. Press the \blacktriangle \blacktriangledown buttons to highlight this item. Press the ENTER/ENT or \blacktriangleright button to enter the setup of this item. There are several items for you to choose. Press the \blacktriangle \blacktriangledown buttons to choose the proper one. Press the ENTER/ENT button to confirm your selection and return.



3. Audio

This item is used to set the audio output language. Press the \blacktriangle \blacktriangledown buttons to highlight this item. Press the ENTER/ENT or \blacktriangleright button to enter the setup of this item. There are several languages for you to choose. Press the \blacktriangle \blacktriangledown buttons to choose the proper one. Press the ENTER/ENT button to confirm your selection and return.

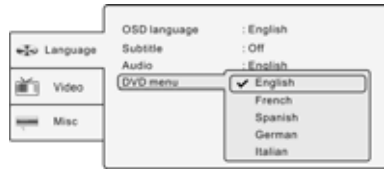

4. DVD menu

 
This item is used to set the disc menu language. Press the \blacktriangle \blacktriangledown buttons to highlight this item. Press the ENTER/ENT or \blacktriangleright button to enter the setup of this item. There are several languages for you to choose. Press the \blacktriangle \blacktriangledown buttons to choose the proper one. Press the ENTER/ENT button to confirm your selection and return.

System Setup

Video setup




Press the SETUP button and press the ▲ ▼ buttons to select Video. The screen will display as shown left.

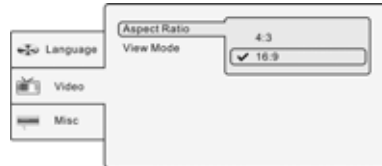

1. Aspect Ratio

 
This item is used to set aspect ratio. Press the ▲ ▼ buttons to highlight this item. Press the ENTER/ENT or ► button to enter the setup of this item. Press the ▲ ▼ buttons to choose 4:3 or 16:9. Press the ENTER/ENT button to confirm your selection and return.
NOTE: Select 4:3 when a 4:3 TV is connected. Select 16:9 when a 16:9 wide screen TV is connected.

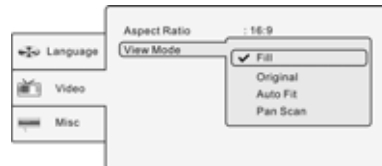


2. View Mode

This item is used to set the video mode of the unit screen display. Press the ▲ ▼ buttons to highlight this item. Press the ENTER/ENT or ► button to enter the setup of this item. There are several items for you to choose. Press the ▲ ▼ buttons to choose the proper one. Press the ENTER/ENT button to confirm your selection and return.

 Misc setup

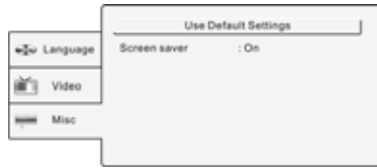

 Press the SETUP button and press the ▲ ▼ buttons to select Misc. The screen will display as shown left.

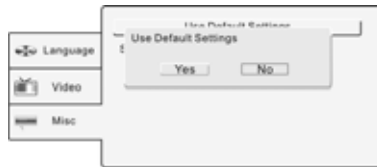

1. Use Default Settings

This item is used to reset the unit to the default. Press the ▲ ▼ buttons to highlight this item. Press the ENTER/ENT button to enter the setup of this item.

Use the ◀ ▶ buttons to choose Yes or No and press the ENTER/ENT button to confirm

Choose Yes, all the setting of the unit will return to the default status; choose No, it will return.



2. Screen saver

 
This item is used to set screen saver On or Off. Press the ▲ ▼ buttons to highlight this item. Press the ENTER/ENT or ▶ button to enter the setup of this item.

Press the ▲ ▼ buttons to choose On or Off. Press the ENTER/ENT button to confirm your selection and return.

Usage of straps

Follow the steps below to fix the DVD Player onto a car seat headrest.


1. Place the DVD player on a soft and smooth surface with the bottom facing up.
2. Loosen the strap and remove the buckle from the strap.
3. Insert the strap through the holes as the Fig.1. Make sure the inside of the strap faces up.
4. Thread the strap into the buckle as Fig.2 and Fig.3. After threading, make sure the outside of the buckle faces up.

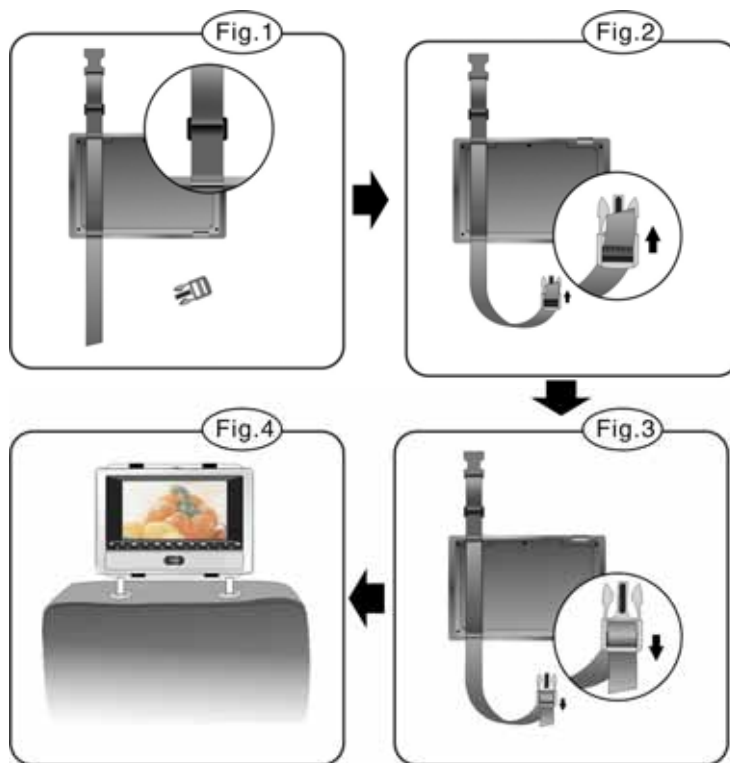

Usage of straps

5. Repeat these steps for the other strap.
6. Adjust the length of the strap according to the backrest of the seat.
7. Fasten the straps on the headrest of the seat as in Fig.4. Make sure the two straps are between the headrest support rods (if your car has them).

 NOTE: The drawings show the outside and the inside of the buckle and the strap.

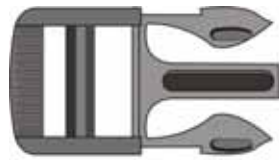

Outside



Inside



Outside



Inside

Definitions

Letterbox screen

This refers to a screen on which the playback picture of wide-screen DVDs appears with black bands running along the top and bottom.

Pan & Scan screen

This refers to a screen on which the playback picture of wide-screen DVDs is cut off at the left and right sides.

Title, Chapter (DVD)

DVDs are divided into some large sections (titles) or some small sections (chapters). Each section is numbered: these numbers are called "Title number" or "Chapter number".

| | |
|----------|-----------|
| Title 1 | Title 2 |
| Chapter1 | Chapter 1 |
| Chapter2 | |
| | |

Track (CD)

CDs are divided into some sections (tracks). Each section is numbered; these numbers are called "Track number".

| | | | |
|---------|---------|---------|-------|
| Track 1 | Track 2 | Track 3 | |
|---------|---------|---------|-------|

JPEG

JPEG is a common picture format that has small file size and low quality loss rate of picture. Hundreds of pictures can be stored in a disc in this format. In order to utilize real digital album, use film to make a "PICTURE CD" in JPEG format.



Troubleshooting

Take steps described in the tables below to solve simple problems before contacting after-sales service.

If You Suspect Something Wrong, immediately turn the power off. Disconnect the power connector and check that there is neither smoke nor heat from the unit before asking for repairs. Never try to repair the unit by yourself because it is dangerous to do so.

| PROBLEM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|-------------------------|--|--|
| The player cannot play. | The disc cover may not be closed. | Close the disc cover. |
| | There may not be any discs in the DVD drive. | Put a disc in to the DVD drive. |
| | The disc may not be put in with the right way. | Put the disc in with the label side up. |
| | The disc may be dirty or warped. | Clean or change the disc. |
| | The player's region code may not as the same as the region code of DVD disc. | Make sure the player's region code is the same as the region code of DVD disc. |
| | There may be water on the lens. | Remove the disc and keep the player being powered off for at least two hours. |
| There is no sound | The system connection may be not correct. | Connect the system correctly. |
| | The speaker may not be turned on. | Turn on the speaker. |
| | The sound setup of the DVD disc may be not correct. | Setup the sound of the DVD correctly. |
| | The disc may be dirty or warped. | Clean or change the disc. |

Troubleshooting

| PROBLEM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|----------------------------------|---|---|
| There is no picture. | The LCD may be off or not be in correct video mode. | Turn on the LCD and choose the correct video mode. |
| | The system connection may be not correct. | Connect the system correctly. |
| | The unit may be not in AV out mode. | Switch AV tab on the bottom of the unit to out. |
| Poor AV performance. | The disc may be dirty or warped. | Clean or change the disc. |
| The remote control does not work | There may be some obstructions between the remote control and the player. | Remove the obstruction between the remote control and the player. |
| | The remote control may not be pointed at the player. | Point the remote control at the player directly. |
| | The batteries of remote control may not be inserted correctly. | Make sure the polarity of each battery is correct. |
| | The batteries of remote control may be out of power or weak. | Replace the batteries. |

Other possibilities:

Static or other external interference may cause the player function abnormally. In order to recover normal status, unplug the power-supply cord and then plug it into the outlet again to reset the player. If the problems still exist, cut off the power supply and consult your service center or the qualified technician.

Specifications

| | | |
|----------------------------|----------------------------|--|
| TFT screen size | 7 inches | |
| Laser Wavelength | 780/650 nm | |
| Video System | NTSC | |
| Frequency Response | 20Hz ~ 20kHz ± 2.5dB | |
| Audio Signal-to-noise Rate | 90dB | |
| Audio distortion+noise | - 70dB (1kHz) | |
| Channel Separation | 70dB (1kHz) | |
| Dynamic Range | 80dB (1kHz) | |
| Audio Out | Analog Audio Out | Output Level: 1.5 Vpp ±0.2V into 10K Ohm |
| Video Out | Video Out | 1 Vpp ±0.2V into 75 Ohm |
| Power | AC 120V | |
| Power Consumption | < 25W | |
| Dimensions | 230mmX154mmX39.5mm (L*W*D) | |
| Weight | About 0.9kg | |

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Manufactured under license from Dolby Laboratories.
 "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
 Confidential unpublished works. © 1992 -1997 Dolby Laboratories, Inc.
 All rights reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>