

































Feature operation

































AutoDial			
Store	AutoDial		▶ AutoDial
Use		AutoDial	
Display	Display	AutoDial	
Call Forward			
Activate	Fwd		▶ Fwd
Deactivate	▶ Fwd		
Reinstate	Fwd	▶ Fwd	
View number	Display	▶ Fwd	
Call Pickup			
		Pickup	
Call Waiting			
Answer		▶ CWT	
	(Hold)		
Return to first call			
Conference			
	Conf		▶ Conf
Handsfree			
Activate			
Switch to handset			
Handset to handsfree			
Hold		Off Hold	
Place a call on hold		Take a call off hold	
	(Hold)		
Last Number Redial			
			
Message			
			
Ring Again			
Activate	RingAgn		
When notified		▶ RngAgn	
Deactivate	▶ RngAgn		
Transfer			
	Trans		▶ Trans

Icon legend

	Lift the handset.
	Replace the handset, or press  to end the call.
	A lock on the display indicates an encrypted call.
	Dial a number using the dialpad.

	Press the Line (DN) key.
▶ AutoDial	The ▶ flashes when a feature is being programmed. The ▶ is steady when a feature is active.
	Press the Services key.
	Press the Message key.
	Press the Navigation keys.
	Press the Handsfree key.
	Press the Mute key to toggle on or off.
	Press the Directory key.

Services and telephone options menu

Services menu				
		Select		
(Services)				
Telephone Options menu				
Volume adjustment				
Ringer	Select		Select Cancel	
Handset listen	Select		Select Cancel	
Handsfree listen	Select		Select Cancel	
Headset listen	Select		Select Cancel	
Buzzer	Select		Select Cancel	
Contrast adjustment				
	Select		Select Cancel	
Language				
	Select		Select Cancel	
Date/Time				
	Select		Select Cancel	
Local dialpad tone				
	Select		Select Cancel	
Ring type				
	Select		Select Play Cancel	
On-hook default path				
	Select		Select Cancel	
Live dialpad				
	Select	Turn on or off	Select Cancel	

For additional information about your IP Phone 2002, see the *Nortel IP Phone 2002 User Guide* (NN43116-104).

Nortel IP Phone 2002

IP Phone 2002

For Nortel Communication Server 1000

Quick Reference Card



To provide feedback or report a problem in this document, go to www.nortel.com/documentfeedback.

Date: May 2007
 Document Release: Standard 01.01
 Document Number: NN43116-103
 Copyright © 2007 Nortel Networks
 All rights reserved.

* Nortel, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>