

PEANUT BUTTER MAKER™

Model # PBM-200



FOR HOUSEHOLD USE ONLY

Read These Instructions Before Using This Unit!

Save These Instructions!

IMPORTANT PRECAUTIONS

Appliance Specifications:

120 Volts
60 Hz
750 Watts
ETL Approved

Important Precautions to Remember:

- A. NEVER immerse the electrical base, plugs or cord in water.
- B. NEVER leave unit unattended if used near children.
- C. NEVER use a scouring pad on appliance.
- D. NEVER use an abrasive sponge or harsh cleaning products on appliance
- E. NEVER use for anything other than what this item was intended.
- F. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions, is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or send back to company as stated in this booklet in the warranty.
- G. DO NOT place the appliance in dishwasher.
- H. Keep out of the reach of children.
- I. Unplug the appliance from the electrical outlet when not in use and before cleaning.
- J. DO NOT put fingers or anything other than nuts in this appliance
- K. This appliance is NOT A TOY.
- L. This appliance is not intended for use by young children or infirm persons without supervision.
- M. Young children should be supervised to ensure that they do not play with this appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS before operating this appliance.

- **Do not use outdoors, FOR HOUSEHOLD USE ONLY.**
- The cord to this appliance should be plugged into a 120V AC electrical outlet only.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow the unit to cool down before cleaning or storing.
- The use of accessory attachments is not recommended by the appliance manufacturer as this may cause injuries.
- A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
- **WARNING: DO NOT attempt to disassemble the motor of this unit. Electrical shock or fire may result.**

IMPORTANT SAFEGUARDS (Continued)

- Do not use this appliance for other than intended use.
- The cord should be arranged so that it will not drape over the table or counter top in such a way where it can be pulled on by children. This should also reduce the risk of becoming entangled or tripping.
- Always place the control knob to "OFF" before plugging into and removing plug from the electrical outlet.
- Do not place appliance near a hot gas or electric burner, or in a heated oven.
- Do not place anything on top of the appliance while it is operating


INTRODUCTION AND FEATURES

Thank you for purchasing The PEANUT BUTTER MAKER™. This novel appliance will soon become an invaluable asset to your food preparation and a real treat to have in your kitchen! Its primary function is to turn nuts into SMOOTH, CREAMY nut butter or CHUNKY nut butter.

FEATURES

The features and parts included with your PEANUT BUTTER MAKER™ are as follows:

- A) Nut deflector cap
- B) Nut butter cup and lid
- C) Adjustable smooth to chunky texture control knob
- D) On/off switch
- E) Clear nut bin with turning channel tool

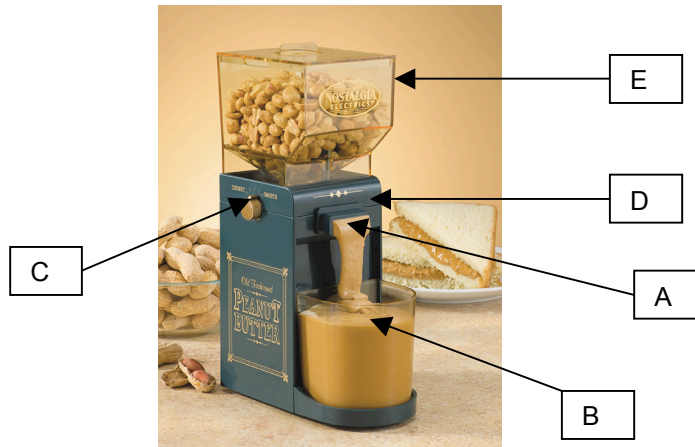

HOW TO USE YOUR PEANUT BUTTER MAKER™

FIVE EASY STEPS!

1. Plug into an electrical outlet.
2. Fill the Nut bin with pre-shelled peanuts or any other shelled nuts. **PLEASE NOTE THIS MEANS TO ONLY USE NUTS WITHOUT SHELLS OR AFTER REMOVING SHELLS.**
3. Select the texture you want by adjusting the TEXTURE CONTROL KNOB.
4. Turn the POWER SWITCH to ON.
5. While nut butter collects in the NUT BUTTER CUP, turn the CHANNELTOOL to guide the nuts into the grinding area.

IT IS THAT EASY!

NOTE: ALWAYS WAIT 15 MINUTES BETWEEN EACH BATCH OF NUT BUTTER AS UNIT NEEDS TO COOL. ALSO, IF NUTS ARE TOO LARGE, PUT IN PAPER OR PLASTIC BAG, AND BREAK THE NUTS INTO SMALLER PIECES BEFORE PUTTING INTO NUT BIN.

BE CREATIVE...

TRY YOUR FAVORITE NUTS SUCH AS:

PEANUTS
CASHEWS
SUNFLOWER SEEDS
MACADAMIA
BRAZILIAN
PISTACHIO'S
ALMONDS
And more.....

Use with foods such as:

- Pancakes
- Ice Cream
- Thai chicken

RECIPES

CHOCOLATE GOOEY AND PB CHEWY

Directions: Put TEXTURE SLECTOR SWITCH on chunky (unless you like smooth). Allow your favorite nut butter to bill NUT CUP about ½ inch. Then put ½ inch of chocolate fudge topping over NUT Butter. Repeat until CUP is filled.

Spread on your favorite bread or roll into balls and freeze and then enjoy.

You can also substitute the fudge with JELLY, MARSHMALLOWS, CARMEL, etc!

RECIPES (Continued)

CHICKEN WITH PEANUT BUTTER CURRY SAUCE

Ingredients:

2 tablespoons canola oil
 3-4 cloves chopped garlic
 1 cup red and green bell pepper
 1 cup chopped onions
 1 tablespoon curry powder
 1 cup plain yogurt
 4 skinless, boneless chicken breasts cut into 1 inch pieces

Directions: Heat the canola oil in a large skillet over medium heat. Add garlic, onions and bell pepper - cook and stir often until tender.

Stir in curry powder and cook about one minute. Season chicken with salt and pepper, add to skillet. Cook stirring often until just done. Stir in peanut butter and heat through. Add the yogurt and stir to combine well. Cook for 3-5 minutes stirring often until curry is hot. Taste and add salt and pepper if needed.

MICRO PEANUT BUTTER SMORE'S

Ingredients:

Graham Crackers
 Smooth peanut butter
 Milk chocolate candy bars
 Large marshmallows

Directions: Spread peanut butter on graham crackers. Top with a square of chocolate and a marshmallow. Place on paper plate and put in microwave on high power for 10 seconds until marshmallow puffs up. Top with another graham cracker and eat at once.

TROUBLESHOOTING

PROBLEM

SOLUTION

Nuts too big to grind.

Put in brown or plastic bag. Break into smaller pieces.

Unit doesn't turn after first use.

Allow unit to cool for 15 minutes

Nuts grinding but motor is on


Turn the CHANNEL TOOL that moves nuts into grinder cage.

CLEANING, CARE AND MAINTENANCE

- 1) Turn off the machine. Grasp the plug and remove from the wall outlet.
- 2) Remove clear PEANUT BIN from base of unit. Rinse the inside and allow to dry. If needed, use a non abrasive sponge or cloth.
- 3) Remove grinder mechanism attached to the TEXTURE CONTROL KNOB. Rinse in warm sudsy water. If needed use a non abrasive sponge or cloth. Allow to dry.
- 4) Clean NUT CUP after use in warm sudsy water and use non abrasive sponge or cloth. Allow to dry.

PARTS ARE NOT DISHWASHER SAFE. DO NOT PUT IN THE DISHWASHER.

NOTE: To prolong the look of your appliance, never use an abrasive sponge, cloth or cleaning product on the exterior finish.

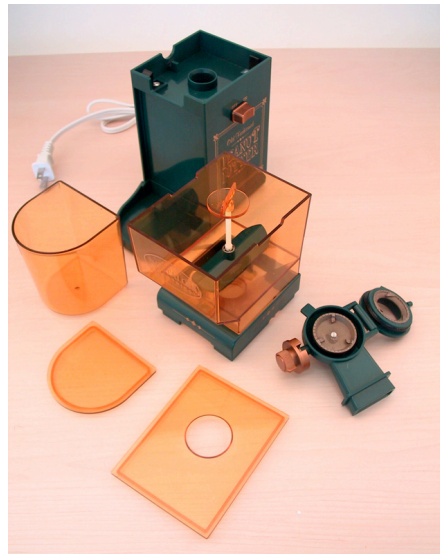

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

PEANUT BUTTER MAKER™

Model # PBM-200
Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to Nostalgia Products Group, LLC at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Visit Us Online at
www.nostalgielectrics.com

©2009 Nostalgia Products Group LLC

Rev. 6/16//09

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>