


**NON-STICK GRIDDLE
WITH WARMING DRAWER™**
NGD-200

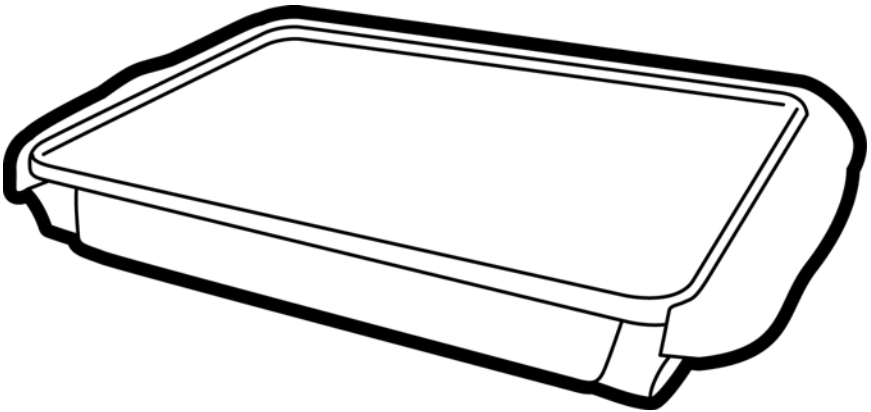

For Household Use Only!

**Read These Instructions Before Using
This Unit!**

SAVE THESE INSTRUCTIONS!

IMPORTANT PRECAUTIONS

Appliance Specifications:

120 Volts
60 HZ
1450 Watts

Important Precautions to Remember:

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER try to force the cover in the locking mechanism.
- G. Unplug unit from outlet when not in use and when cleaning. This unit comes with a detachable cord.
- H. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
- I. Keep out of reach of children.
- J. This appliance is NOT A TOY.
- K. This appliance is not intended for use by young children or infirmed persons without supervision.
- L. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. Read all instructions before operating this appliance.
- 2. DO NOT TOUCH hot surfaces. Use handles or knobs.
- 3. To protect against electrical shock, do not immerse cord, plug or any part of this unit in water or other liquids.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when not in use and before removing parts and before cleaning.
- 6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair or send back to company as stated in this booklet in the warranty.
- 7. The appliance manufacturer does not recommend the use of accessory attachments. This may cause injuries.
- 8. DO NOT use outdoors.
- 9. DO NOT let the cord hang over the edge of table or counter tops, or touch hot surfaces.

IMPORTANT SAFEGUARDS (Continued)


10. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving this appliance.
12. DO NOT use the appliance for other than its intended use.
13. A unit that is plugged into an outlet should not be left unattended.
14. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
15. This unit uses a detachable cord and it is NOT recommended to use an extension cord.
16. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing this NON-STICK GRIDDLE WITH WARMING DRAWER™. This unit is made of die cast aluminum for even heat and coated with a non-stick coating. The handles are heat resistant. It has a drawer to catch fat and grease and another larger drawer to keep foods warm.

The detachable plug has a thermostat on it to select the desired heat setting to cook your foods.

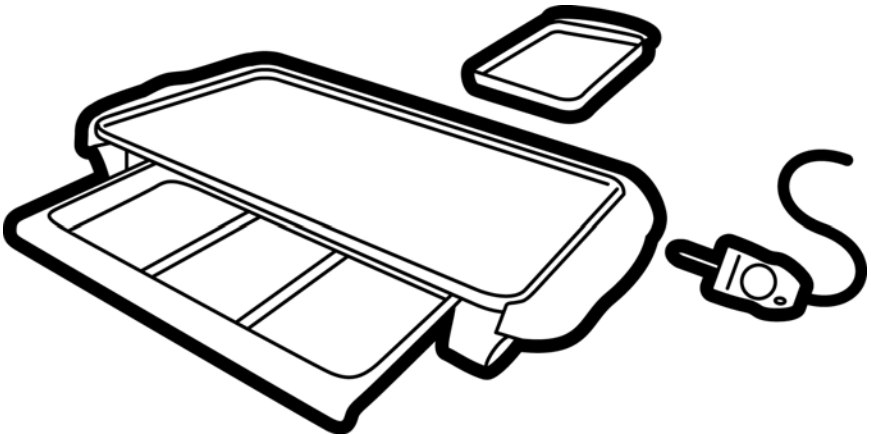

ASSEMBLY and USE

After Taking the Unit Out of the Box:

CAUTION- first make sure you put the griddle on a surface that will not be affected by heat!

1. Before use, clean all parts of the unit with a non-abrasive sponge
2. Always place the unit on a flat, clean, non-slippery surface prior to use
3. Allow about 8 inches of clear space all around the exterior of the unit
4. Place drip pan and warming drawer into base
5. Plug the power cord/temperature control into the griddle first with controls in the UP position, making sure the control is in the OFF position. Plug the power cord into the wall outlet and turn switch to the ON position.
6. Put foods that you want to keep warm in the drawer and slide under warm griddle until ready to serve.

PLEASE NOTE- when first used, there might be a little smoke, which is normal from first application

The following chart will give you suggestions to cook types of food with cooking times and temperature settings:

FOOD	TIME	TEMPERATURE	INSTRUCTION
Bacon	8 – 14 minutes	325 – 350 F	turn food as needed
Sausages	20 – 30 minutes	325 – 350 F	turn food as needed
French Toast	6 – 10 minutes	350 F	flip food as needed
Hamburgers	3 – 14 minutes	350 F	flip pending thickness & doneness
Pancakes	2 – 6 minutes	350 F	pour batter, flip when bubbles appear

You can make grill cheese, eggs, hash browns, pork chops, chicken, steak, and many things. Most meats cook at 400 F.

CLEANING: CAUTION - DO NOT PUT BASE IN DISHWASHER

1. Make sure the unit is unplugged before cleaning.
2. Always allow griddle to cool before cleaning. Never immerse in water
3. Also use a slightly damp, non-abrasive sponge or non-abrasive towel to wipe clean outside of unit, then wipe with a non-abrasive dry towel to dry.
4. Wash drip and warming tray with warm soap. Wipe plastic base with a damp cloth.
5. To prolong the life of your non stick coating- never stack objects other than food on the surface and never use a metal spatula or metal tongs to turn or flip foods.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

NON-STICK GRIDDLE WITH WARMING DRAWER™

NGD-200

Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Visit Us Online at
www.nostalgiaelectrics.com

©2009 Nostalgia Products Group LLC

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>